


INSTRUCTION MANUAL



Model No:
DA7834 (GRAY)

UPC CODE:
0-65857-19196-7 (GRAY)

CHAIR AND A HALF ROCKING RECLINER

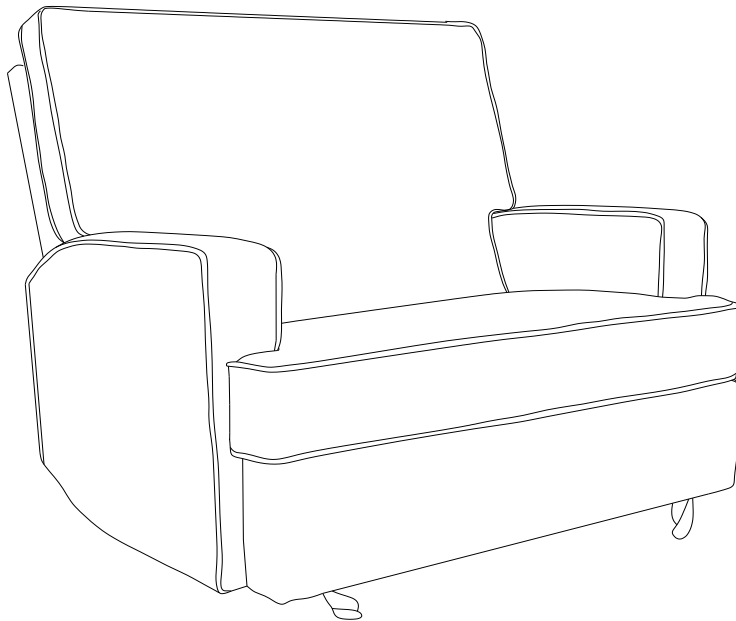

NOTE:
THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ AND
KEEP FOR FUTURE REFERENCE.

Lot number:
(TAKEN FROM CARTON)

Date of purchase:

____ / ____ / ____.

DO NOT RETURN PRODUCT TO THE STORE.
If a part is missing or damaged, contact our customer service
department. We will replace the part
FREE of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com

CUSTOMER SERVICE

You can also contact us by writing to the address listed below. Please include the product model number, color and a detailed description of your enquiry.

Dorel Living - Customer Service Department
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada, H1G 3L1



WARNING

DO NOT leave children unattended on or beside the recliner.

DO NOT use your recliner as a step stool.

DO NOT sit on the edge of the seat, armrests or on the backrest as this could make the recliner tip over.

NOTES

- * Ensure that all parts and components are located before beginning assemble.
- * Assemble on soft surfaces to prevent damage to the product finish.
- * Read all instructions before use of the recliner.
- * **Do not** use the unit if it is damaged or broken.
- * Caution: Adult assembly required.
- * Assembly will require 2 people.
- * Estimated assembly time: 5 minutes.

CARE, CLEANING AND MAINTENANCE

Dust regularly with a soft, dry cloth to prevent soil build-up. Keep away from heat to avoid glazing, melting or scorching. Use a professional cleaning service to clean the fabric.

Check all bolts, screws and fasteners periodically and tighten them if necessary.

1-YEAR LIMITED WARRANTY

Dorel warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase from authorized retailers. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. The warranty does not cover wearing, tearing, fading or splitting of the fabric (where applicable). This warranty gives you specific legal rights and you may also have other rights which vary from State to State or Province to Province.





WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

CHAIR AND A HALF ROCKING RECLINER

DA7834

PARTS LIST
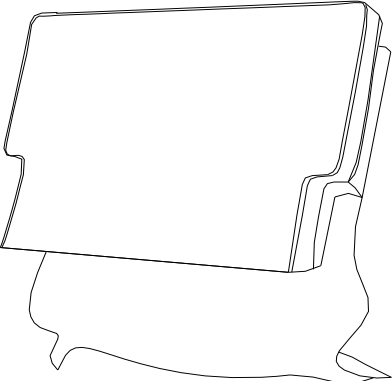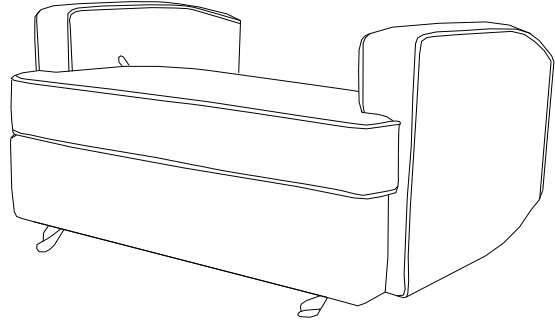
<p data-bbox="89 373 138 430">A</p> 	<p data-bbox="836 373 885 430">B</p> 
<p data-bbox="324 919 544 961">CHAIR BACK</p> <p data-bbox="389 987 479 1029">1 PC</p>	<p data-bbox="1071 919 1307 961">SEAT FRAME</p> <p data-bbox="1144 987 1234 1029">1 PC</p>

CHAIR AND A HALF ROCKING RECLINER


DA7834

STEP 1

Attach the chair back (A) to the seat frame (B) by sliding the brackets on the chair back (A) into the glides on the seat frame (B) as shown below.

Once the back frame has been locked into place, secure the fabric flap into position using the Velcro strips.

NOTE: Both sides must be inserted into the base at the same time. This step is best performed with 2 people.

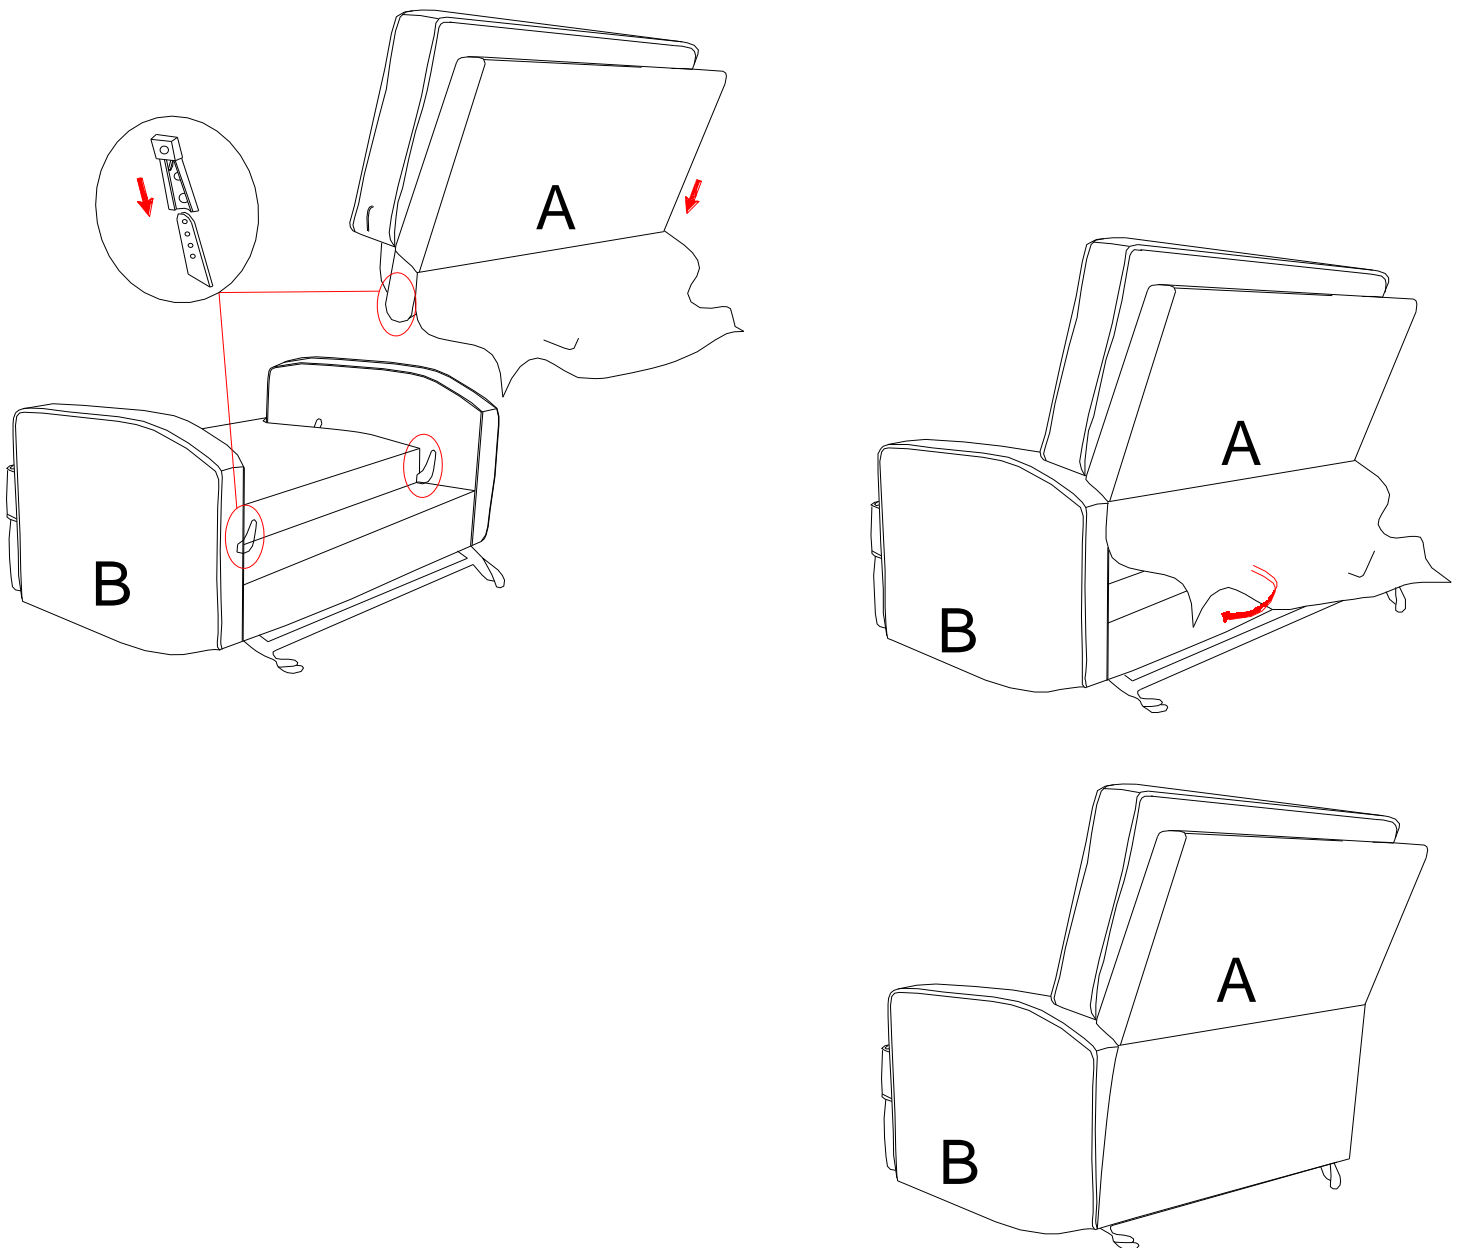





CHAIR AND A HALF ROCKING RECLINER

DA7834

NOTE:


To operate the reclining function, pull down on the handle located on the inside of the seat frame right side.

HANDLE

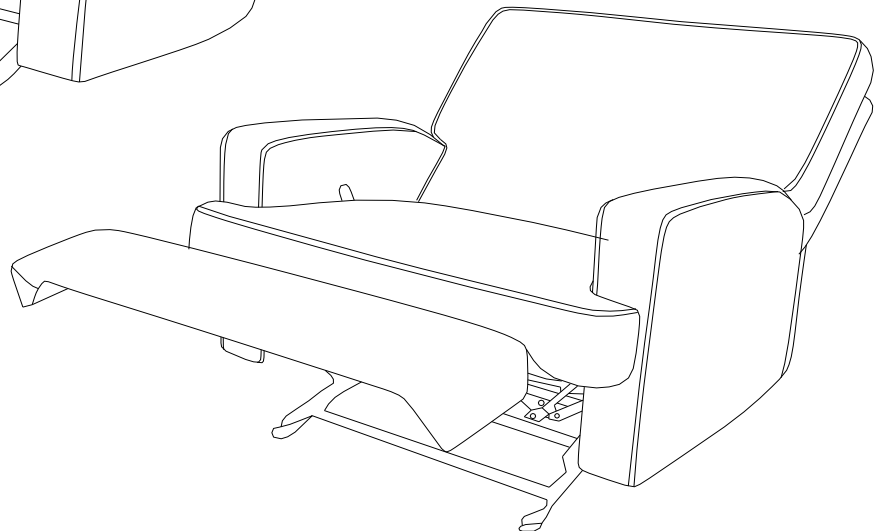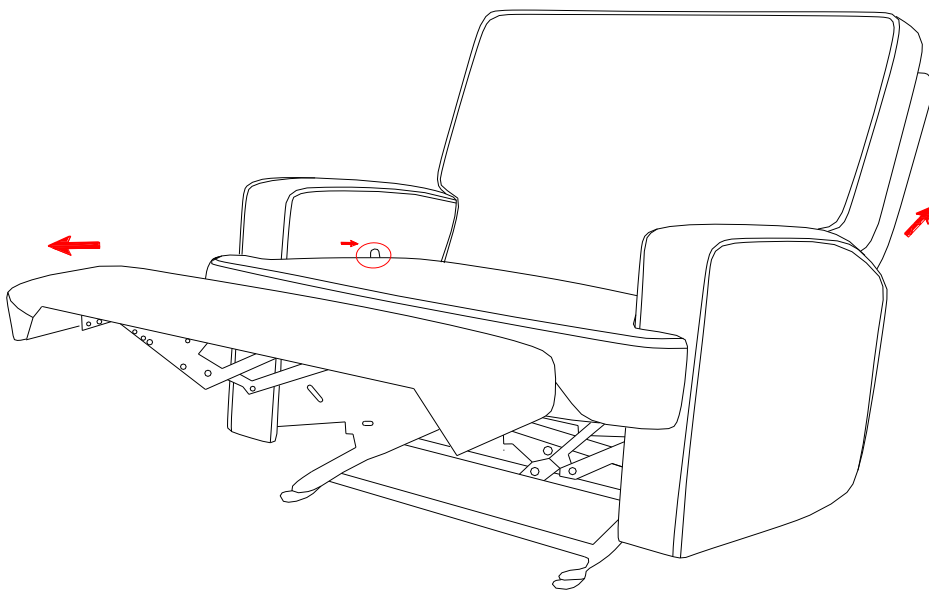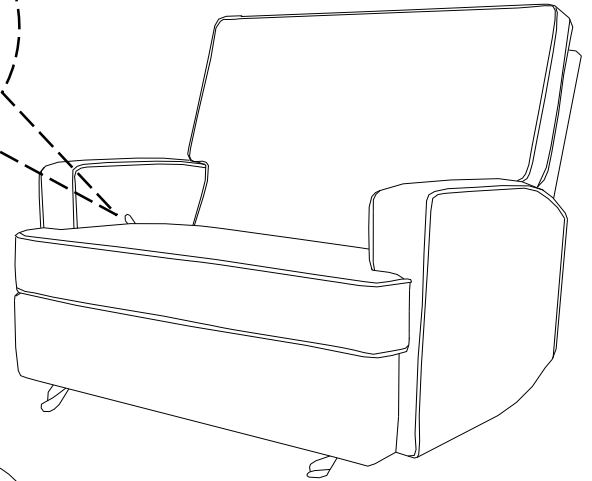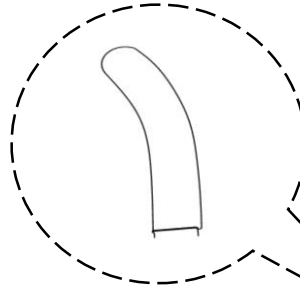


CHAIR AND A HALF ROCKING RECLINER

DA7834

 **CAUTION:** This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

Dust regularly with a soft, dry cloth to prevent soil build-up. Keep away from heat to avoid glazing, melting or scorching. Use a professional cleaning service to clean the fabric.

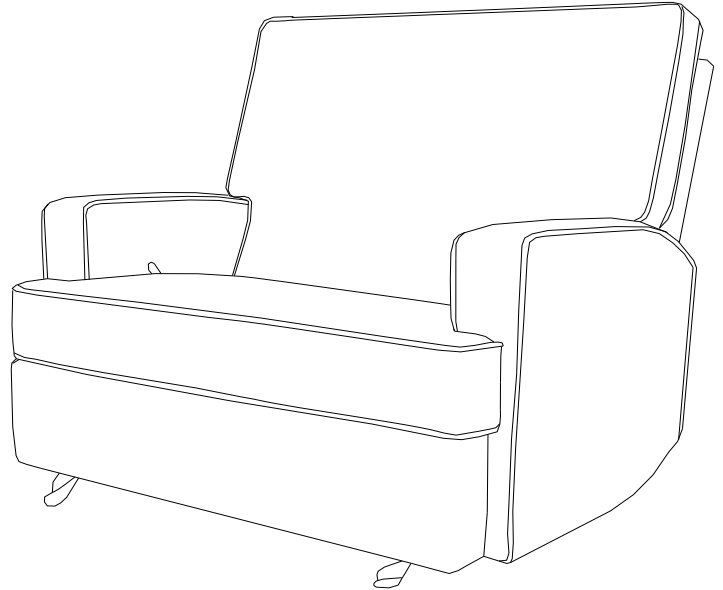

Intended Maximum Weight =225 lbs.

That's it! You've finished assembling your recliner.

DO NOT RETURN PRODUCT TO THE STORE.
If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com