 


8587340COM TV Stand

Ameriwood
HOME

Date of Purchase ____ / ____ / ____
Lot Number:

B348587340COM0

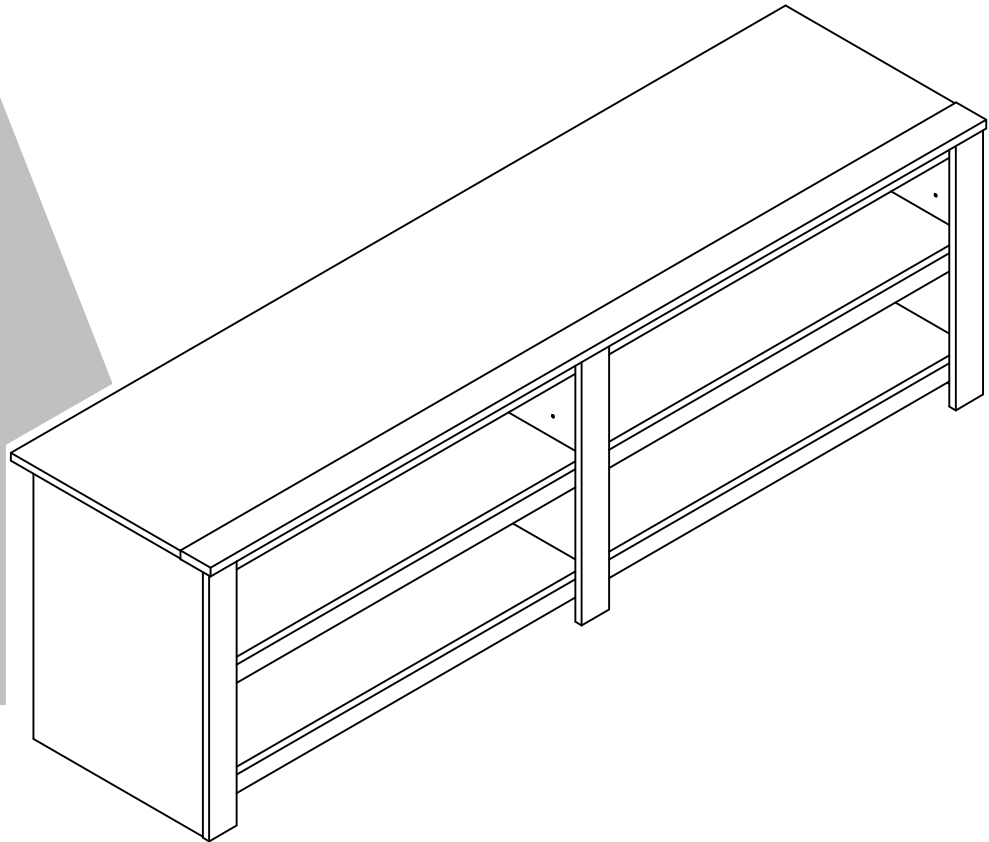

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Do Not Return This Product!

Contact our customer service team for help first.

 
Call: 1-800-489-3351 (toll free)

Monday-Friday 9am - 5pm CST

Visit: www.ameriwoodhome.com

WARNING

- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.

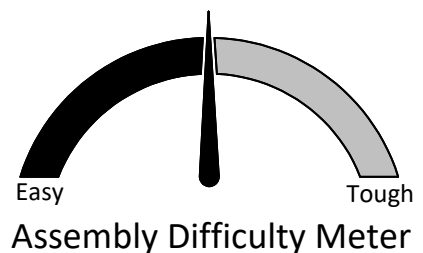

Assembly Difficulty Meter

 
Follow Ameriwood Home



Contact Us!

Do NOT return this product!

Contact our friendly customer service team first for help.

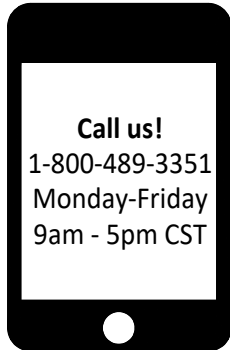

Visit ameriwoodhome.com to view the limited warranty valid in the U.S. and Canada.

Assembly Tips

 


Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: **1-2**
ESTIMATED ASSEMBLY TIME: **1 HOUR**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with a **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.



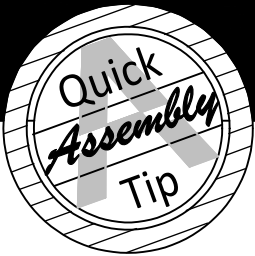





Before You Start

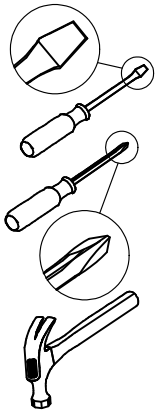 

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


Cam Lock Fastening System

    This Cam Lock Fastening System will be used throughout the assembly process.

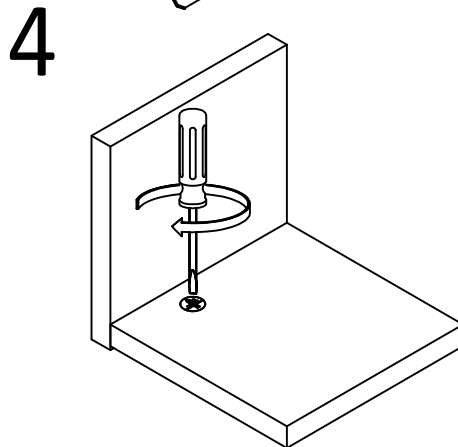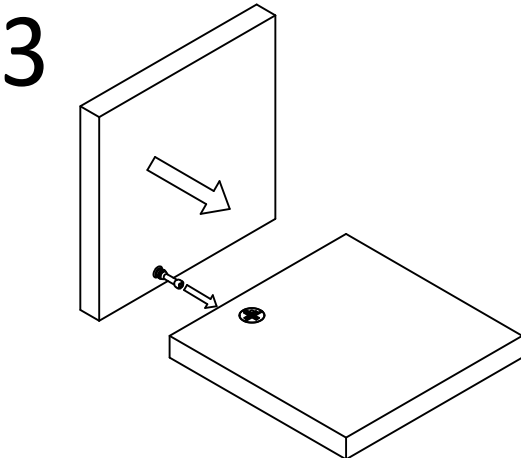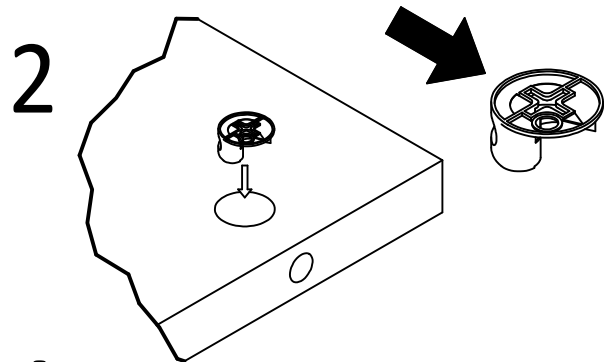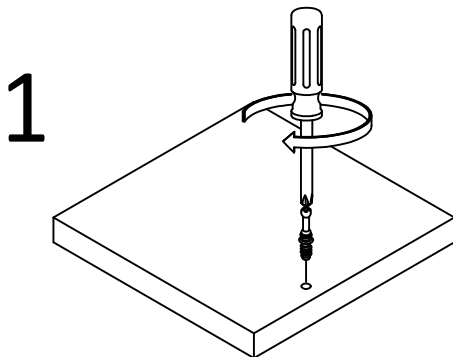


Board Identification

 
Not actual size

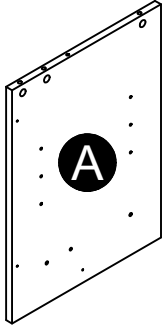


Left Panel
38587340010

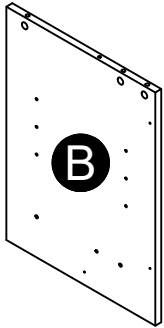 


Right Panel
38587340020

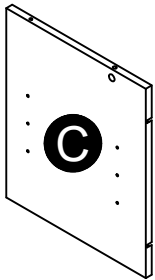 


Partition
38587340030

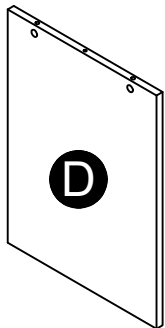 


Back
38587340040

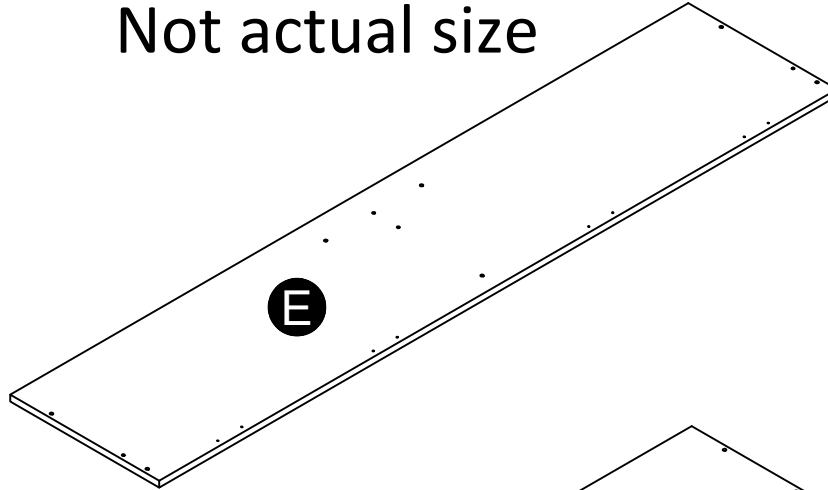 


Top
38587340050

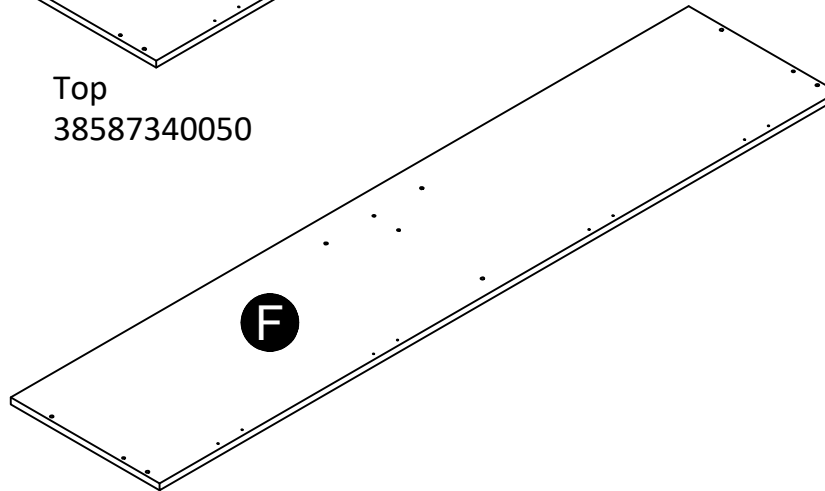 


Bottom
38587340060

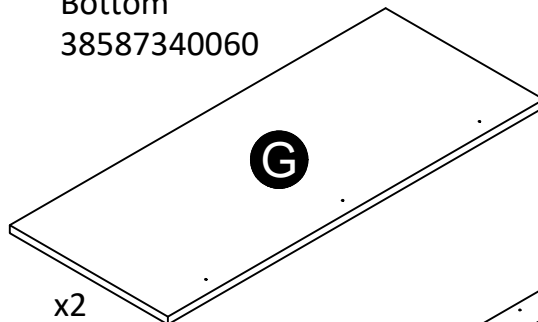 

x2
Adjustable Shelves
38587340070

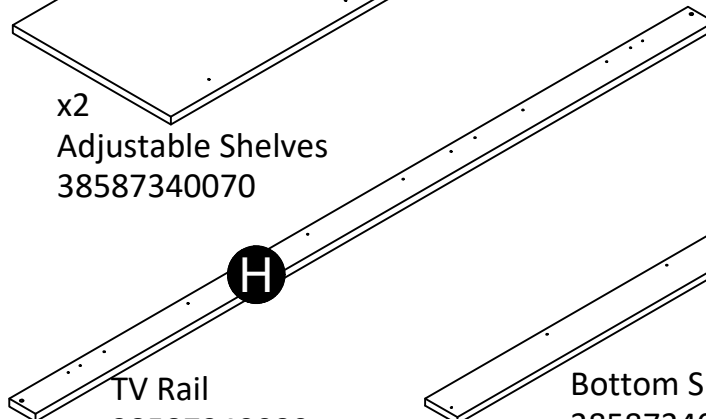 

TV Rail
38587340080

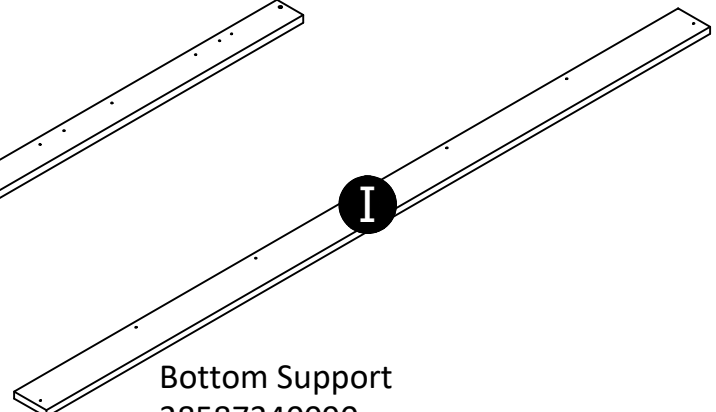 


Bottom Support
38587340090

4

Board Identification

 
Not actual size

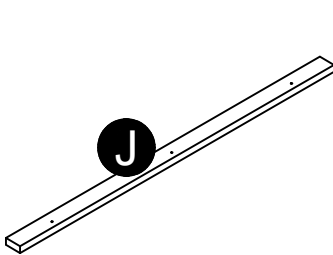


x6
Horizontal Rail
38587340100



 x2
Vertical Molding
38587340110




Center Molding
38587340120

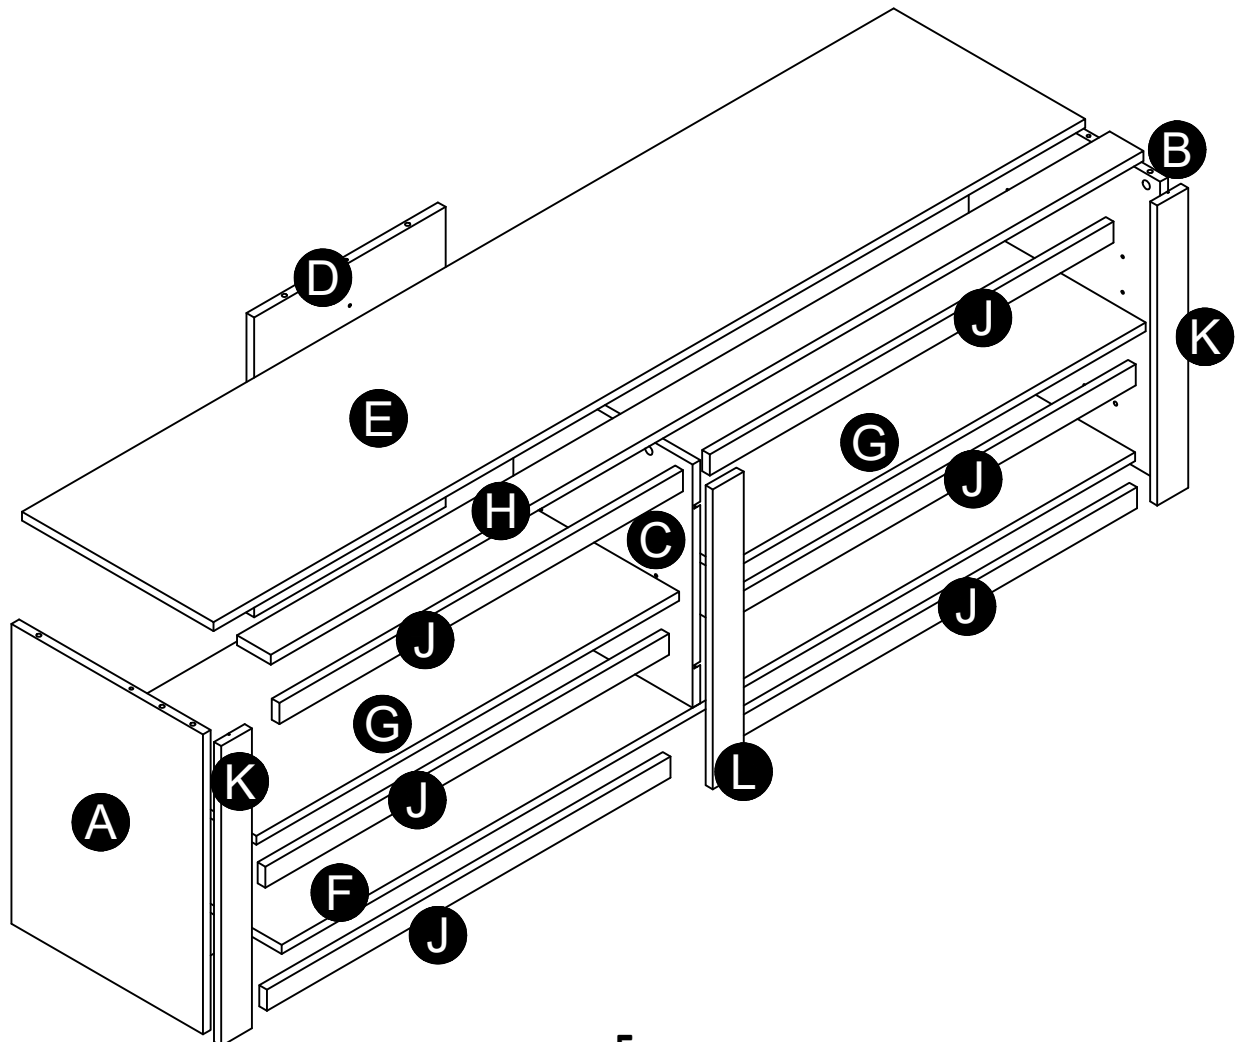 

Part List

 
Actual Size



(x13)
#A22610
cam bolt



 
(x13)
#A22620
cam lock




(x6)
#A21660
wood dowel



 
(x4)
#A22910
connector bolt

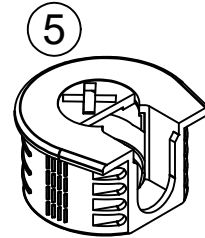


(x4)
#A22920
connector

 

(x2)
#A23030
confirmat screw

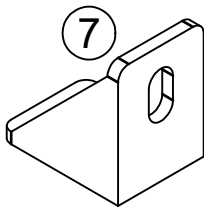 


(x24)
#A53510
angle bracket

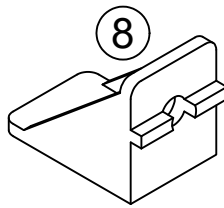 

(x4)
#A53520
molding bracket




 (x72)
#A12120
7/16" pan head

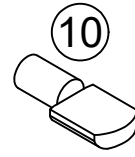


(x8)
#A80250
shelf support

 Not Actual Size


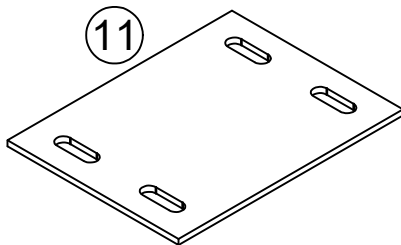


(x4)
#A54270
connecting plate

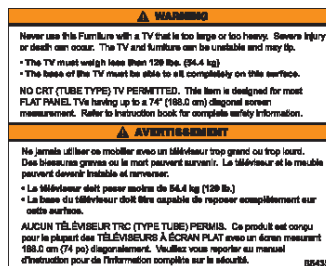 

(x1)
#B64359
TV warning label

  
STEP 1

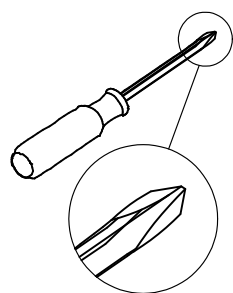



(x9)
#A22610



 (x16)
#A12120


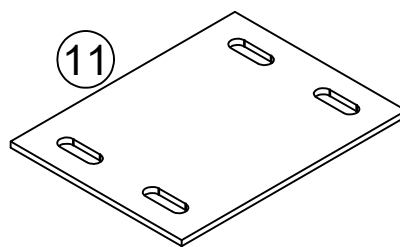


(x4)
#A54270

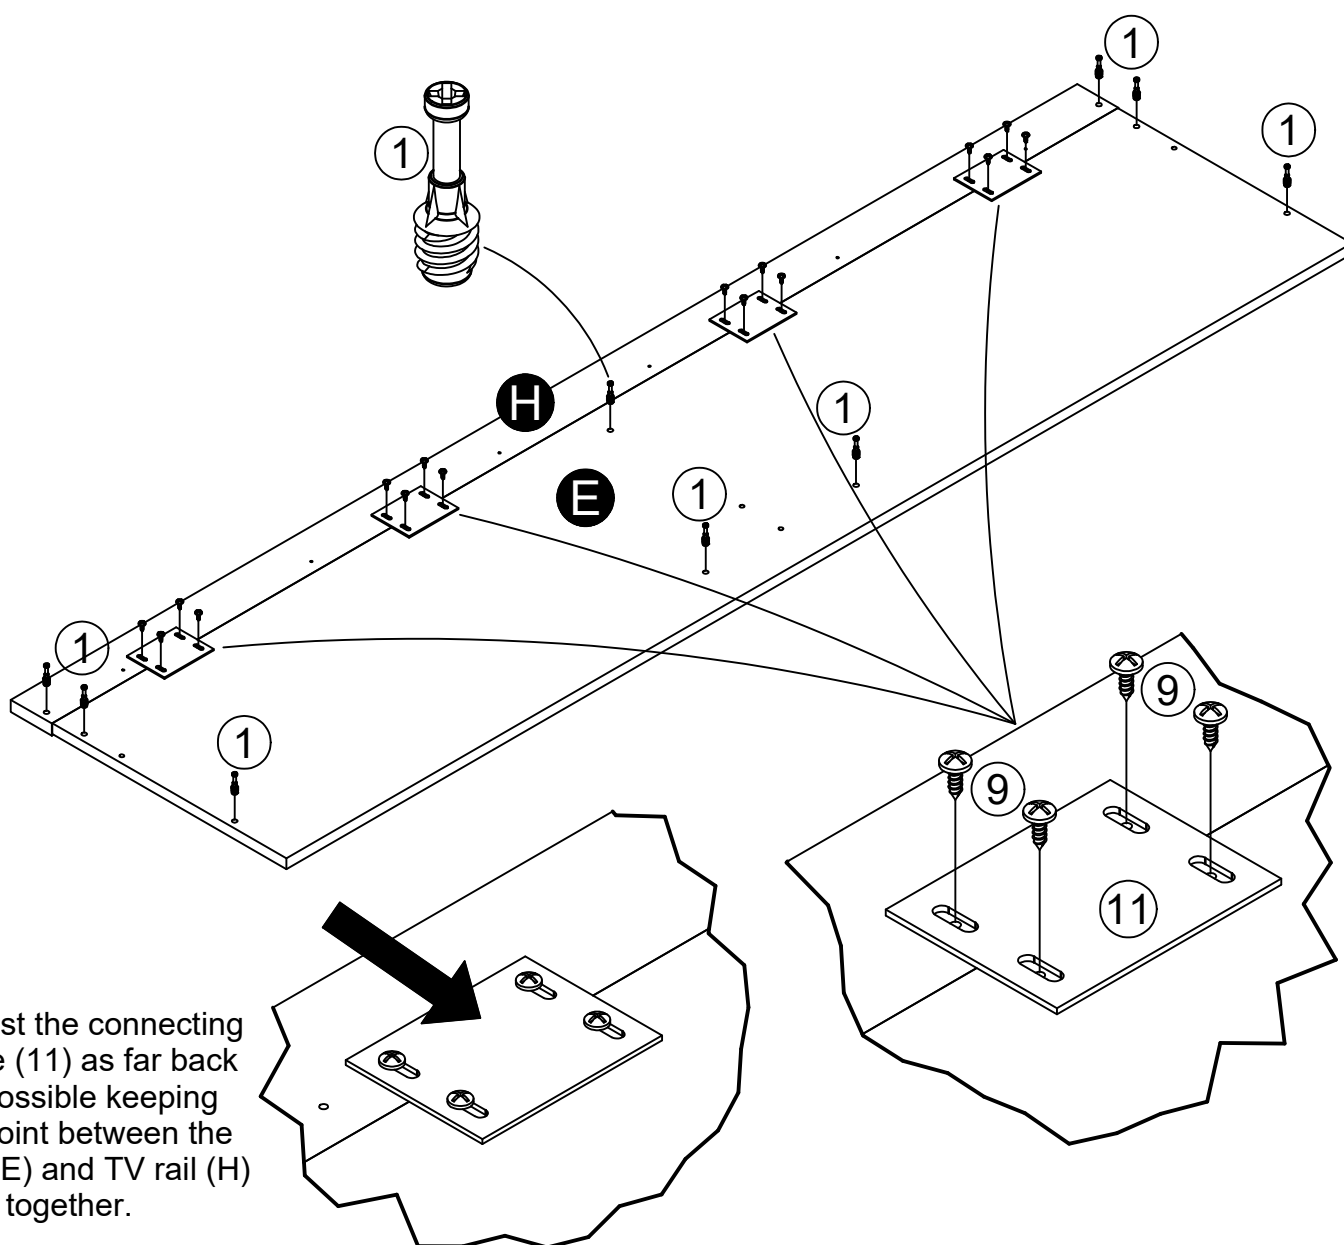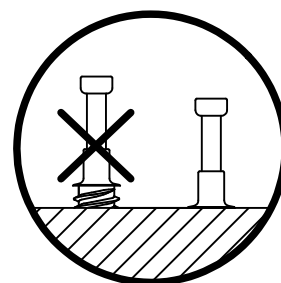  

Adjust the connecting plate (11) as far back as possible keeping the joint between the top (E) and TV rail (H) tight together.

  STEP 2

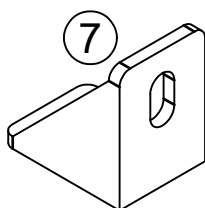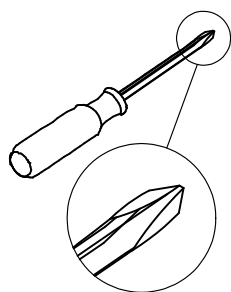


(x6)
#A53510



(x12)
#A12120

 
Using angle brackets (7) and screws (9), attach two horizontal rails (J) to the TV rail (H) as shown.

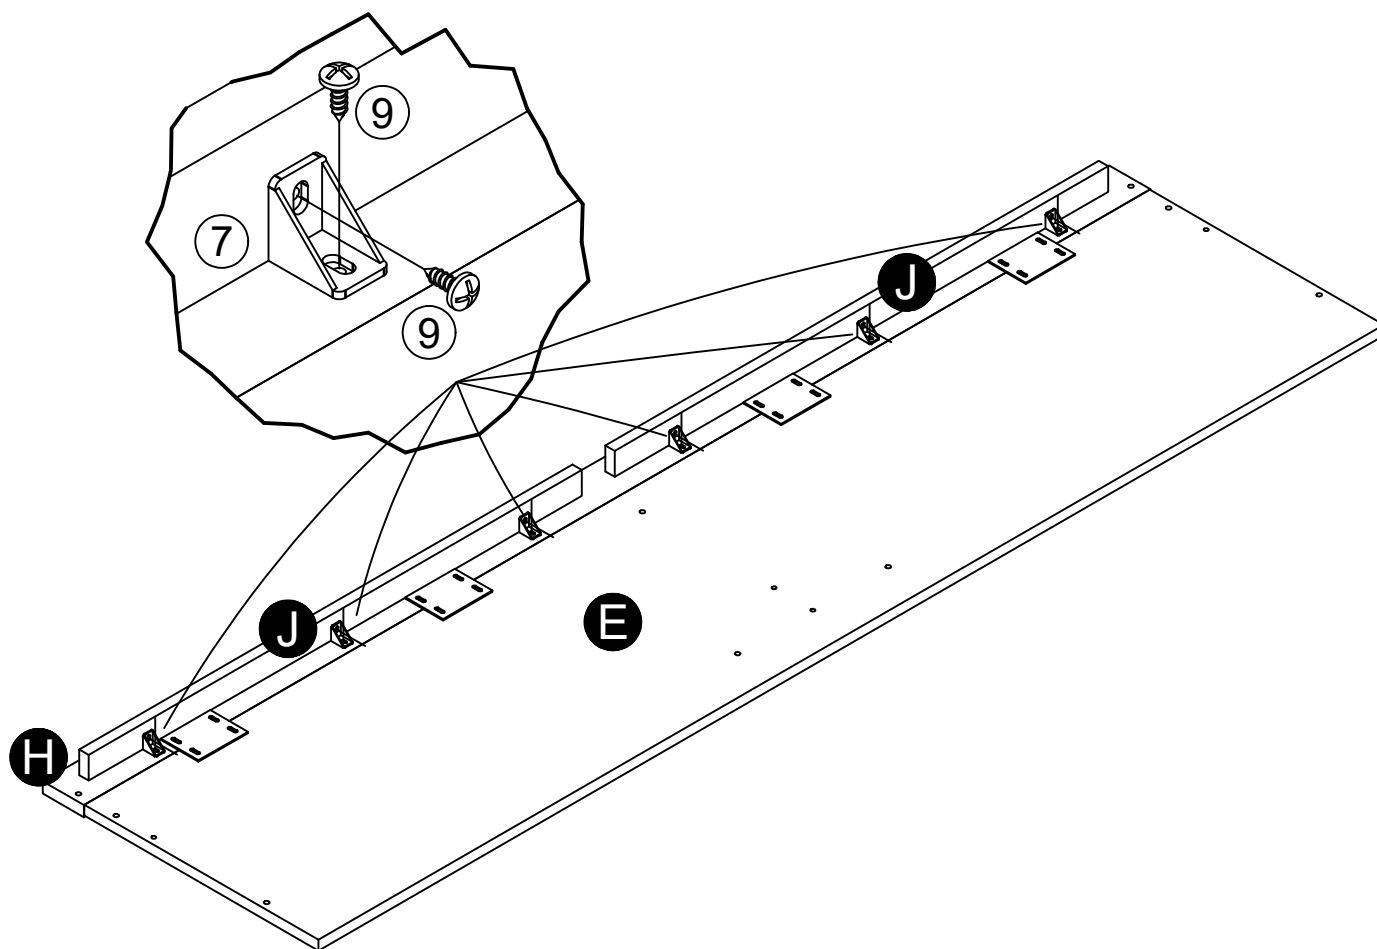


STEP 3



 
(x4)
#A22620




(x2)
#A21660

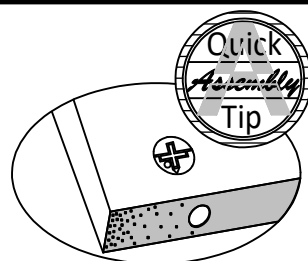 


Proper orientation of CAM LOCK

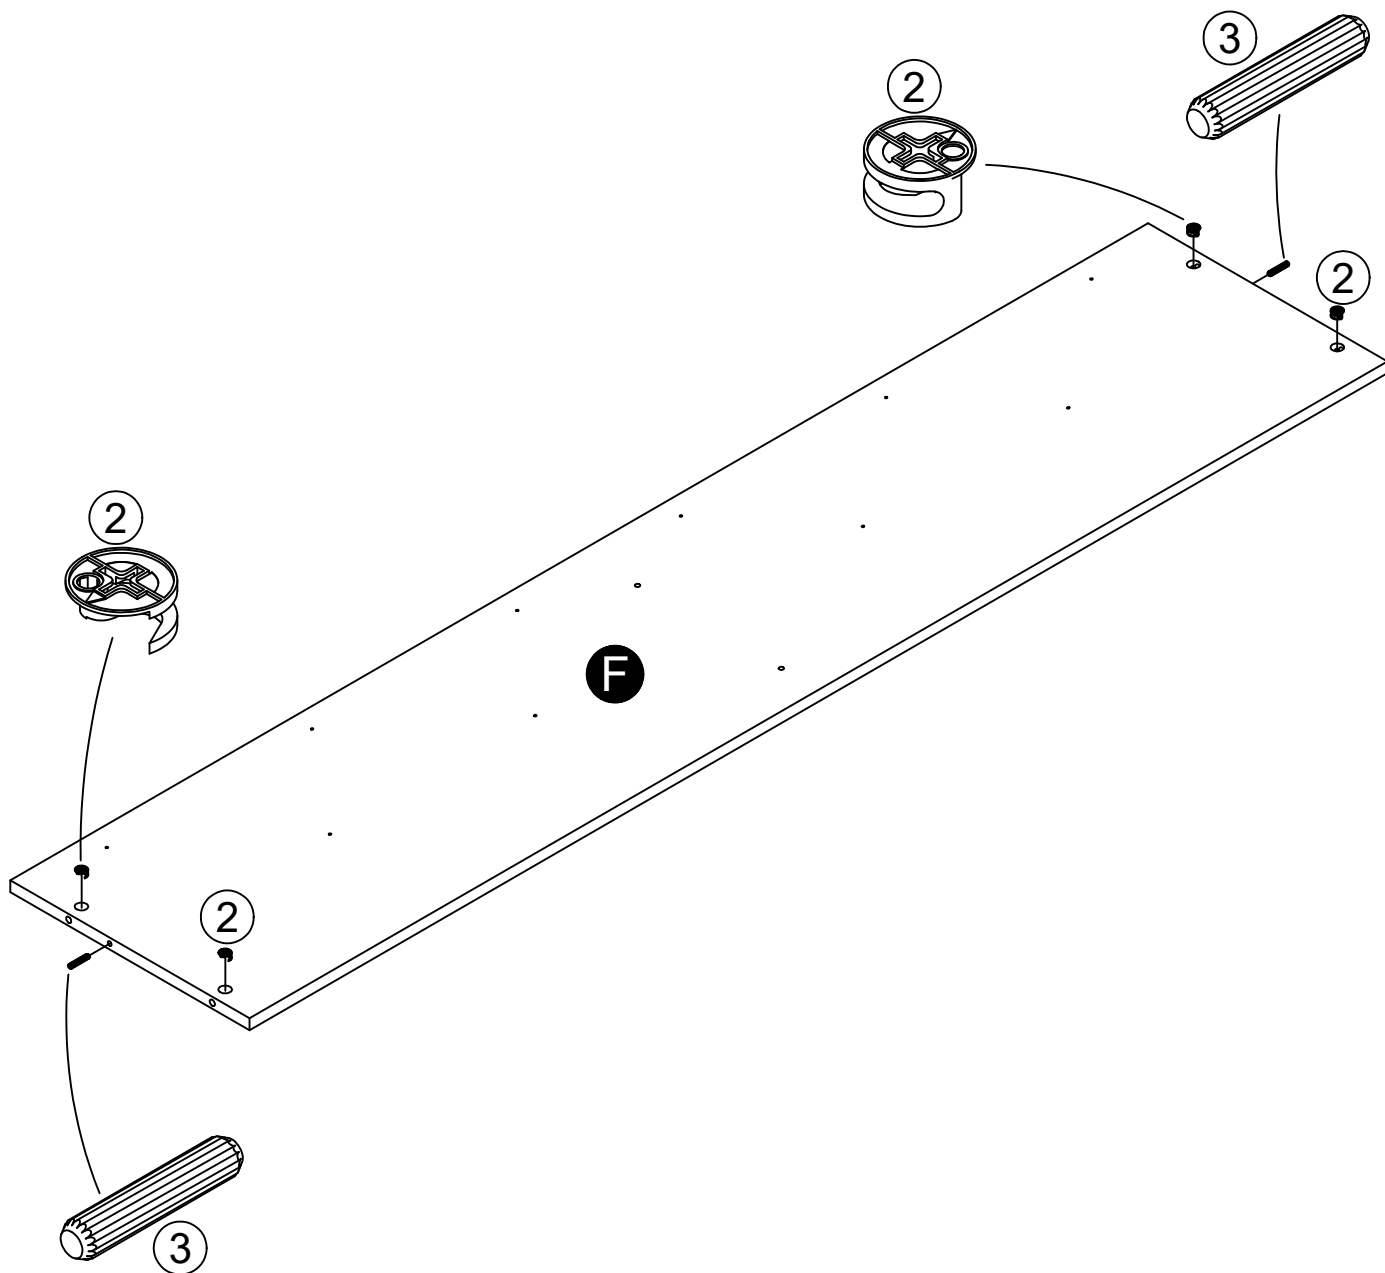 


 
STEP 4

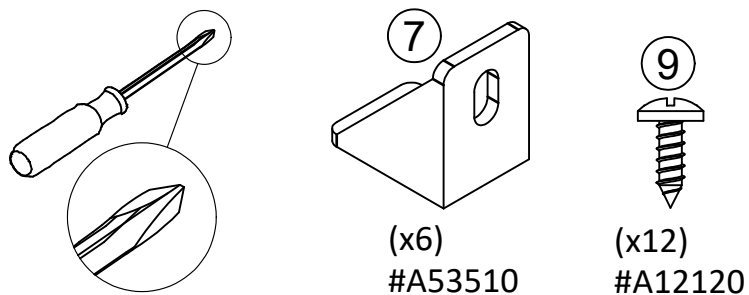

 Using angle brackets (7) and screws (9), attach two horizontal rails (J) to the bottom (F) as shown.

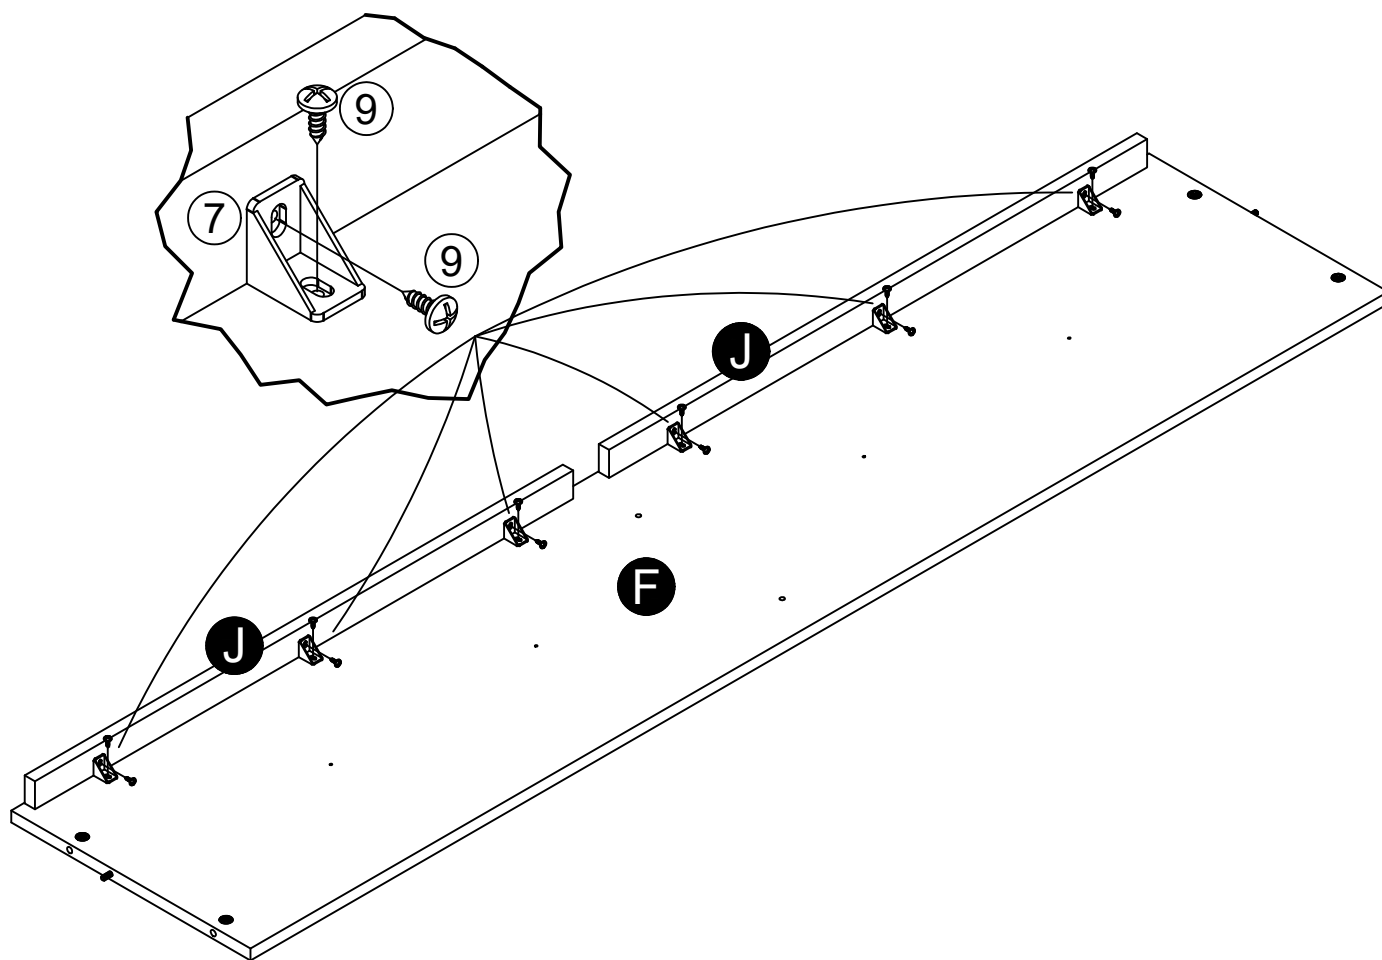

  STEP 5

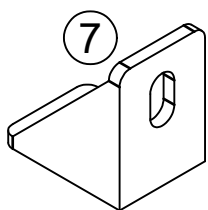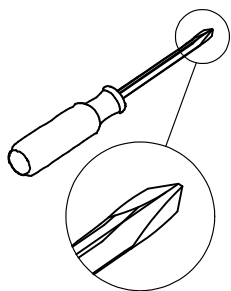


(x6)
#A53510











(x10)
#A12120

 Attach an angle bracket (7) to both ends of the bottom support (I) as shown. Attach the bottom support (I) to the bottom (F) with angle brackets (7) and screws (9) as shown.







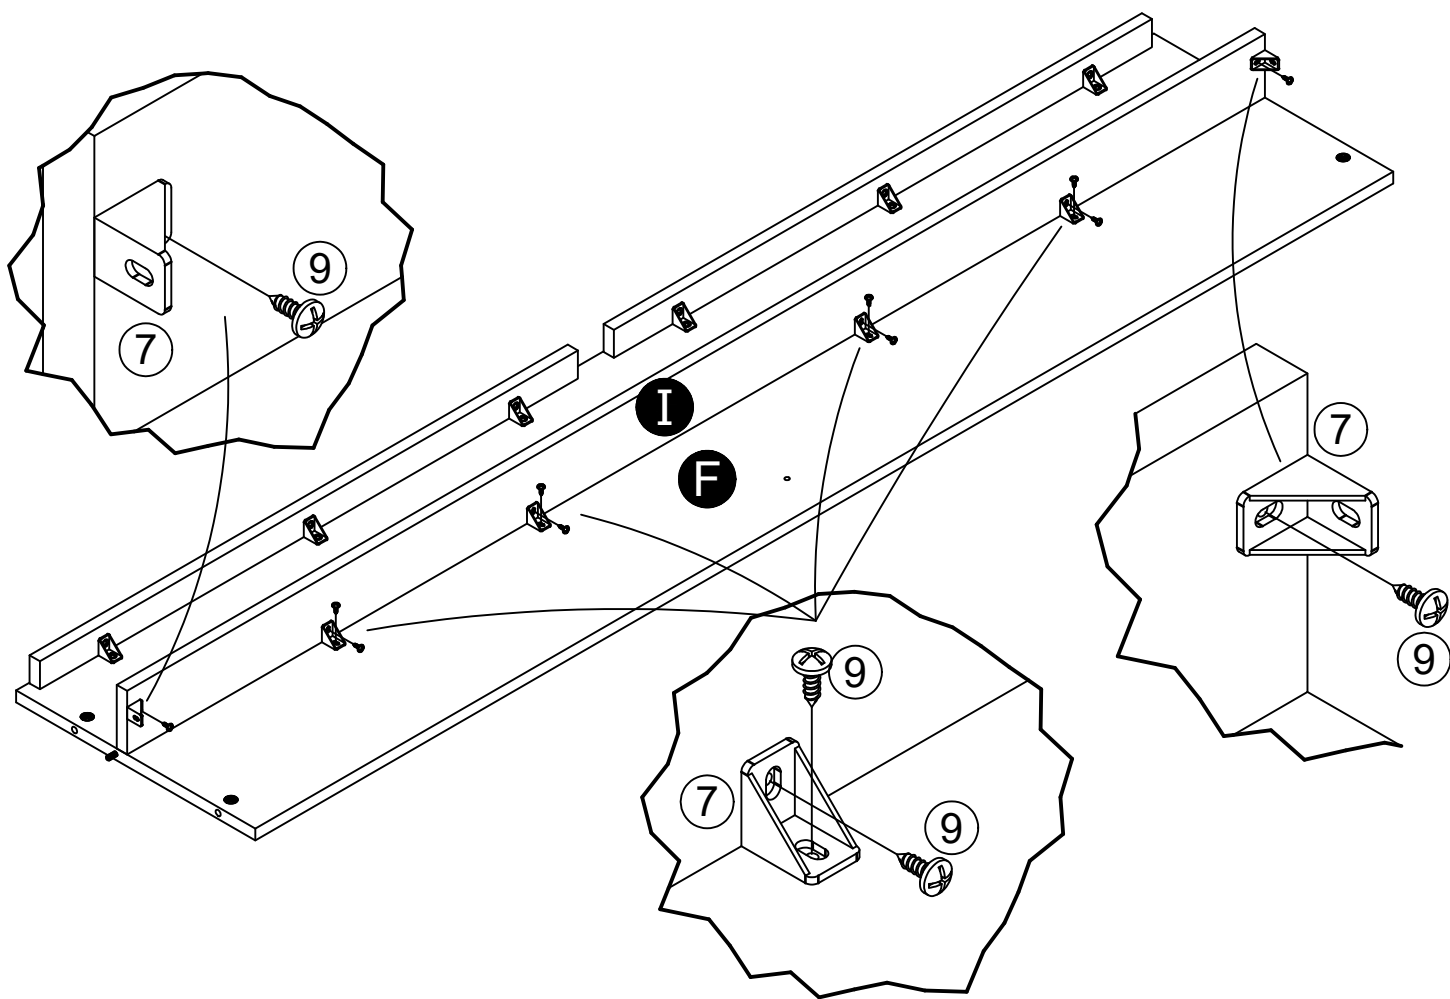


        STEP 6

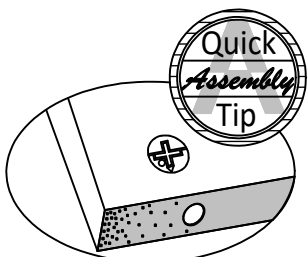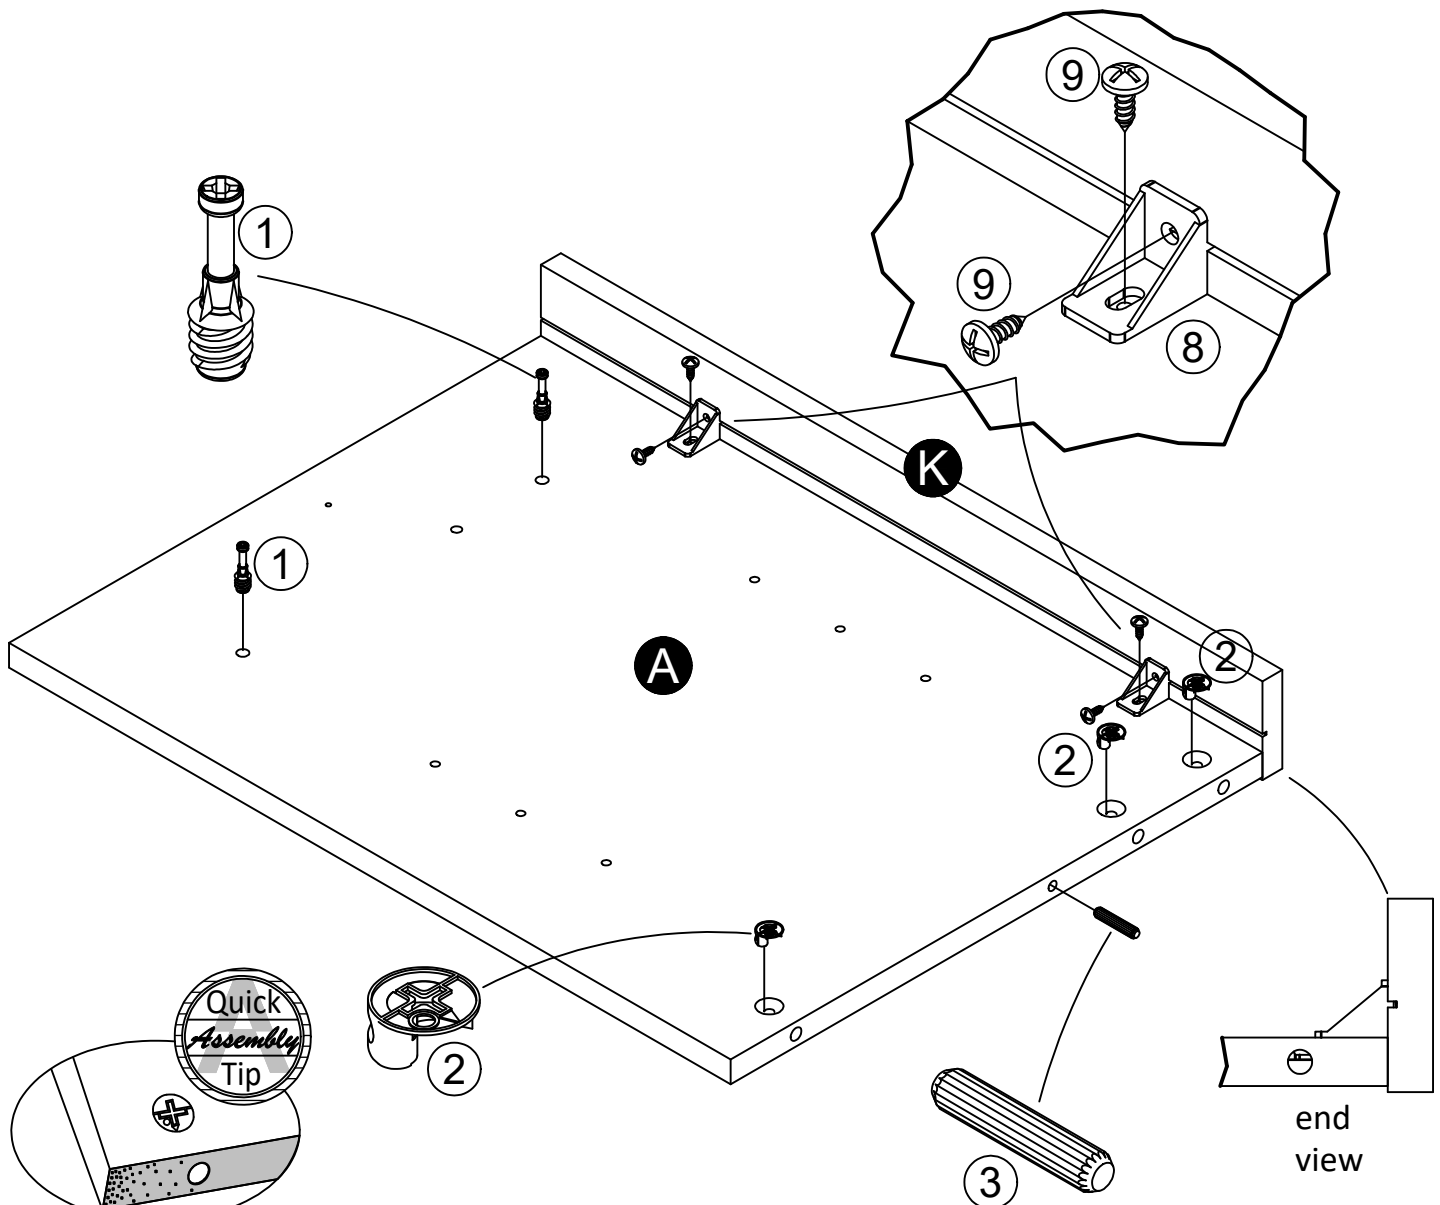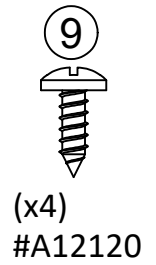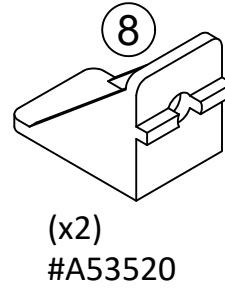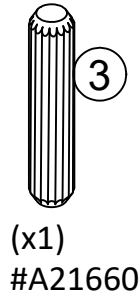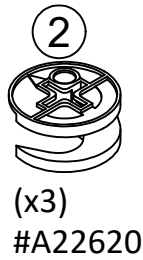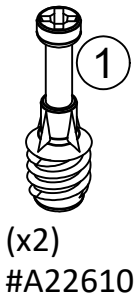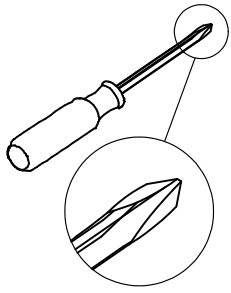


Proper orientation of CAM LOCK

       STEP 7

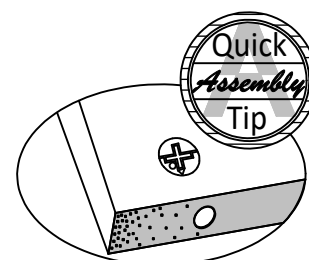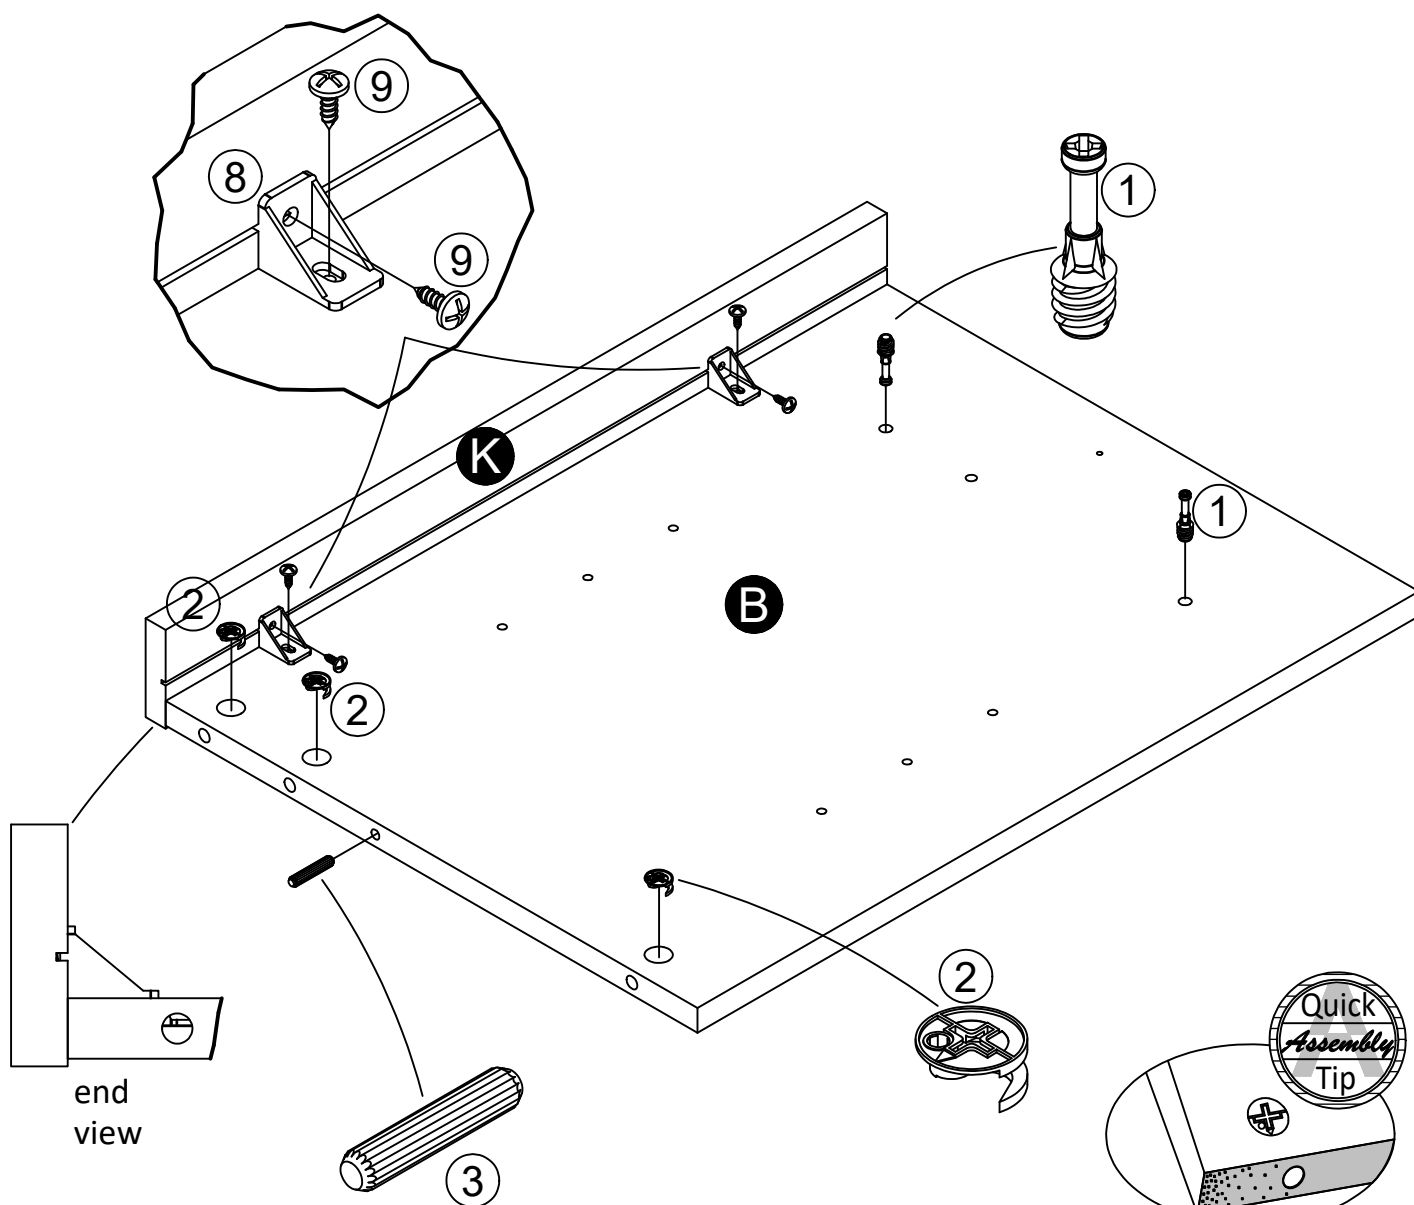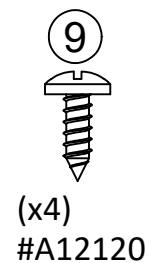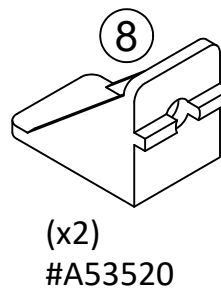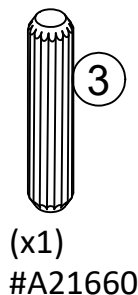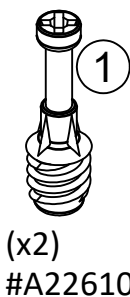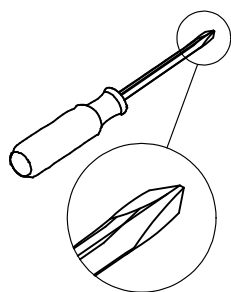


Proper orientation of CAM LOCK

 
STEP 8

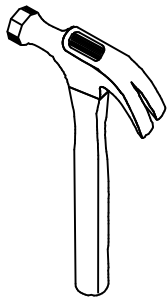


(x1)
#A22620

 


(x1)
#A21660

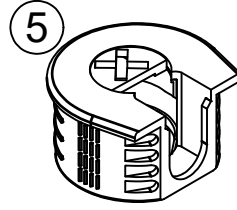 


(x4)
#A22920

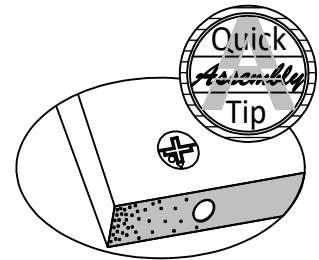 


Proper orientation of CAM LOCK

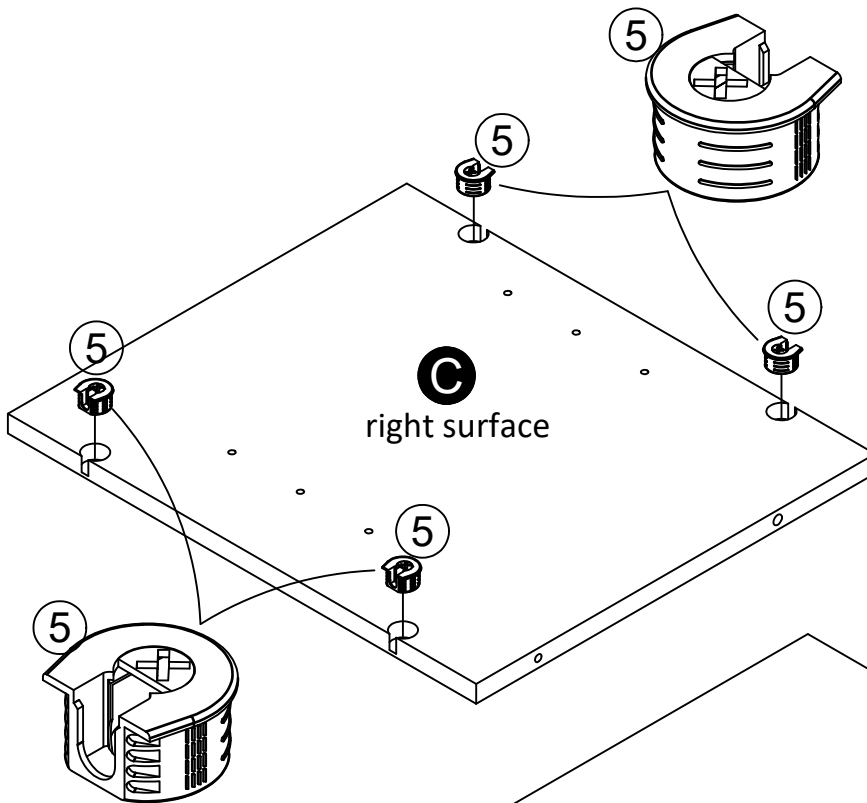 

 
You will need to tap the connector (5) with a hammer to fully insert. Be sure the connector is position as shown before pushing into the hole.

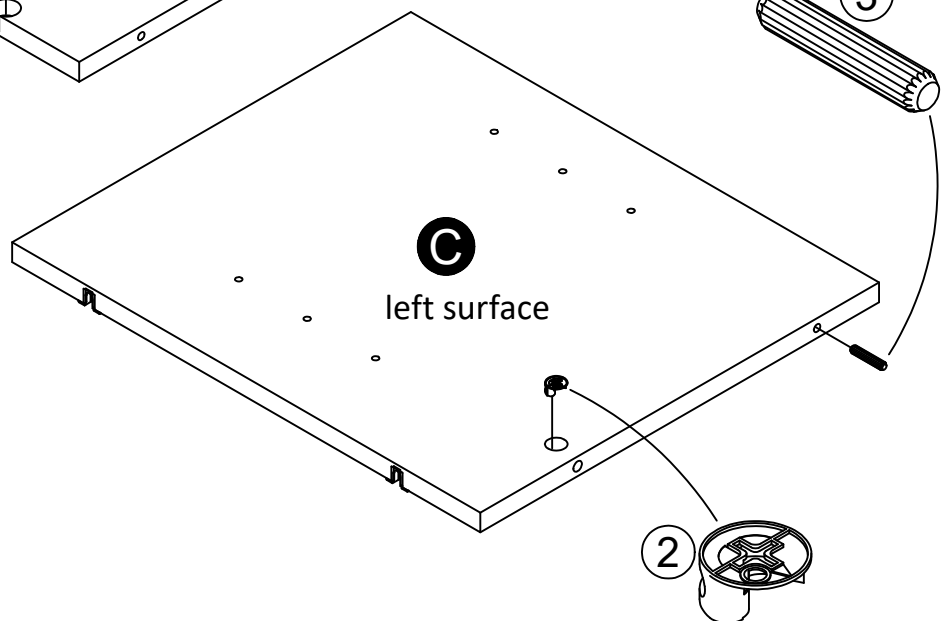

 STEP 9

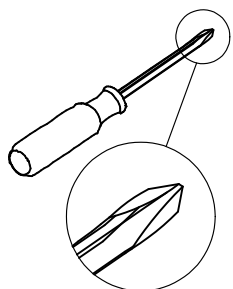


(x2)
#A22620

 



(x1)
#A21660



 
(x2)
#A22910

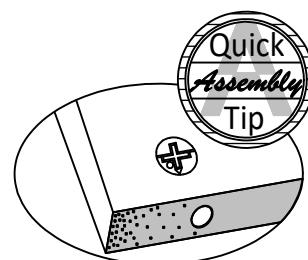


Proper orientation of CAM LOCK

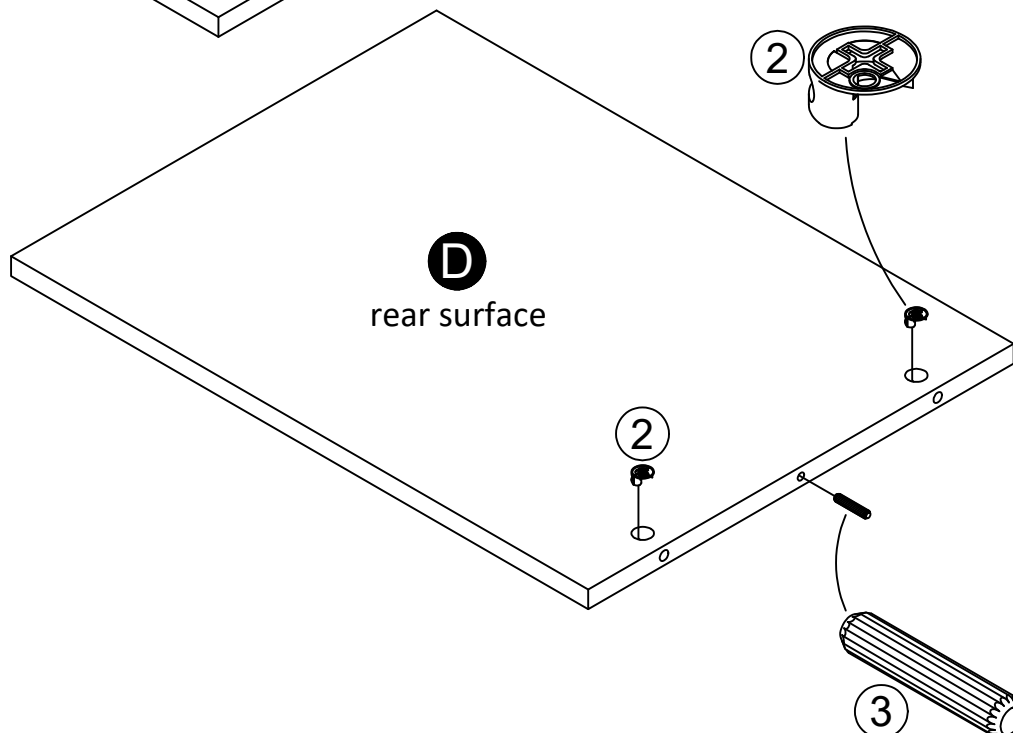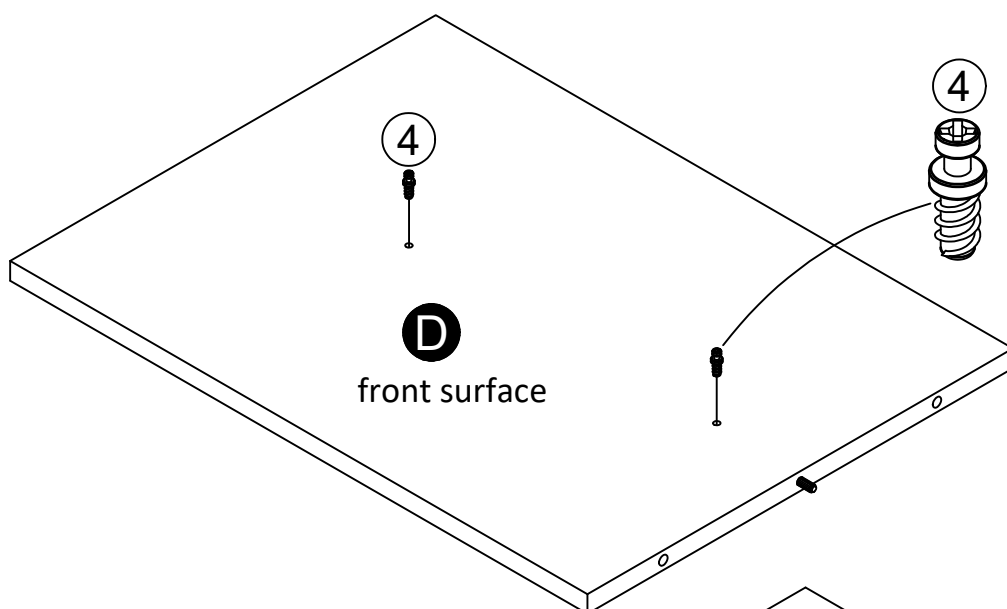  

 
STEP 10

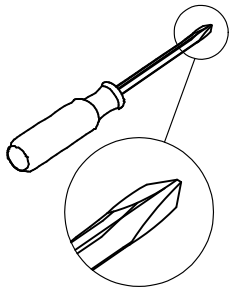


4
(x2)
#A22910

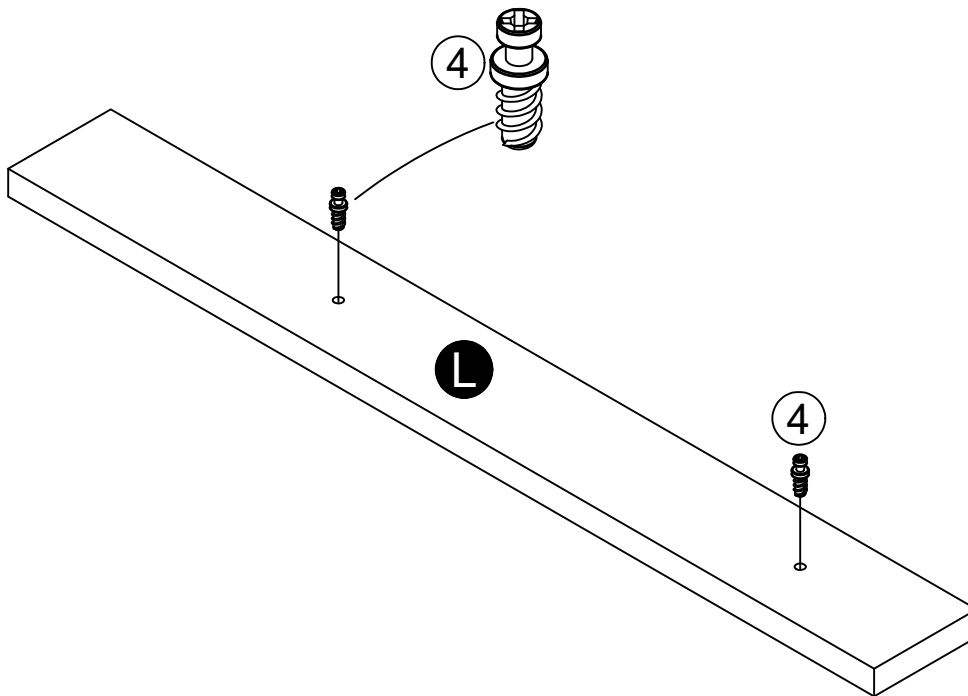 

 
STEP 11

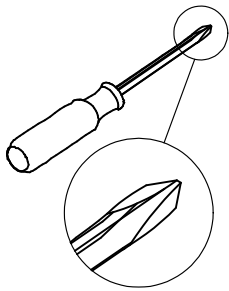



 
Position the partition (C) against the back (D) so the connector bolts (4) engage the connectors (5). Turn the screw in the center of the connector to lock in place.

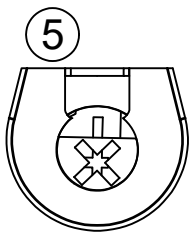


Turn clockwise to lock in place.

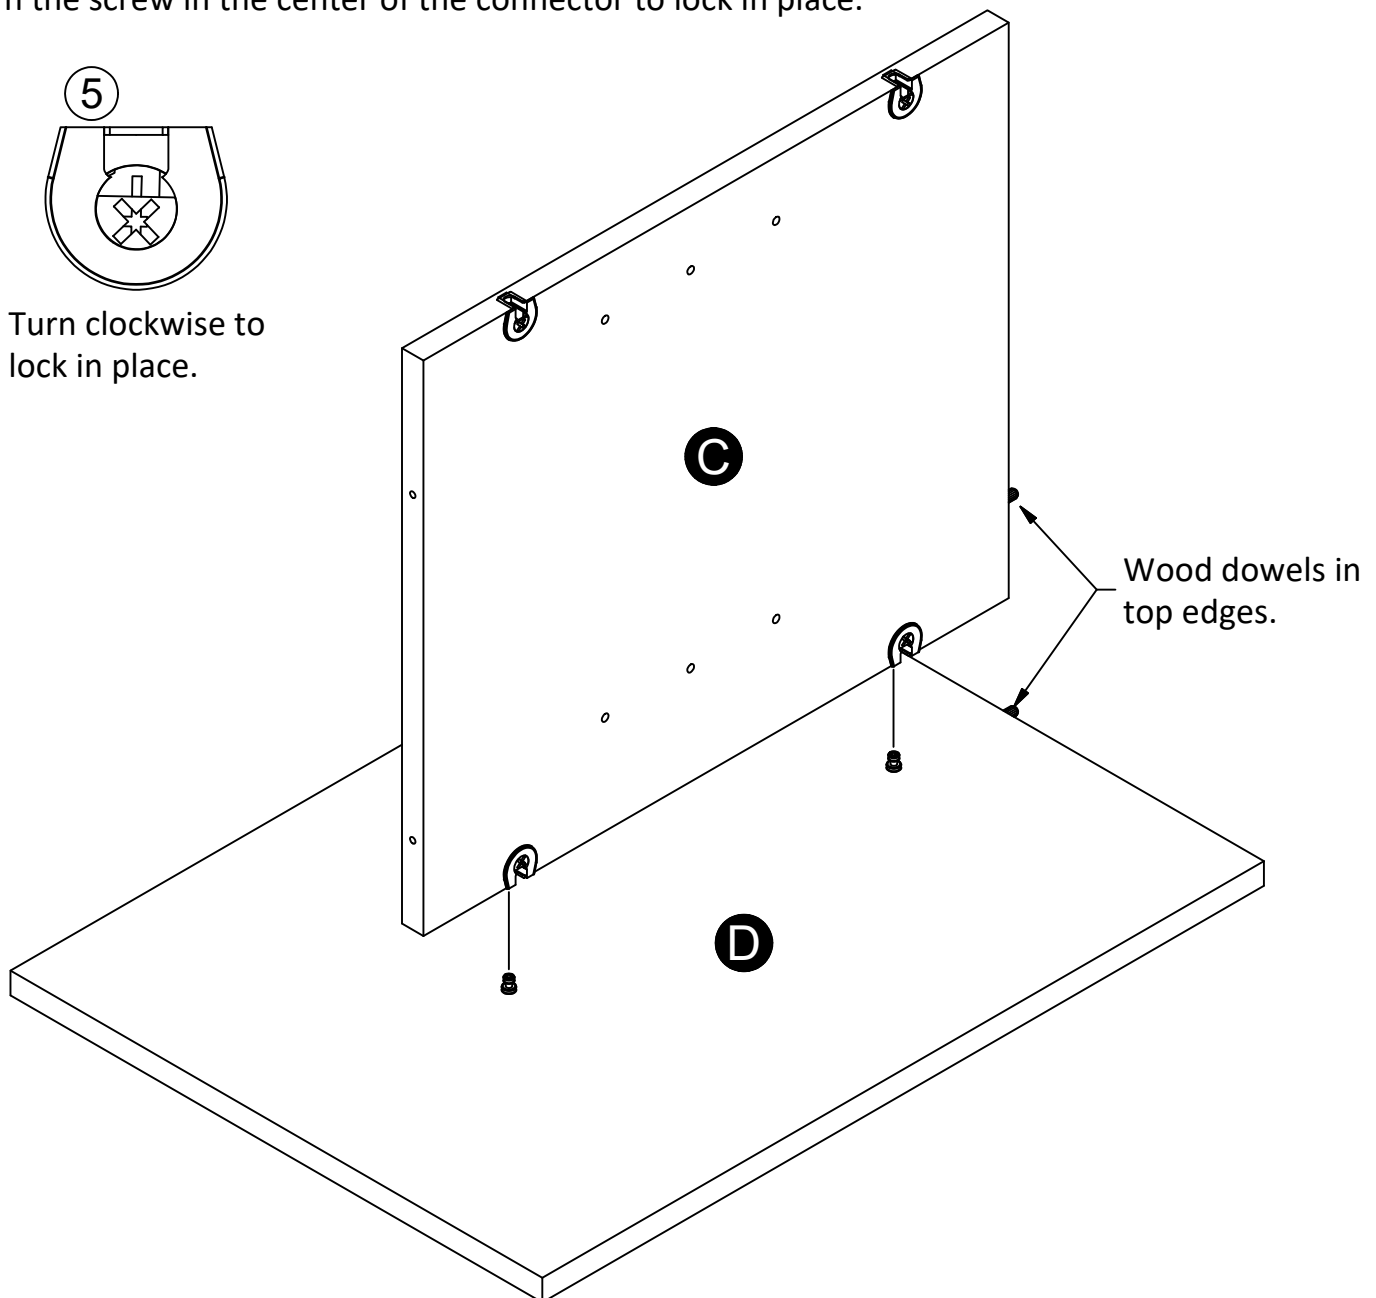 

  
 
STEP 12

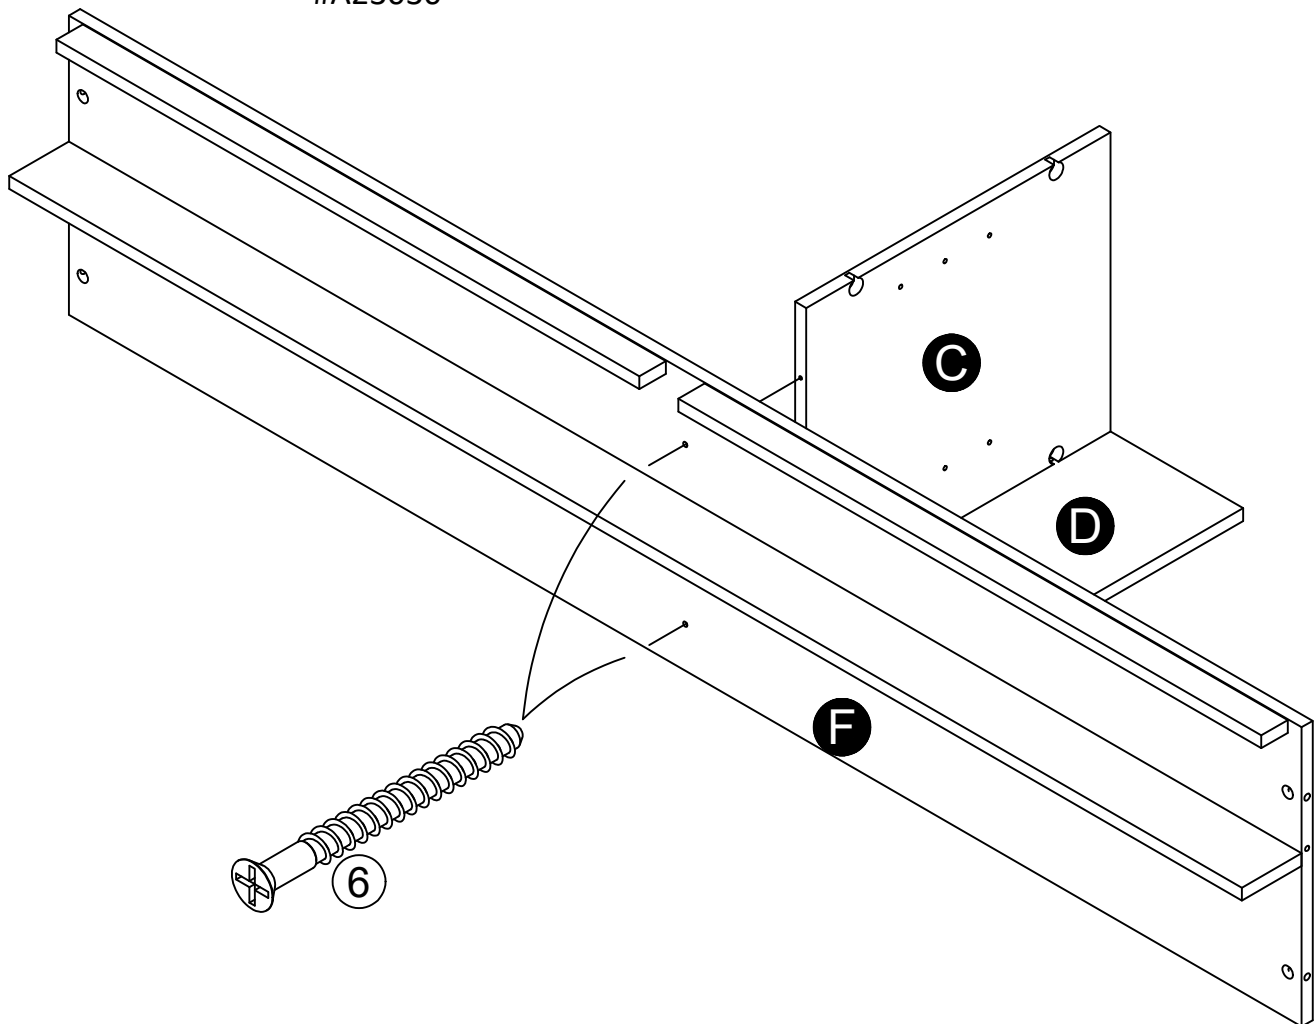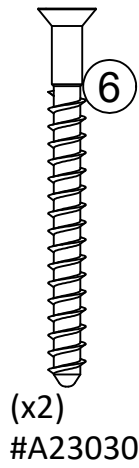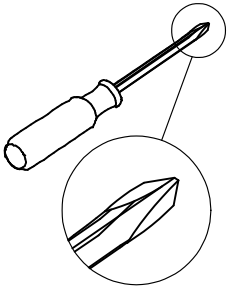

 STEP 13




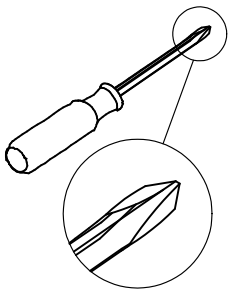


  Position the center molding (L) against the partition (C) so the connector bolts (4) engage the connectors (5). Turn the screw in the center of the connector to lock in place.

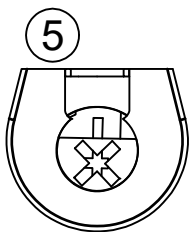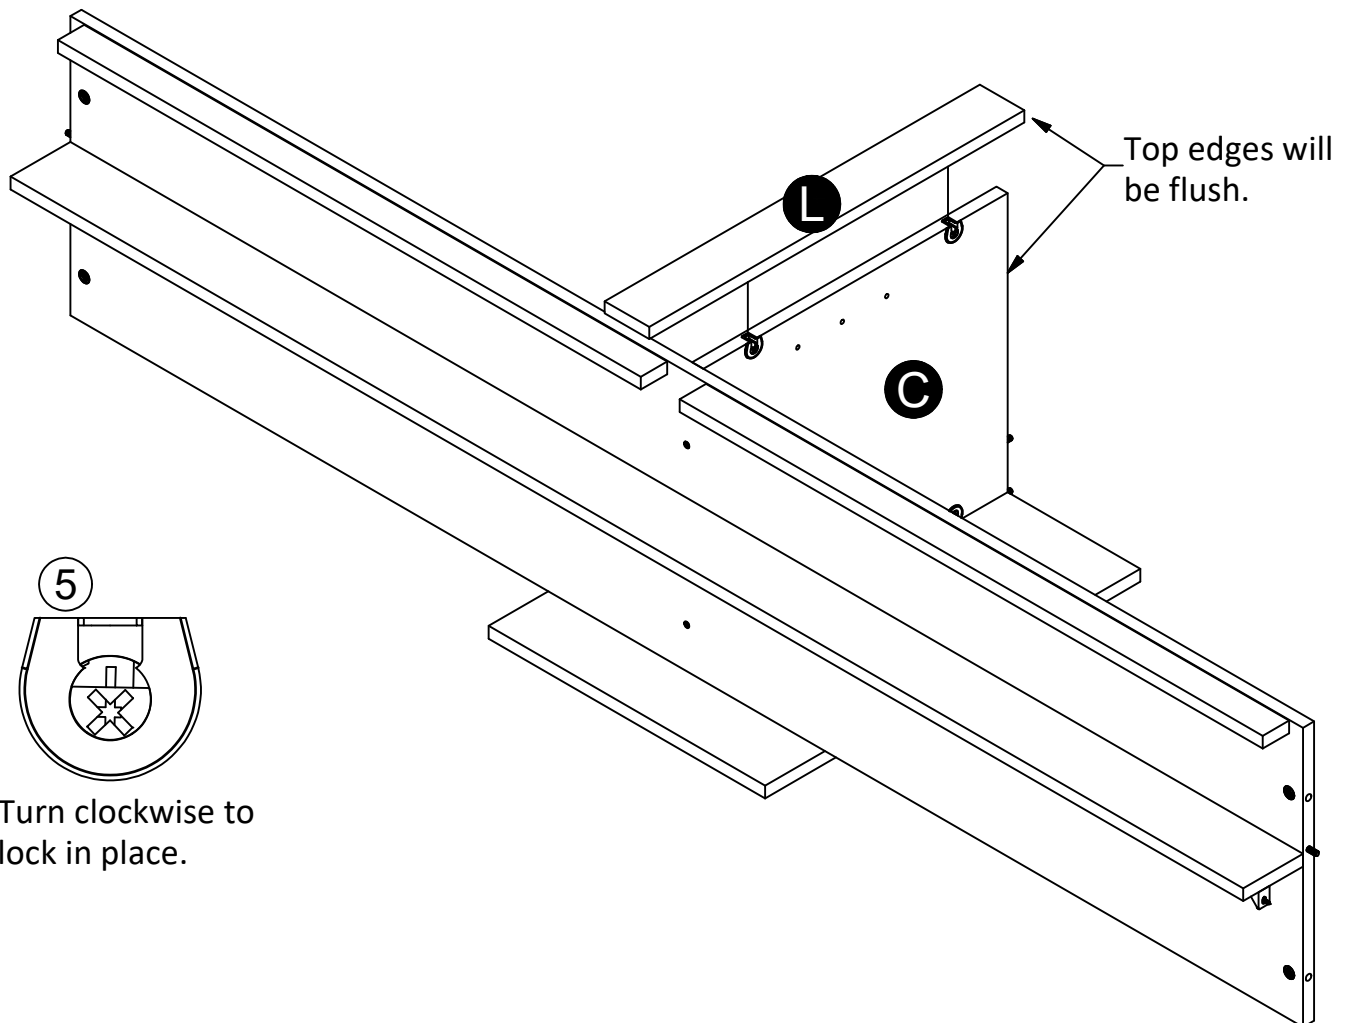

Turn clockwise to
lock in place.

    
STEP 14

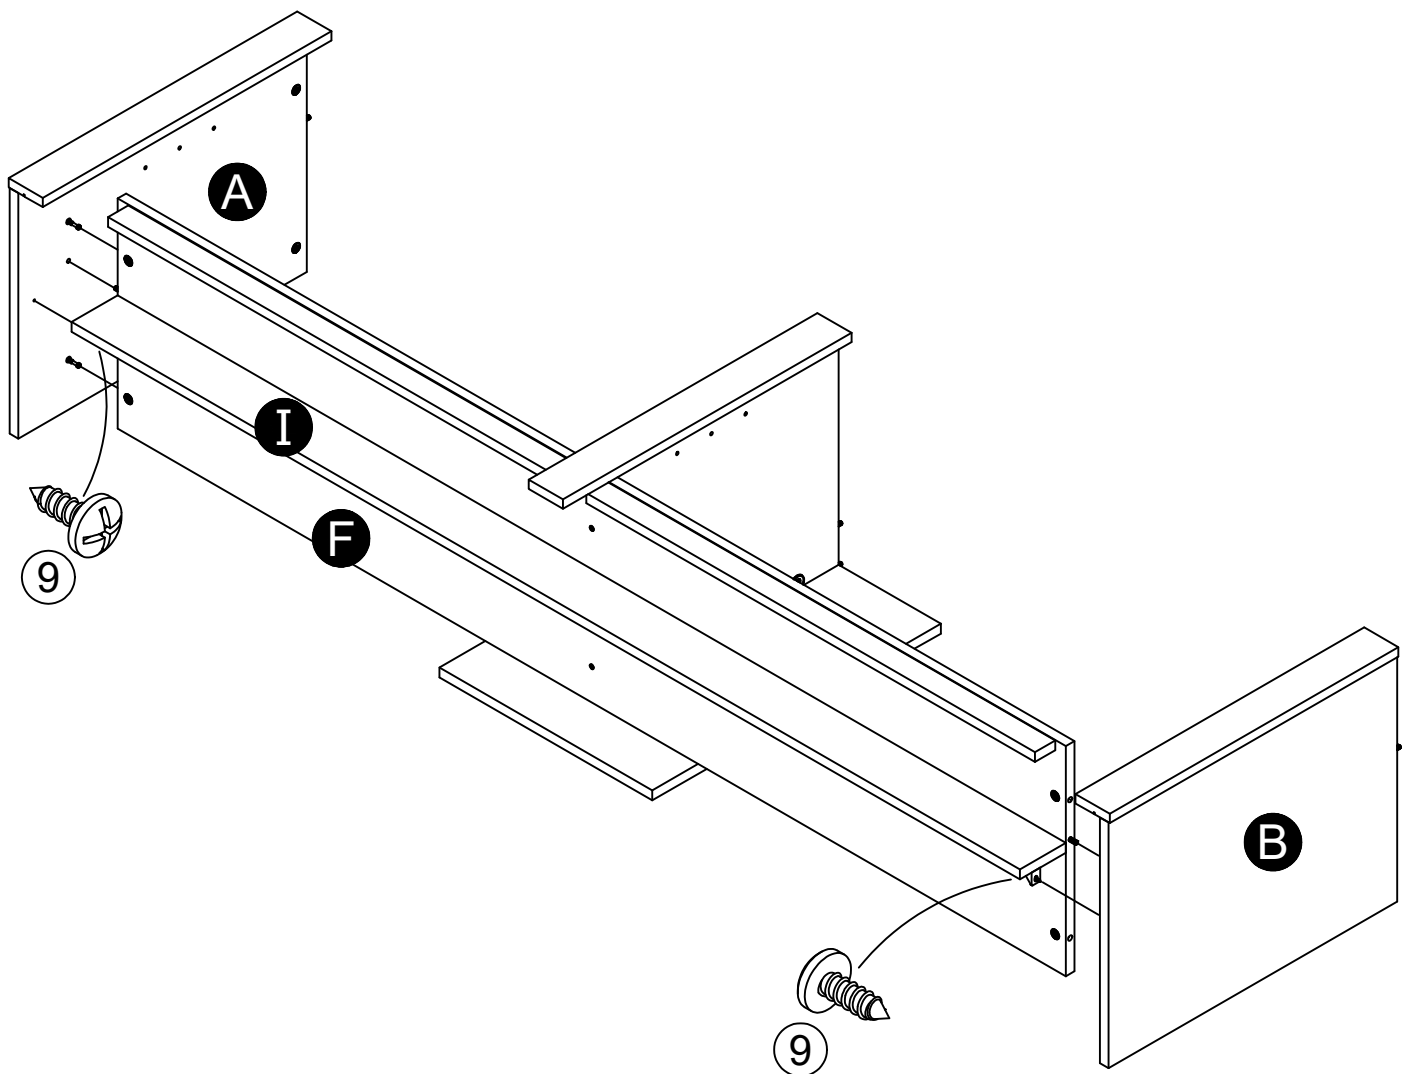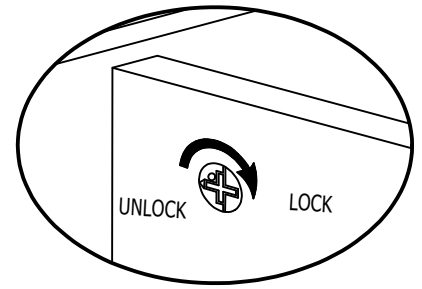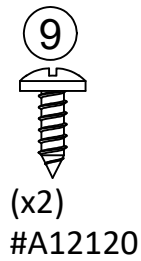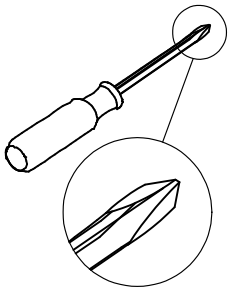



Be sure to attach the bottom support (I) to the left and right panels (A&B) with screws (9).

STEP 15

 
Carefully stand your unit upright as shown.

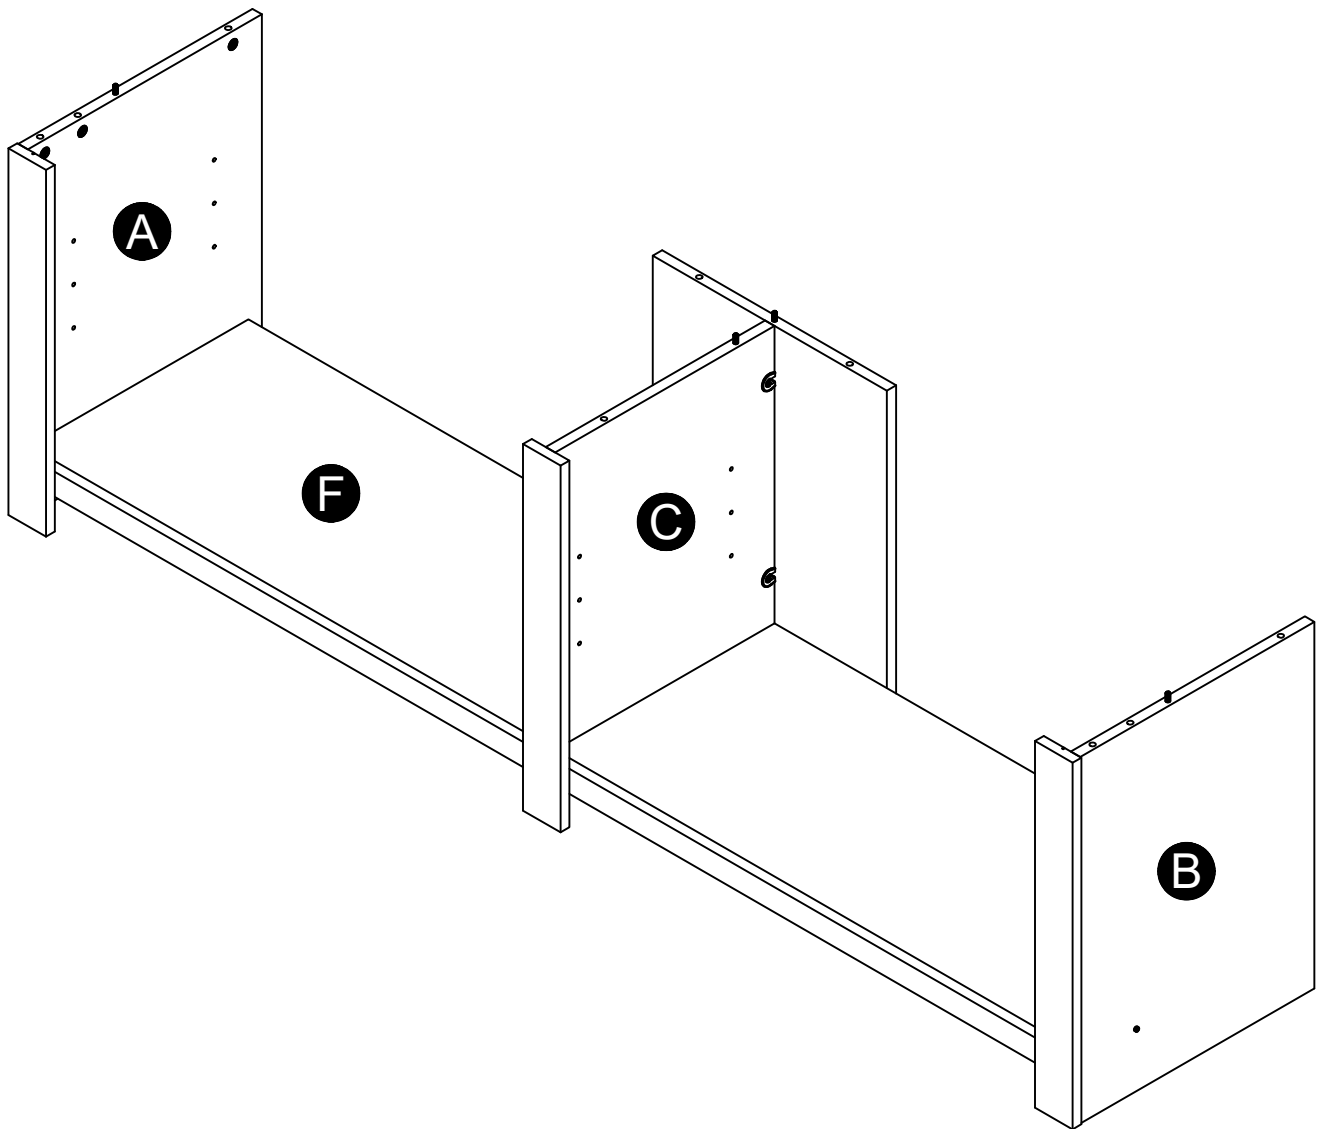


 
 
STEP 16

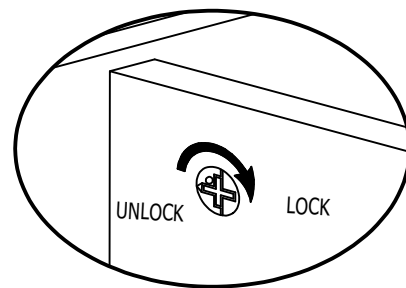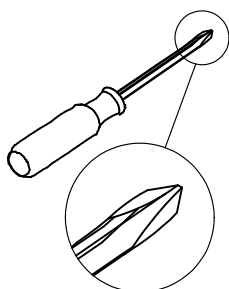

 With the help of another person, position the top and TV rail component onto the left panel (A), right panel (B), partition (C) and back (D) as shown. Turn the cam locks to lock in place.

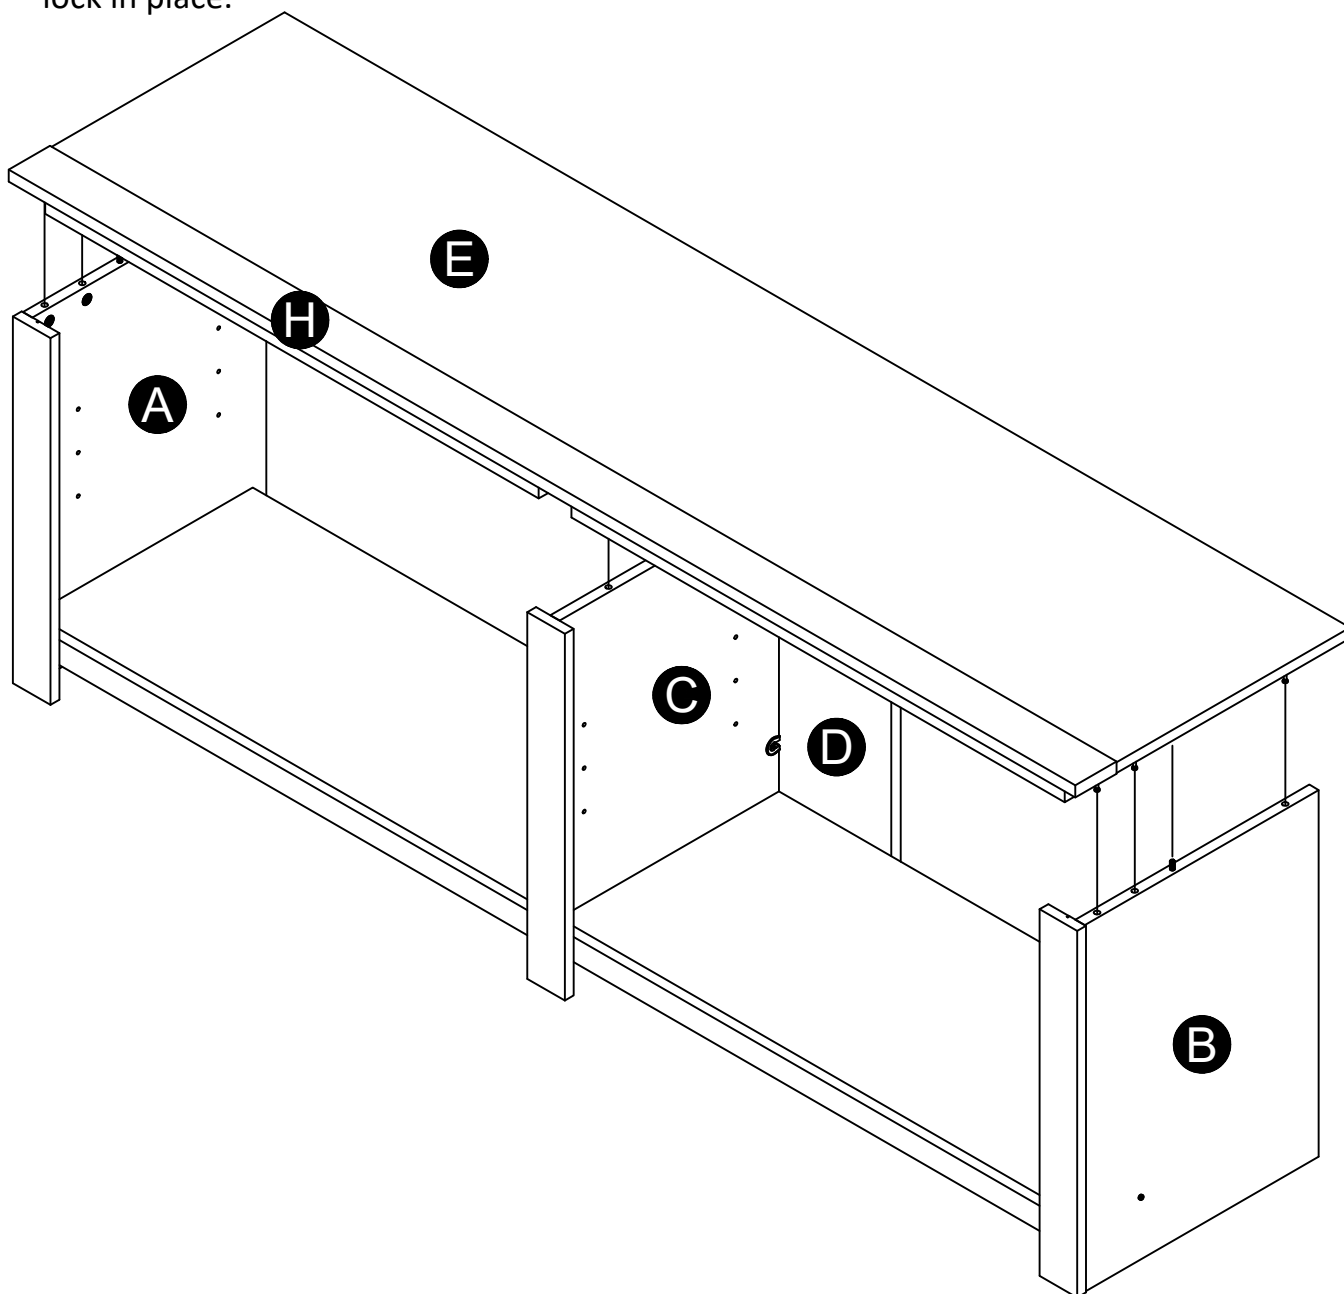

   STEP 17

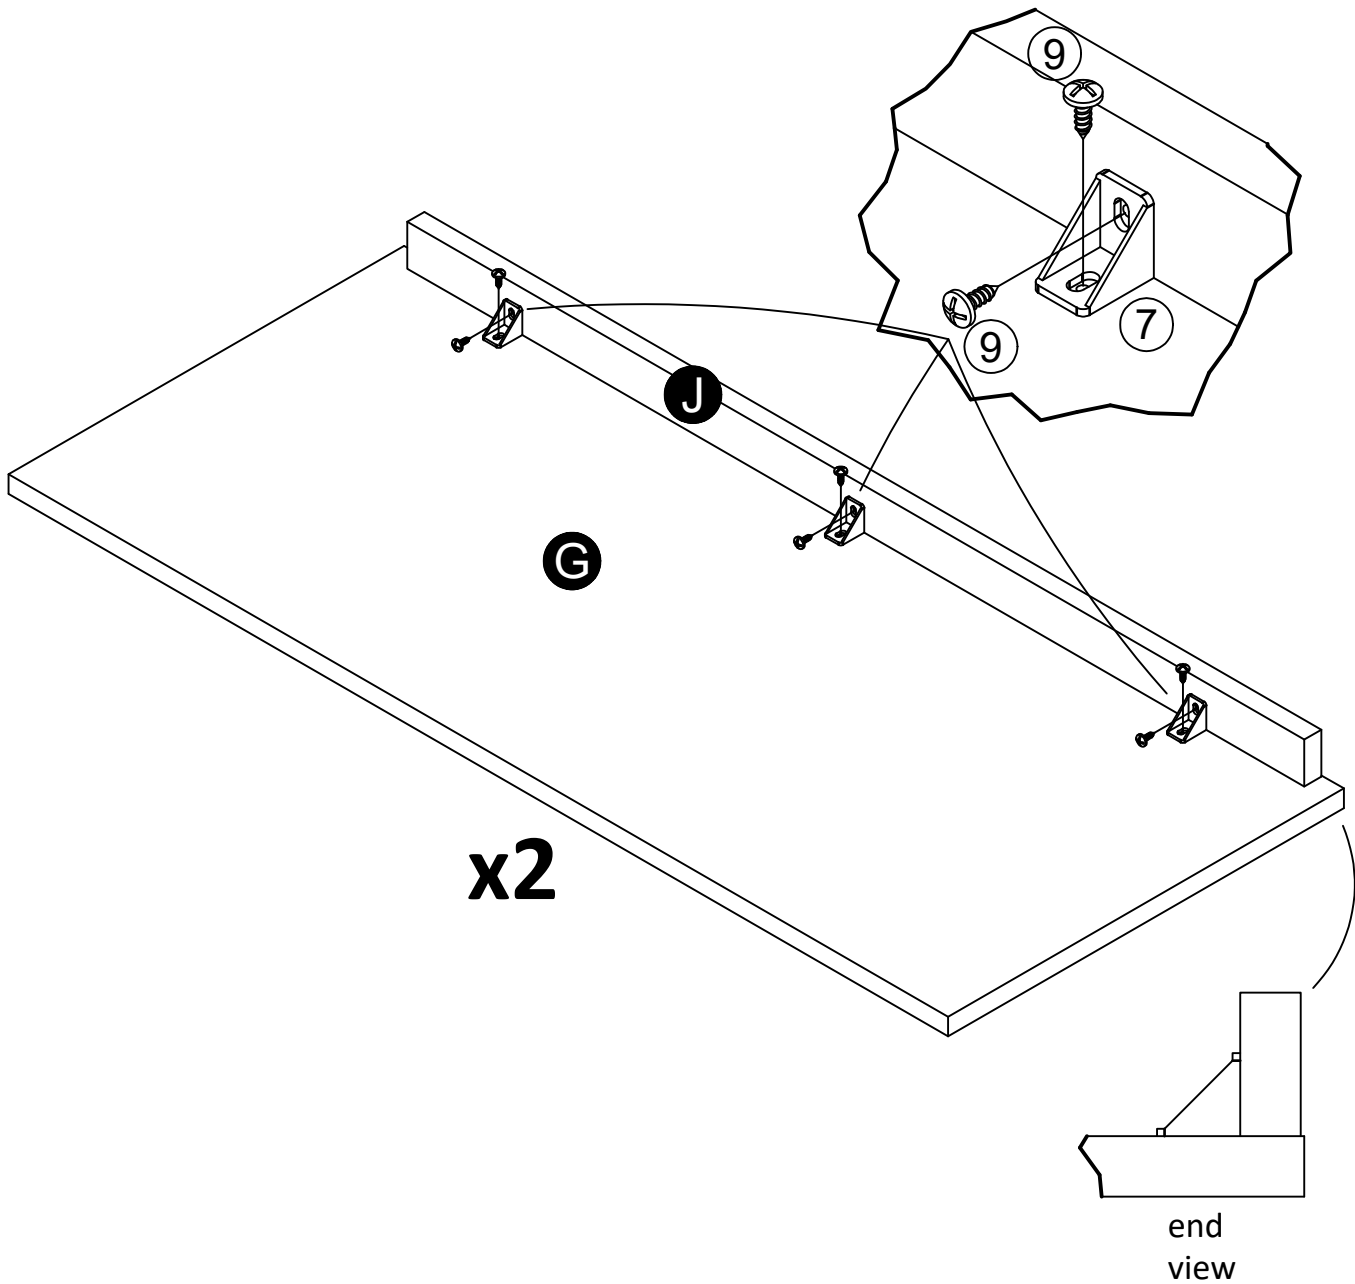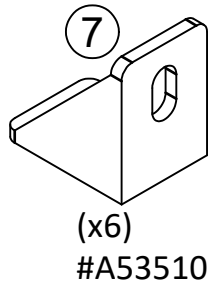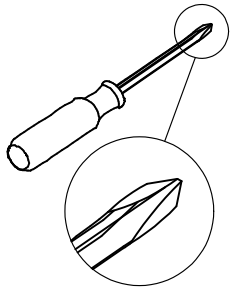


STEP 18




(x8)
#A80250

 Insert shelf supports (10) into the holes at the desired level. With the adjustable shelf position at an angle, position into your unit and onto the shelf supports.

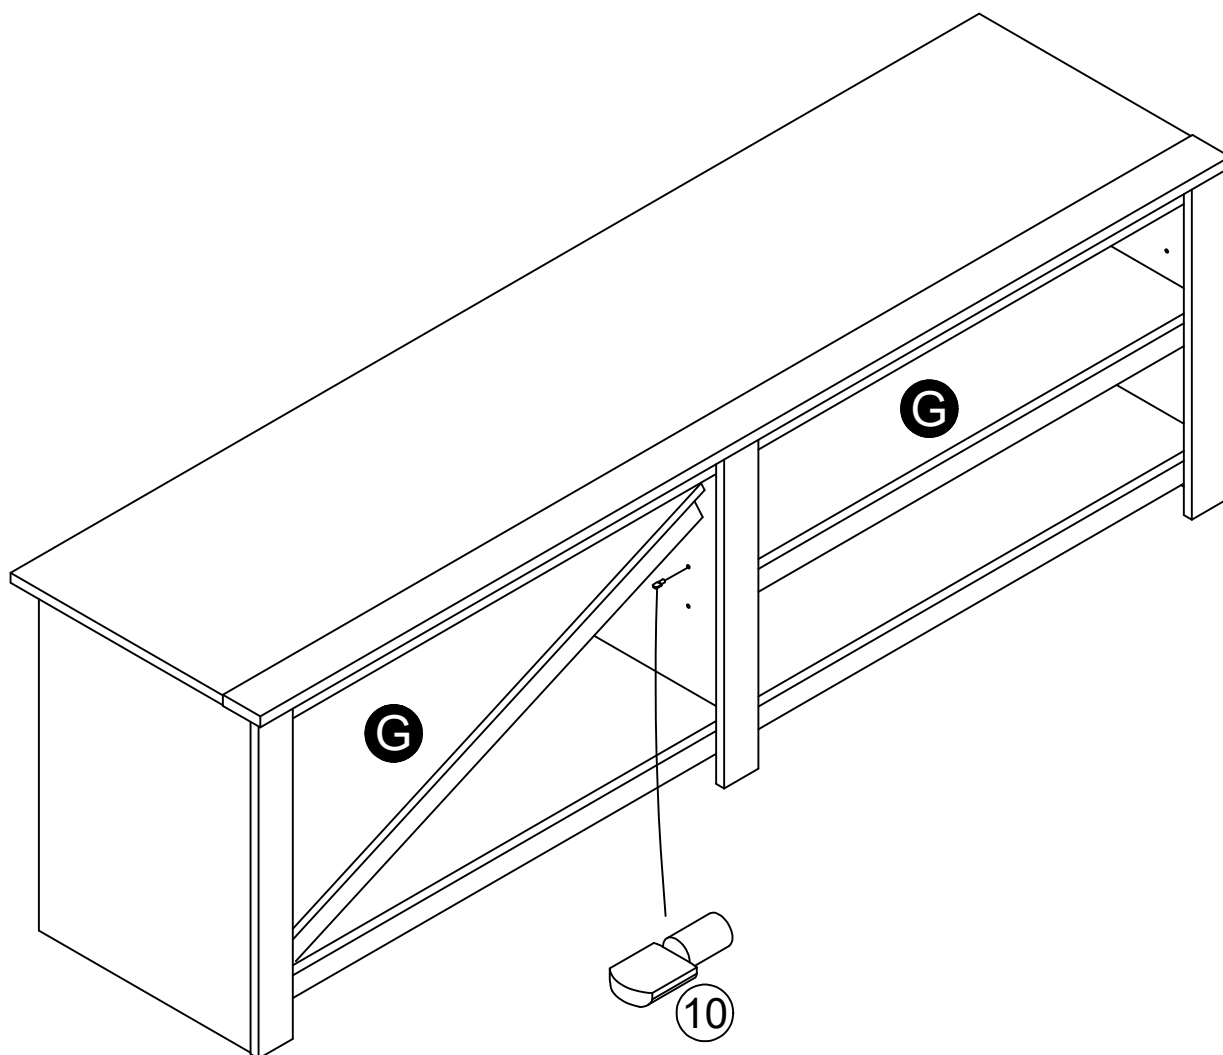

Maximum Loads

 This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

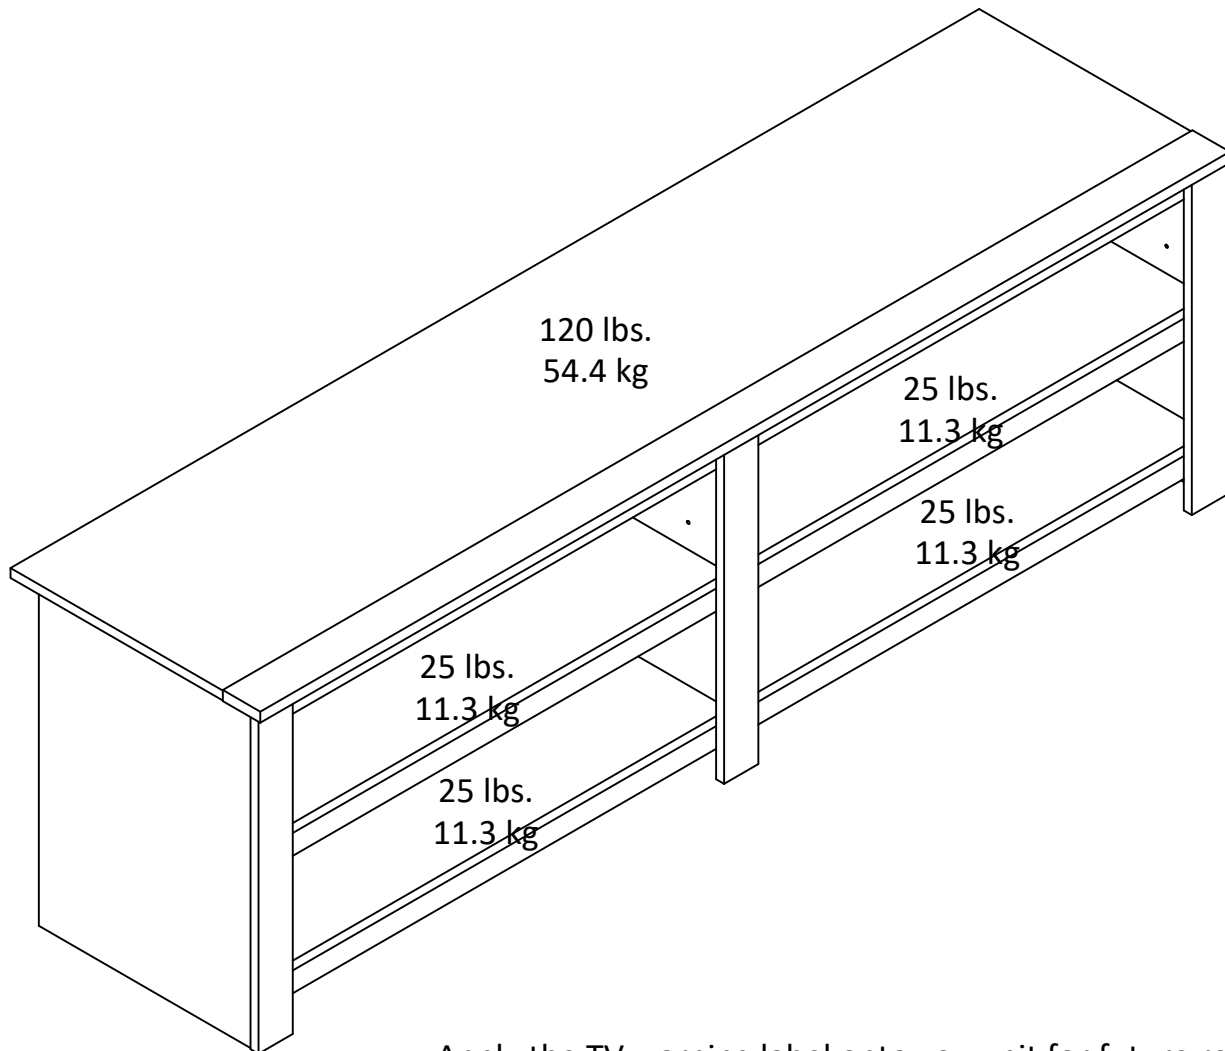

Apply the TV warning label onto you unit for future reference.

Certificate of Conformity

1. This certificate applies to the Dorel Home Furnishings, Inc. product identified by this instruction manual.
2. This certificate applies to compliance of this product with the CPSC Ban on Lead-Containing Paint (16 CFR 1303).
3. This product is distributed by: Dorel Home Furnishings, Inc.
410 East First Street South
Wright City, MO 63390
636-745-3351
4. Site of Manufacture: Cornwall, ON
5. See front page of instruction manual for date of manufacture.

Register your product to receive the following:



- * New trend details - sneak peek on what's new
- * Surveys - have a voice within our community
- * Exclusive deals and discount codes
- * Quick and easy replacement part service

To register your product, visit ameriwoodhome.com

5 Star Rating



Visit your local retailer's website, rate your purchased product and leave us some feedback!

We would like to extend a big "Thank You" to all of our customers for taking the time to assemble this Ameriwood Home product, and to give us your valuable feedback.

*Thank
You!*

Cubierta Delantera

Este libro de instrucciones contiene información **IMPORTANTE** de seguridad. Por favor lea y manténgalo para referencia en el futuro.

No Regrese este producto! Comuníquese con nuestro amigable equipo de servicio al cliente para obtener ayuda.

Llámenos al: 1-800-489-3351 (Gratis) Lunes - Viernes 9am - 5pm CST

Visitar: www.ameriwoodhome.com

PRECAUCION

Este mueble puede volcarse y causar graves heridas y/o muerte.

Anclar el mueble a un poste de madera en la pared (si esto se requiere).

No Permita que los niños monten el mueble.

Mantenga los artículos más pesados en los cajones de abajo.

Consejos Útiles (página 2)

- Abra su artículo en el área donde usted planea utilizarlo para evitar levantar y moverlo menos
- Identificar, ordenar y contar las piezas antes de intentar ensamblar
- Las clavijas de compresión se golpean con un martillo
- Las diapositivas están marcadas con una R (derecha) y L (izquierda) para la colocación correcta
- Asegúrese de que siempre este el punto localizado en la parte superior de bloqueador de leva este volteado hacia borde exterior
- Utilizar todos los clavos para el panel de atrás y distribuirlos por igual
- El panel de atrás debe utilizarse para asegurarse de que la unidad quede fija y firme
- No use químicas fuertes ni limpiadores abrasivos en este artículo
- Nunca empuje, tire ni arrastre los muebles

Antes de Que Empieces (página 3)

- Lea cuidadosamente cada paso y siga el orden correcto
- Separar y contar todas sus piezas y hardware
- Dése suficiente espacio para el proceso de ensamble
- Tenga las siguientes herramientas: destornillador de cabeza plana, #2 cabeza Phillips
Destornillador y martillo
- Precaución: Si usa un taladro electrónico o un destornillador eléctrico para atornillar, por favor asegúrese que deje de atornillar cuando el tornillo este apretado. Fallar hacer esto puede causar barrer el tornillo.

Sistema de fijar el bloqueo de leva (página 3)

Este sistema de fijar el bloqueo de leva será usado en todo el proceso ensamble.

Página 7

Ajuste la placa de conexión (11) lo más atrás posible, manteniendo la unión entre la parte superior (E) y el riel de TV (H) apretadas.

Página 8

Con los soportes angulares (7) y los tornillos (9), fije dos rieles horizontales (J) al riel del televisor (H) como se muestra.

Página 10

Con los soportes angulares (7) y los tornillos (9), fije dos rieles horizontales (J) a la parte inferior (F) como se muestra.

Página 11

Coloque un soporte en ángulo (7) en ambos extremos del soporte inferior (I) como se muestra. Fije el soporte inferior (I) a la parte inferior (F) con los soportes en ángulo (7) y los tornillos (9) como se muestra.

Página 12

Orientación adecuada de bloqueo de leva.
Vista desde un extremo.

Página 13

Orientación adecuada de bloqueo de leva.

Página 14

Orientación adecuada de bloqueo de leva.
Tendrá que golpear el conector (5) con un martillo para insertarlo completamente. Asegúrese de que el conector esté en la posición que se muestra antes de empujar en el orificio.

Página 15

Orientación adecuada de bloqueo de leva.

Página 17

Coloque la partición (C) contra la parte posterior (D) de modo que los pernos del conector (4) encajen en los conectores (5). Gire el tornillo en el centro del conector para bloquearlo en su lugar.
Gire hacia la derecha para bloquear en su lugar.
Tacos de madera en los bordes superiores.

Página 19

Coloque la moldura central (L) contra la partición (C) de modo que los pernos del conector (4) encajen en los conectores (5). Gire el tornillo en el centro del conector para bloquearlo en su lugar.
Gire hacia la derecha para bloquear en su lugar.
Tacos de madera en los bordes superiores.

Página 20

Asegúrese de colocar el soporte inferior (I) en los paneles izquierdo y derecho (A&B) con los tornillos (9).

Página 21

Con cuidado, coloque su unidad en posición vertical como se muestra.

Página 22

Con la ayuda de otra persona, coloque la parte superior y el componente del riel de TV en el panel izquierdo (A), el panel derecho (B), la partición (C) y la parte posterior (D) como se muestra. Gire los bloqueos de leva para bloquear en su lugar.

Página 23

Vista desde un extremo

Página 24

Inserte los soportes del estante (10) en los orificios al nivel deseado. Con la posición del estante ajustable en ángulo, colóquela en su unidad y en los soportes del estante.

Página 25

CARGA MAXIMA

Esta unidad ha sido diseñada para soportar la carga máxima anotada. El exceder estos límites puede causar inestabilidad, colapsarse y/o causar serias lesiones.

Aplique la etiqueta de advertencia de TV en su unidad para futuras referencias.

Página 26

Registre su producto para recibir lo siguiente:

- * Detalles de nuevas tendencias - Vistazo a lo nuevo
- * Encuestas - alee su voz entre su comunidad
- * Códigos de ofertas y descuentos exclusivos
- * Fácil y rápido servicio de partes de remplace

Para registrar su producto, visite ameriwoodhome.com

Clasificación de 5 estrellas

Visite el sitio web de su tienda local, califique su comprado y denos sus comentarios!

Nos gustaría enviar un gran "Agradecimiento" a todos nuestros clientes por tomarse el tiempo de ensamblar este producto de Ameriwood Home, y por darnos sus valiosos comentarios.

Gracias