 


1524900WCOM Fireplace/TV Stand

Ameriwood
HOME

Date of Purchase ____ / ____ / ____
Lot Number:

B341524900COM0E

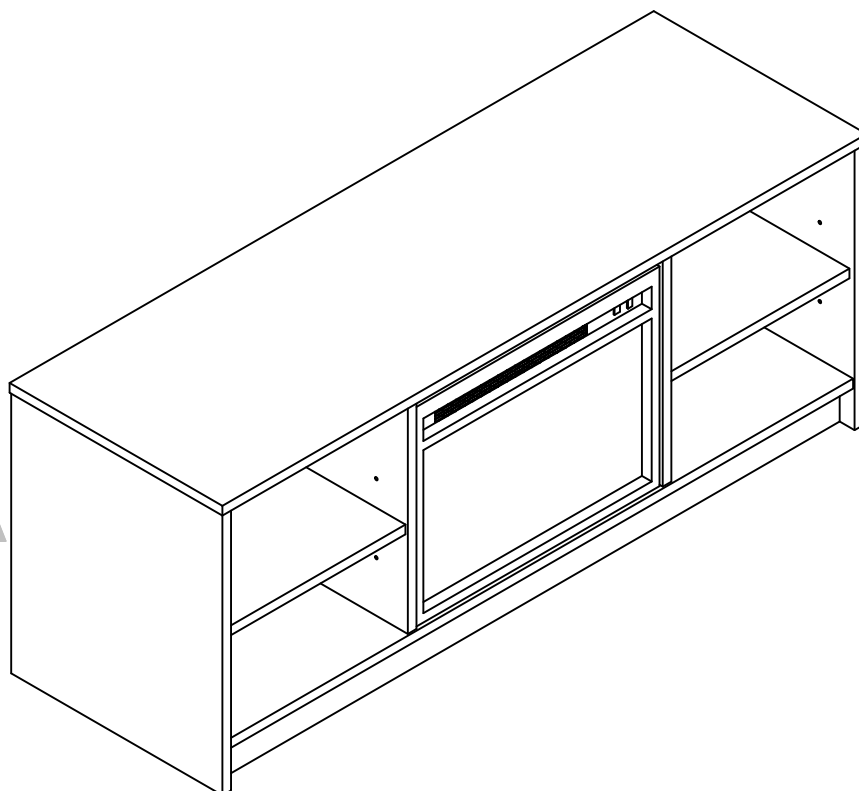

Do Not Return This Product!

Contact our customer service team for help first.

Call: 1-800-489-3351 (toll free)

 
Visit: www.ameriwoodhome.com

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

WARNING

Unit can tip over causing severe injury or death.

- Do Not allow children to climb on unit
- Put heavy items on lower shelves
- Two people required for assembly

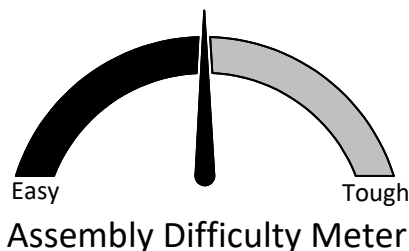

Follow Ameriwood Home

 


Contact Us!

Do NOT return this product!

Contact our friendly customer service team first for help.

Call us!
1-800-489-3351
Monday-Friday

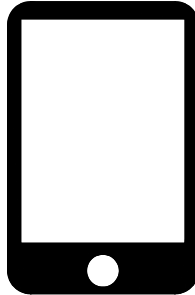

Visit ameriwoodhome.com to view the
limited warranty valid in the U.S. and Canada.

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Wood dowels are lightly tapped in with a hammer.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.

 


- Do NOT use harsh chemicals or abrasive cleaners on this item.





- Never push, pull, or drag your furniture.



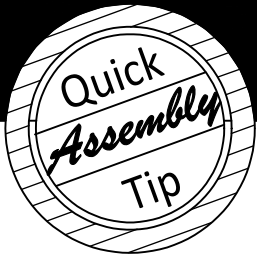


Before You Start

  - ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
Parts are labeled on the surface or edge of the part
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: #2 Phillips Head Screwdriver, a ruler or tape measure and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

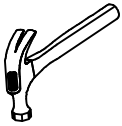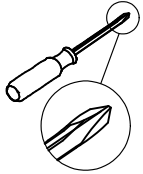


Cam Lock Fastening System

 This Cam Lock Fastening System will be used throughout the assembly process.

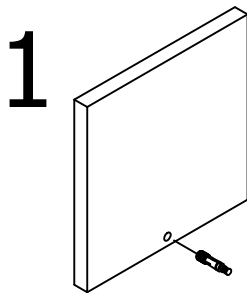


Press CAM BOLT into hole.

 2

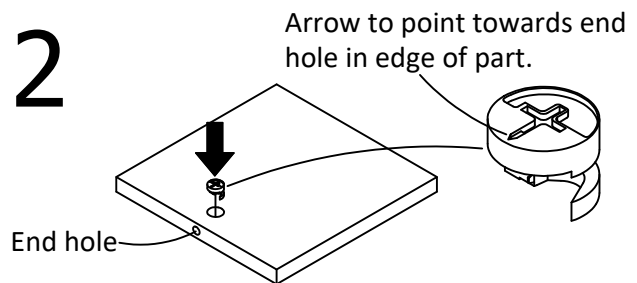


Press CAM LOCK into hole.

 3

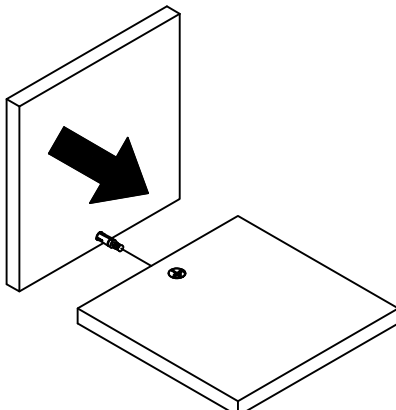


Press parts together so CAM BOLT inserts into edge hole.

 4

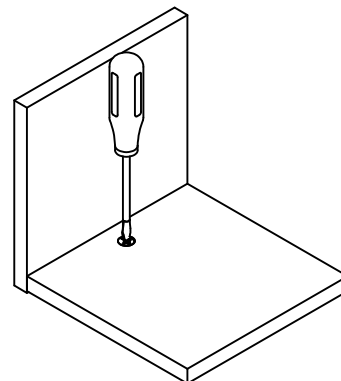



 
Using a screwdriver, turn the CAM LOCK clockwise to lock the CAM LOCK and CAM BOLT into their holes and fastening parts together.

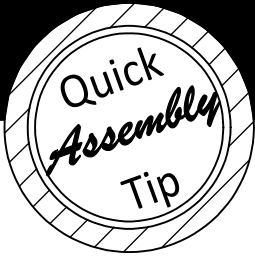

Before You Start

Please Note:

   
You may need to **lightly tap** the wood dowels with a hammer into the holes during your assembly process.

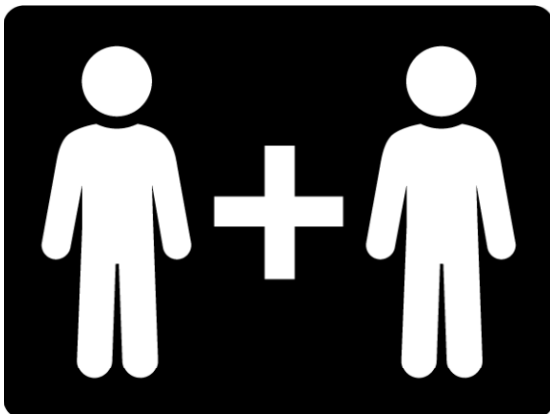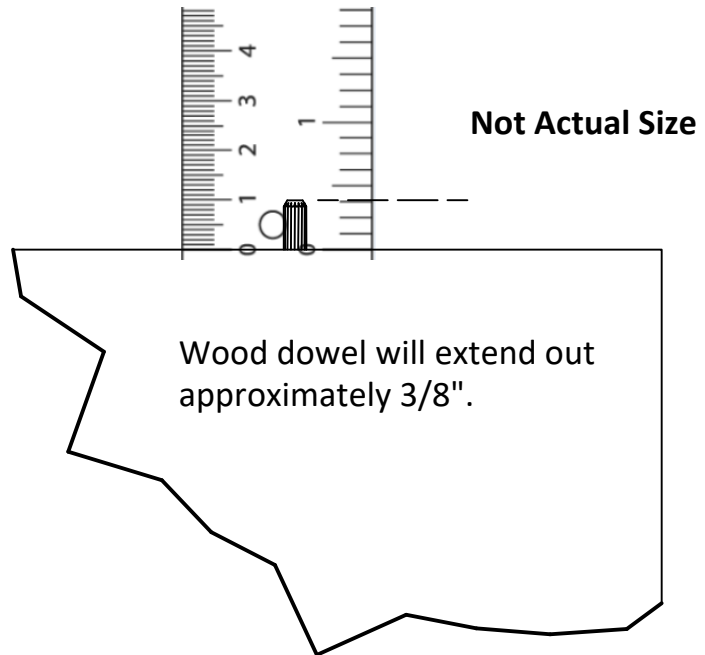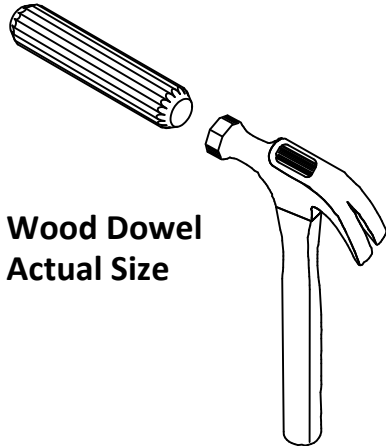


2 PEOPLE NEEDED FOR ASSEMBLY
CAUTION: Failure to use 2 people for assembly could result in unit damage or personal injury

Board Identification

 
Not actual size

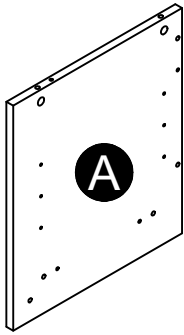


Left Panel
31524900010

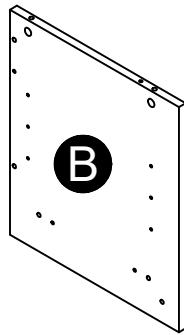 


Right Panel
31524900020

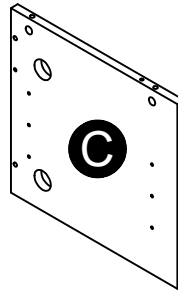 


Left Partition
31524900030

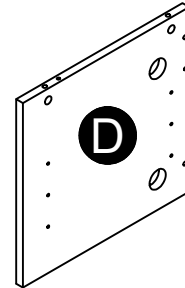 


Right Partition
31524900040

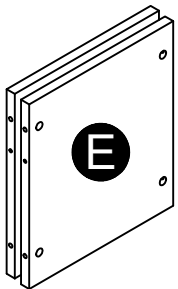 


Back (x2)
31524900050

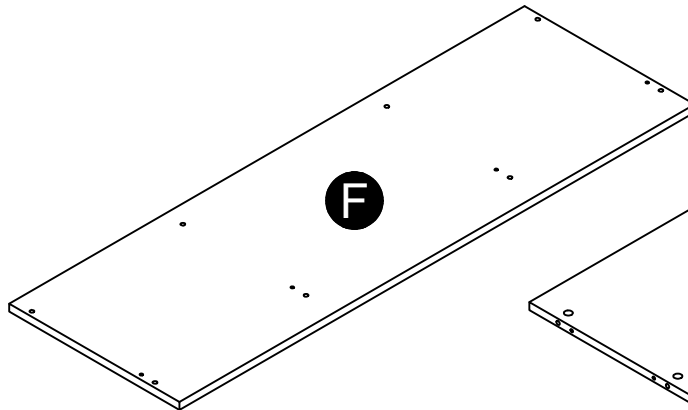 


Top
31524900060

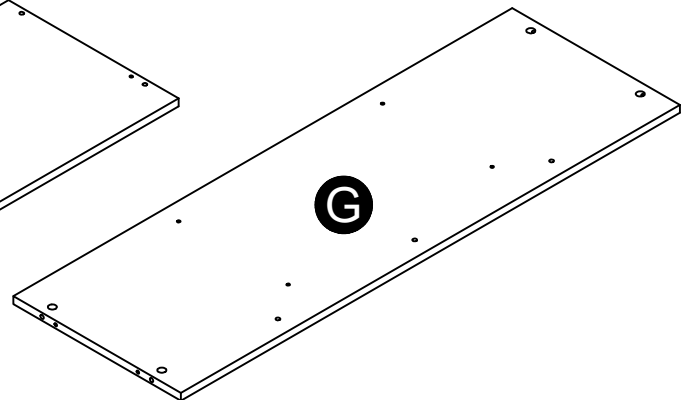 

Bottom
31524900070

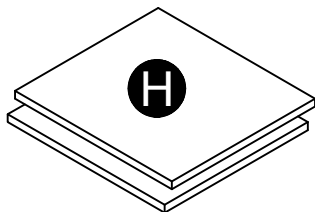 


Adjustable Shelf (x2)
31524900080

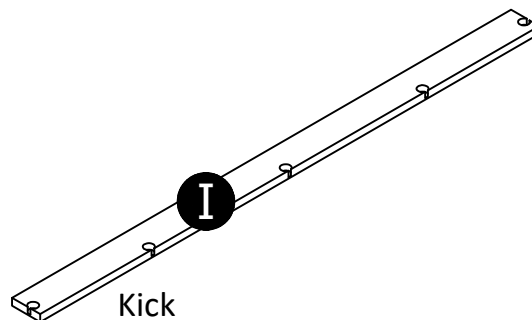 

Kick
31524900090

Board Identification

 
Not actual size

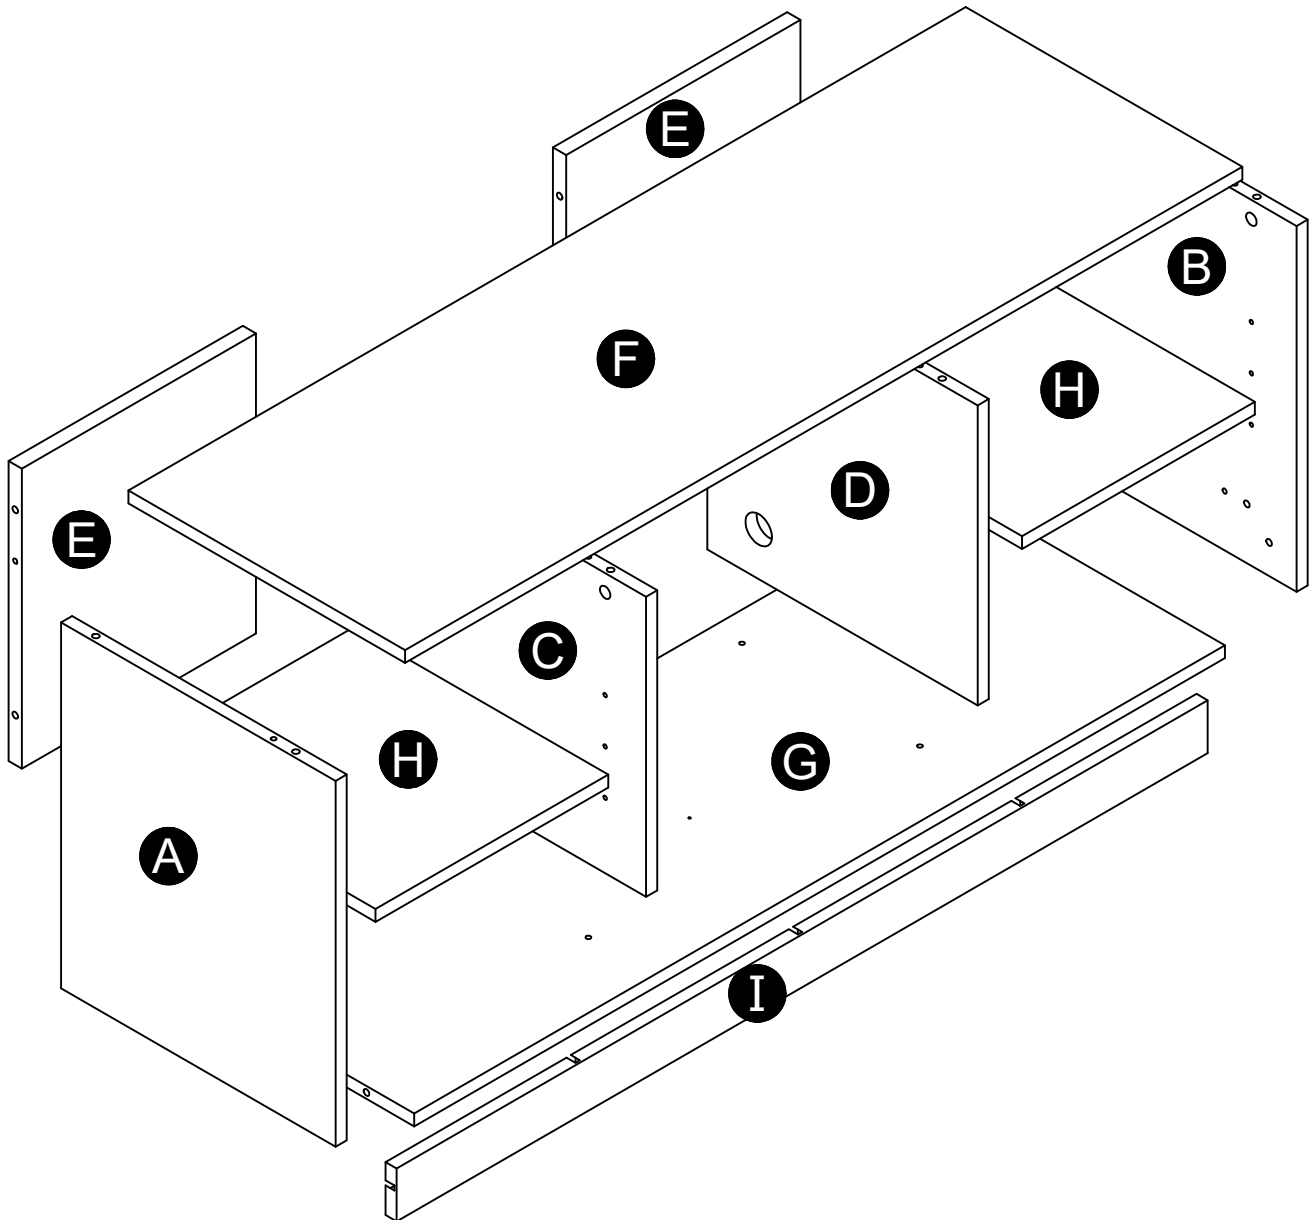

Note:
Your unit may contain extra hardware.

Part List

 Actual Size

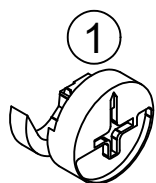


(x20)
#A22700
cam lock




(x20)
#A22710
cam bolt



 
(x12)
#A21670
wood dowel

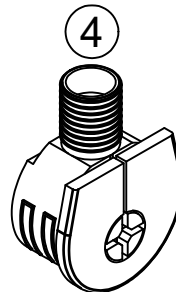


(x5)
#A22760
quickloc

 


(x4)
#A23030
confirmat

 

(x3)
#A12120
7/16" screw

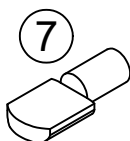 


(x8)
#A80250
shelf support

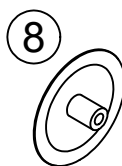 


(x8)
#A245056
decorative cam cover

 
Not Actual Size

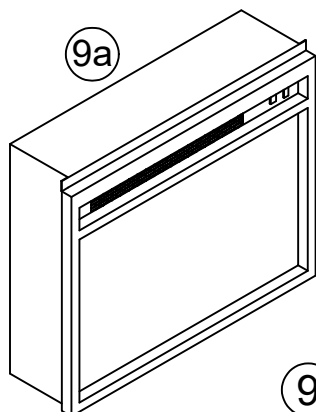

(x1)
#A95060
fireplace insert


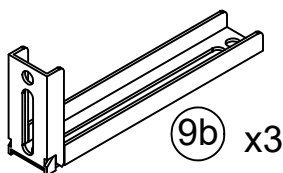 


(x3)

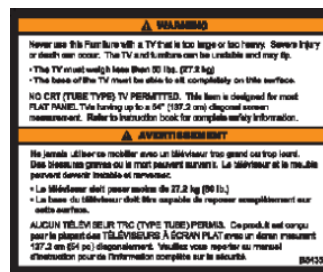 


(x1)
#B64355
TV warning label

  STEP 1

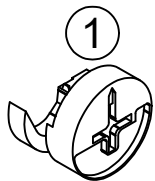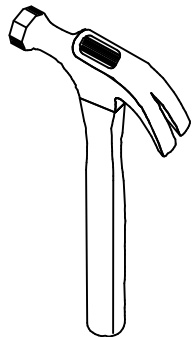



(x2)

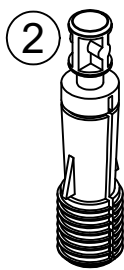 

(x4)




  (x1)

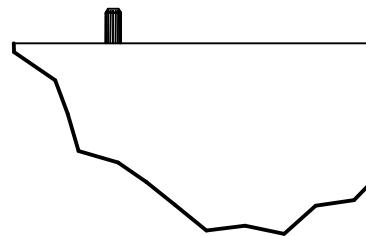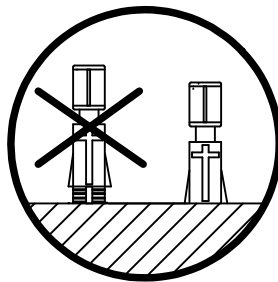


**Dowels extend out 3/8".
For more details, please
see page 4**

 
Insert two cam locks (1), four cam bolts (2) and one wood dowel (3) into the Left Panel (A).

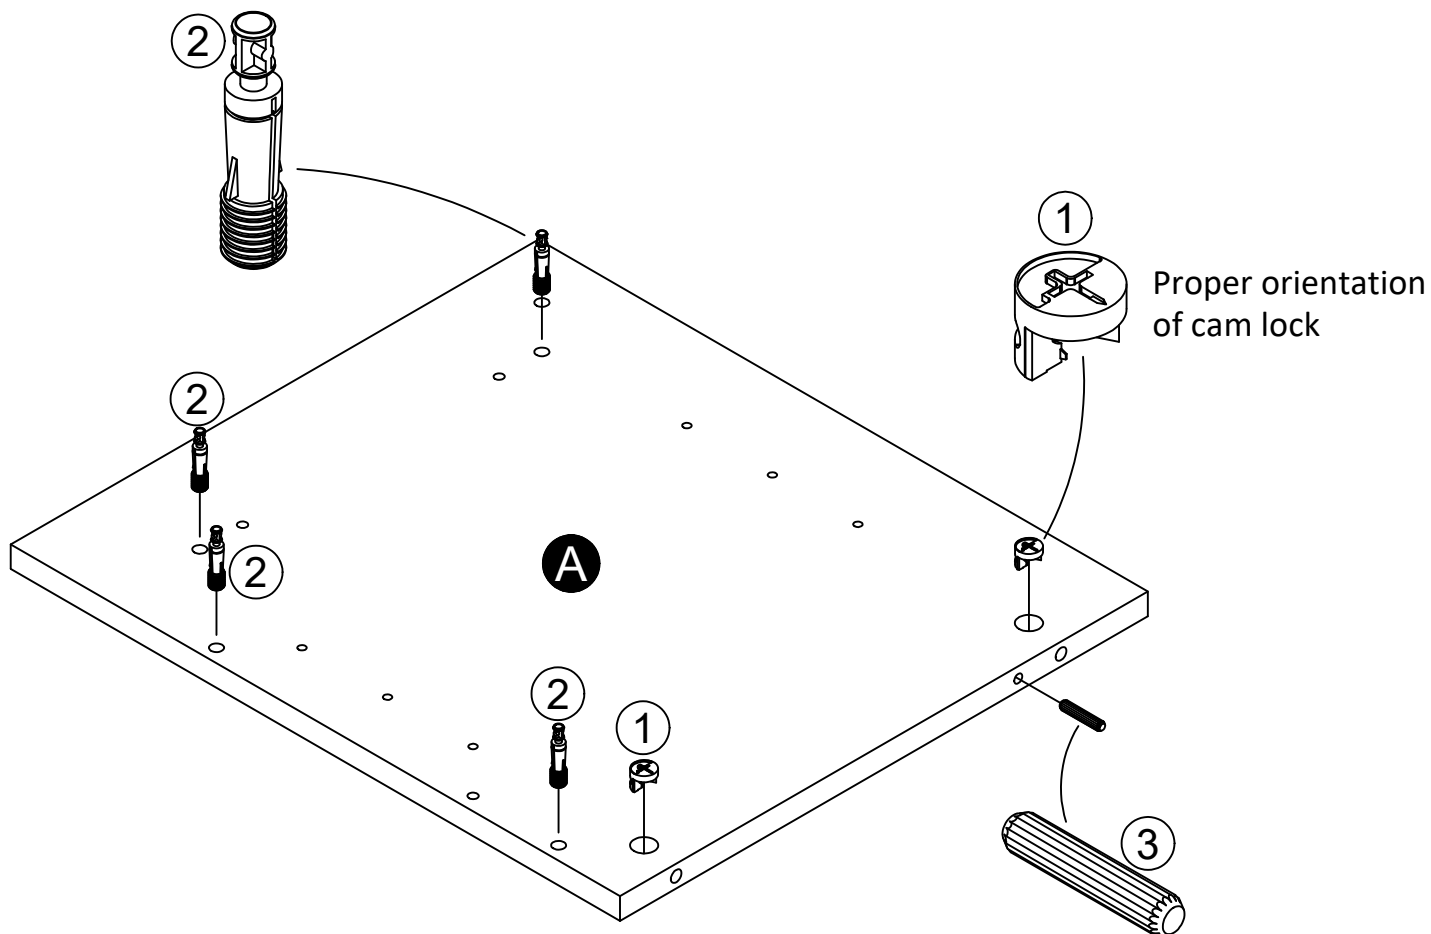

 
STEP 2

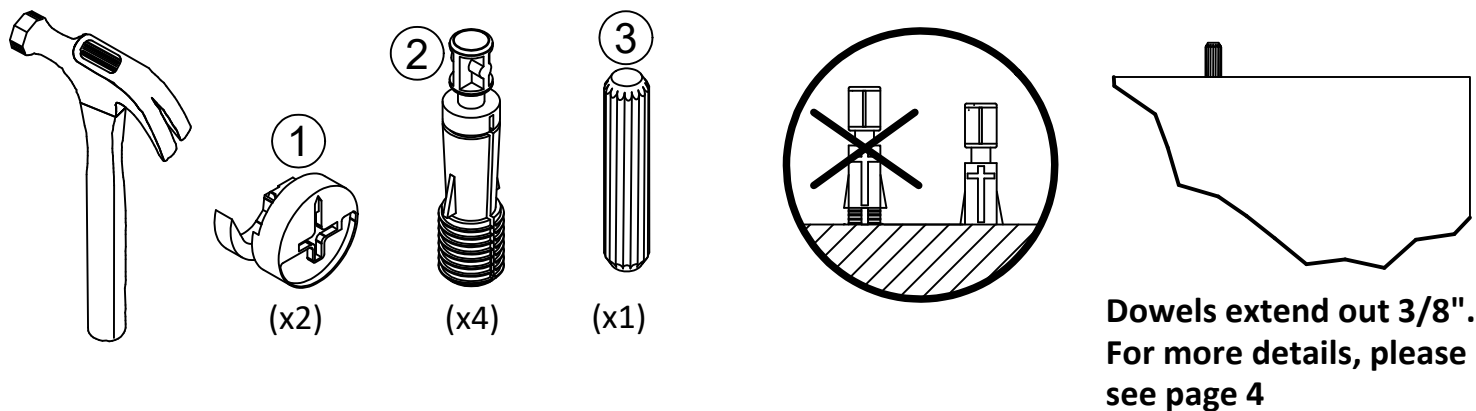

 
Insert two cam locks (1), four cam bolts (2) and one wood dowel (3) into the Right Panel (B).

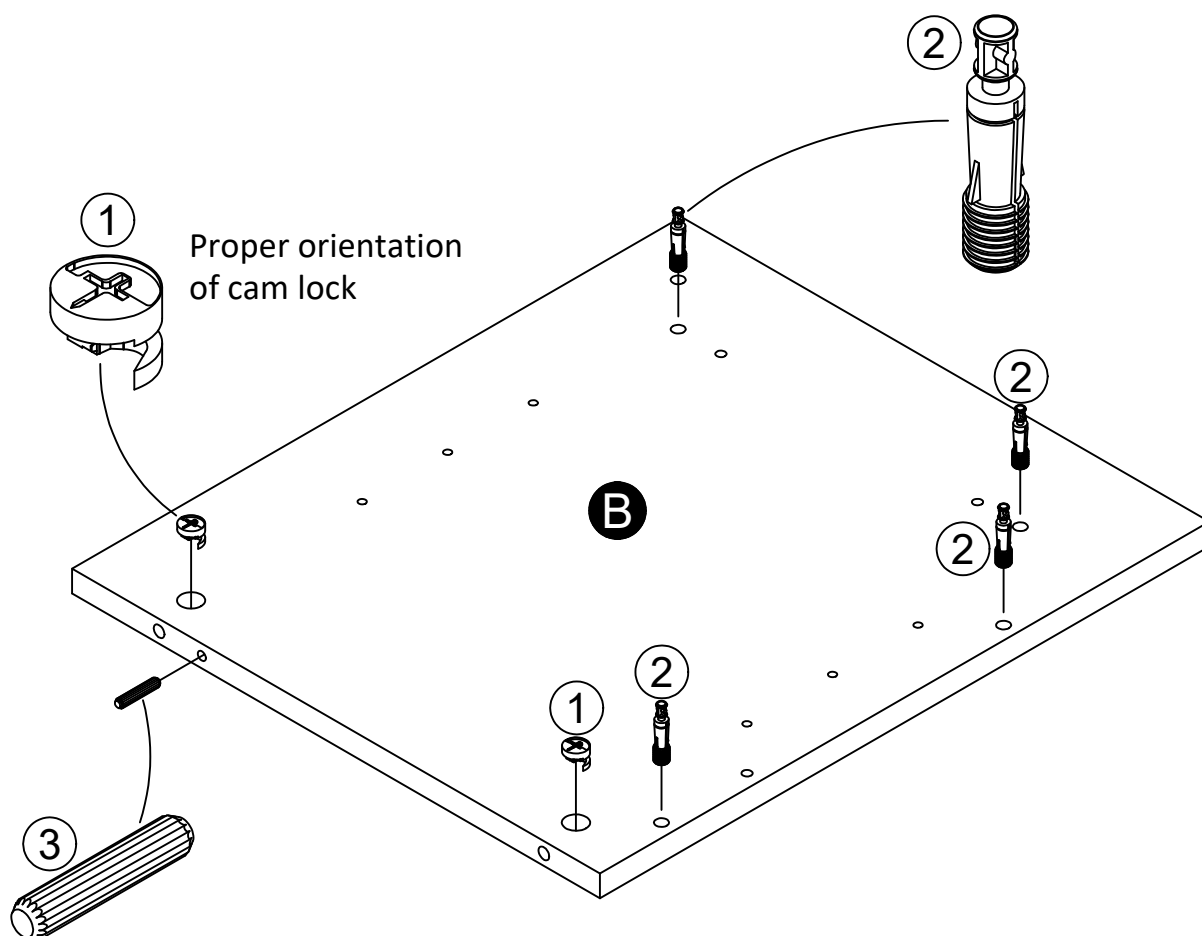






 
STEP 3

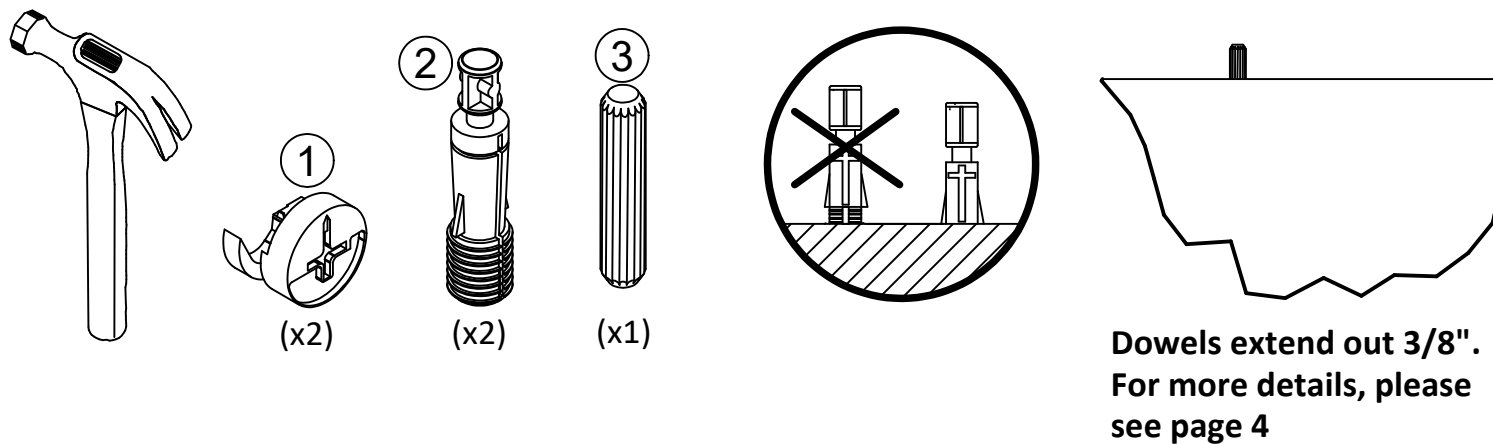

 Insert two cam locks (1), two cam bolts (2) and one wood dowel (3) into the Left Partition (C).

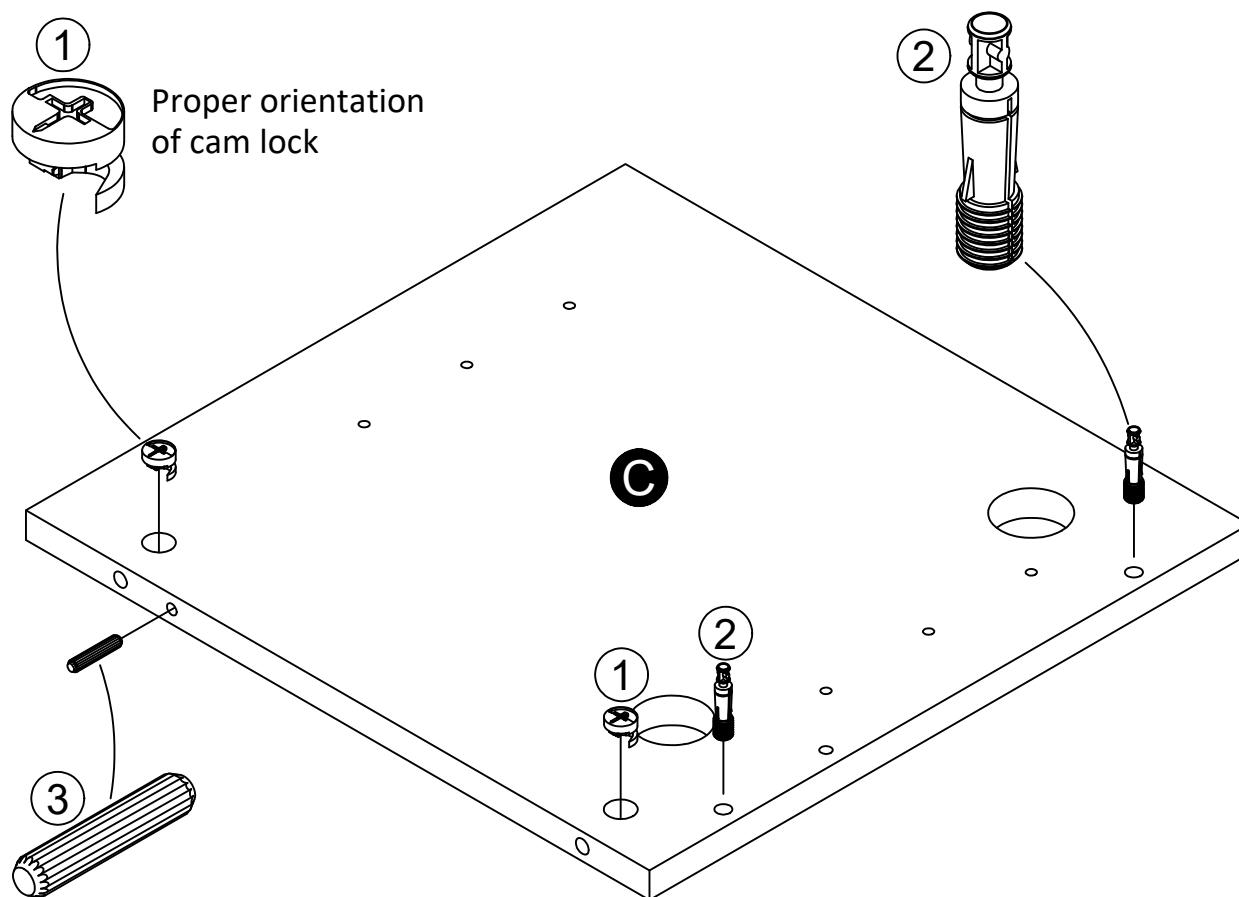


      STEP 4

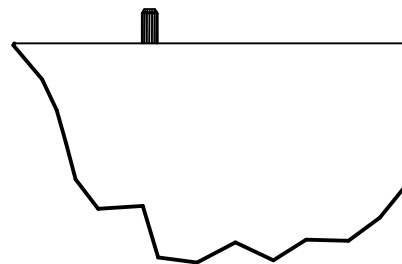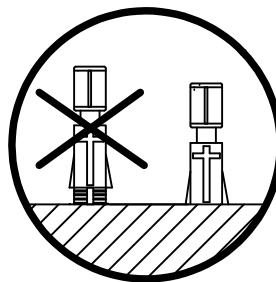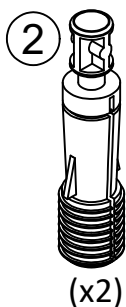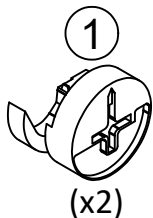
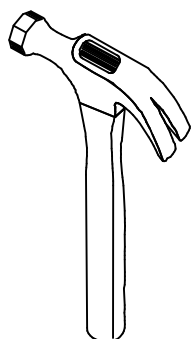


**Dowels extend out 3/8".
For more details, please
see page 4**

 Insert two cam locks (1), two cam bolts (2) and one wood dowel (3) into the Right Partition (D).

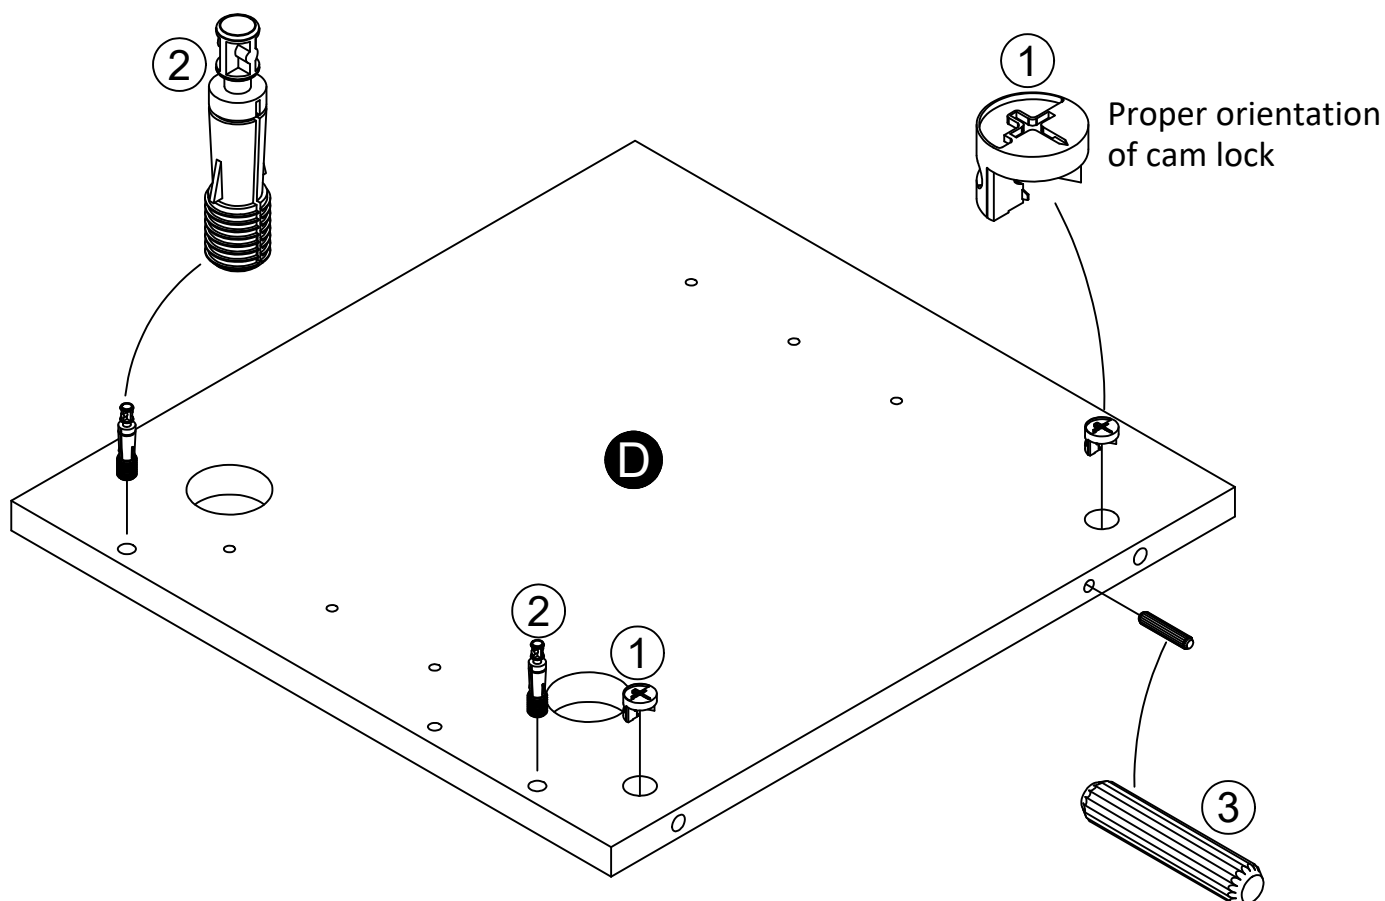


  STEP 5

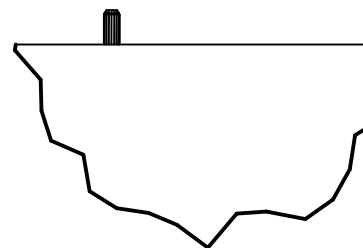
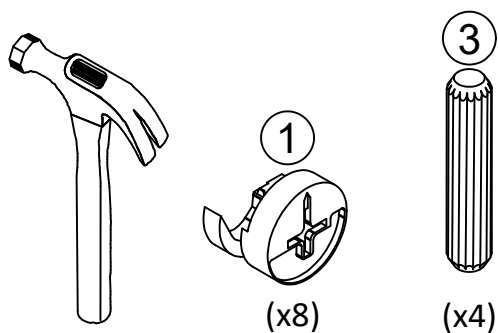


Dowels extend out 3/8".
For more details, please
see page 4

 
Insert four cam locks (1) and two wood dowel (3) into each Back (E).

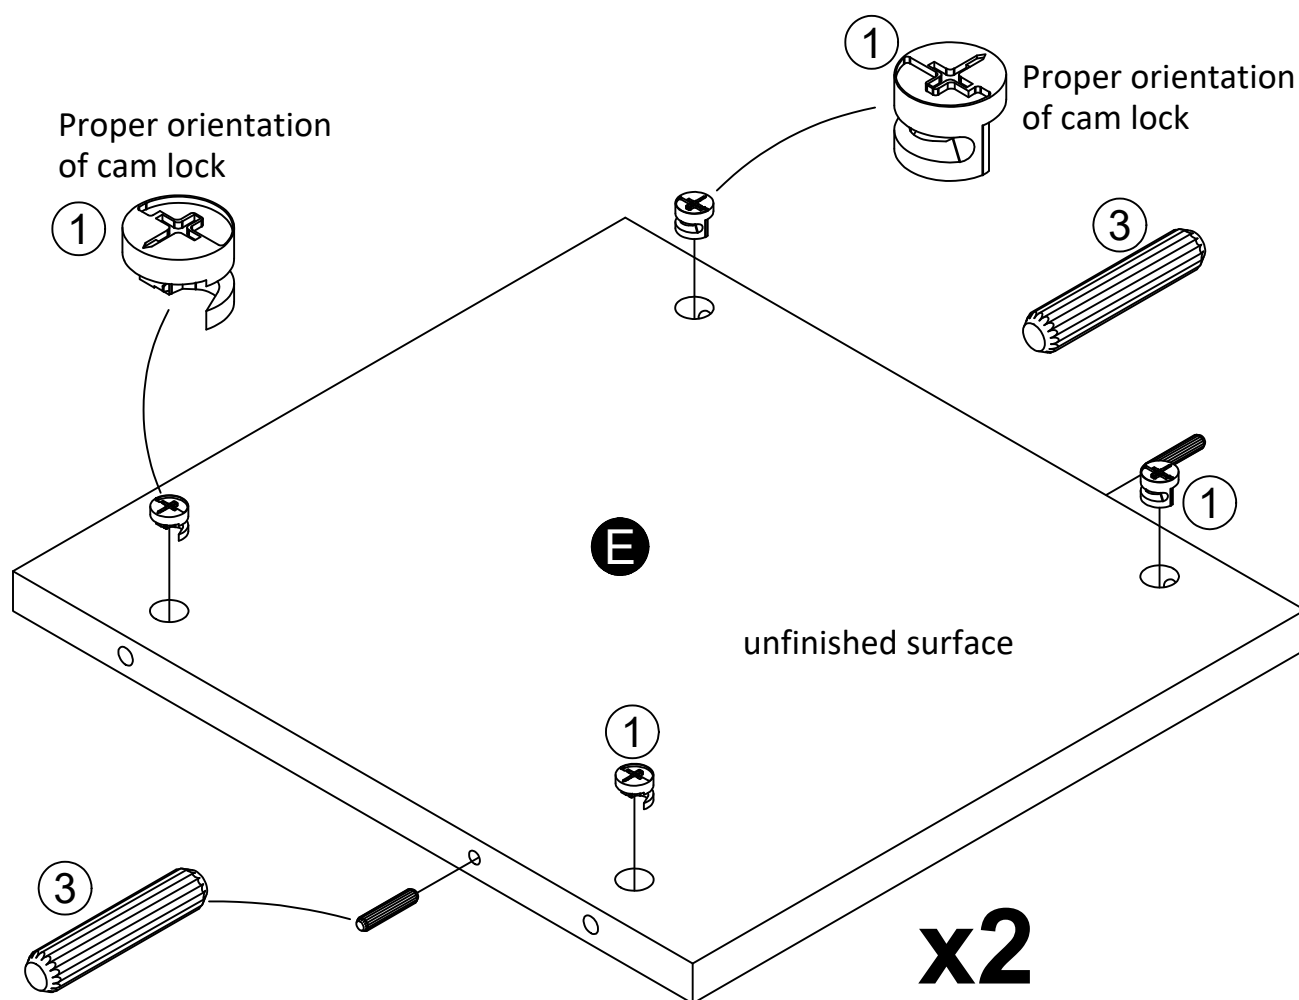

 
 
STEP 6

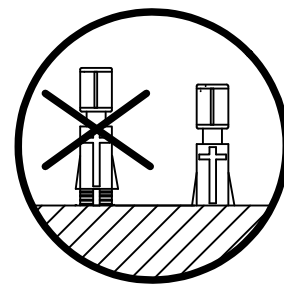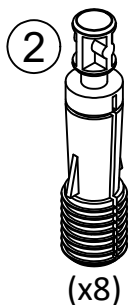

 Press in eight cam bolts (2) into the Top (F).

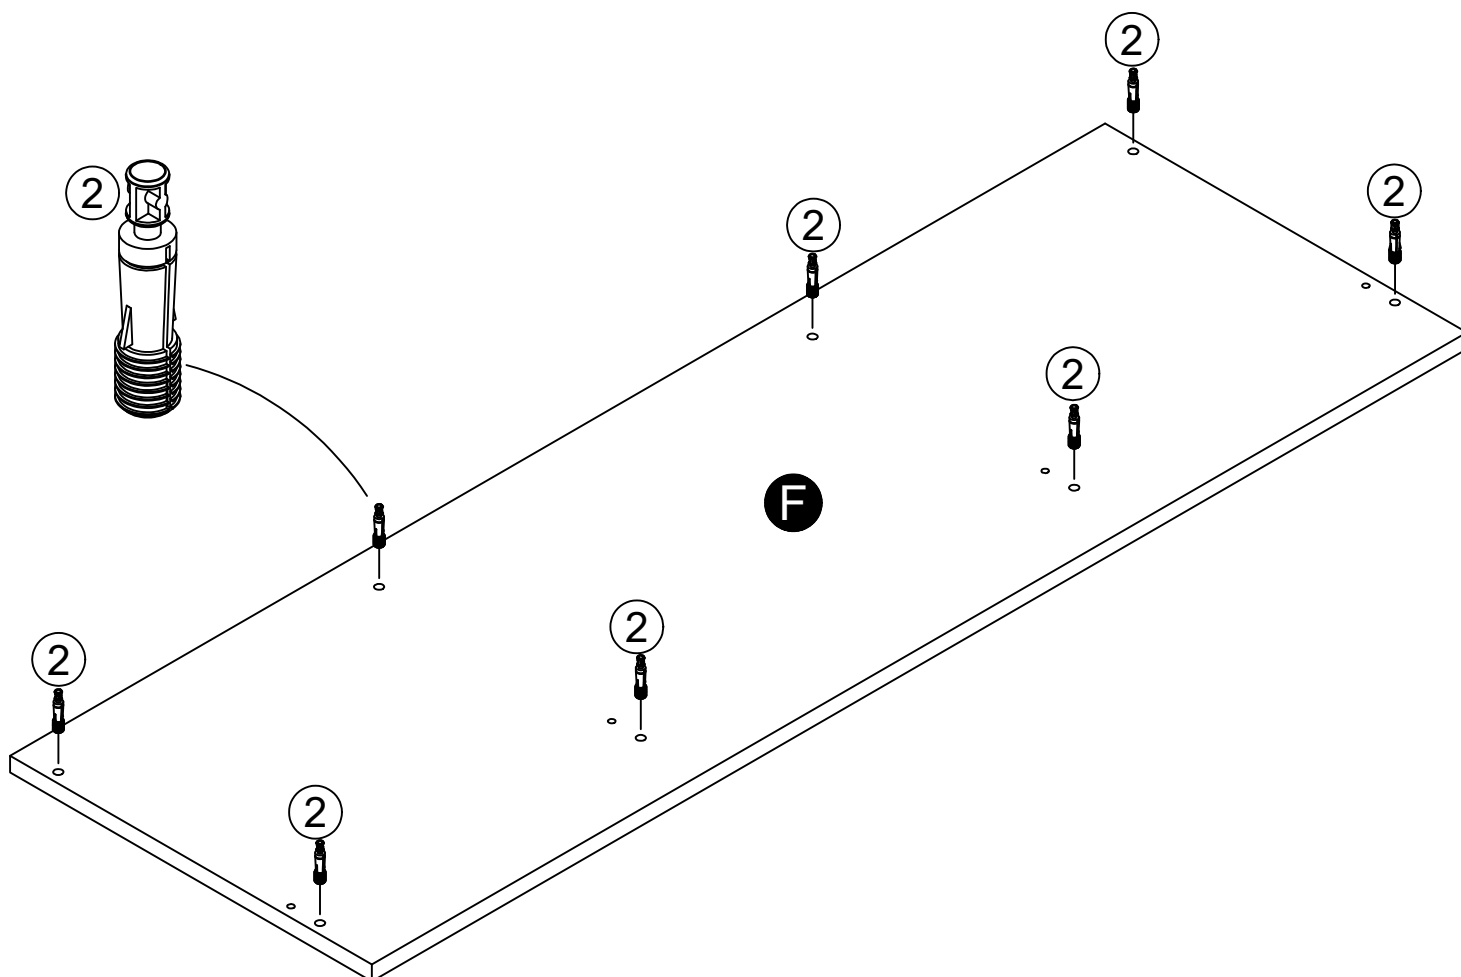


  STEP 7

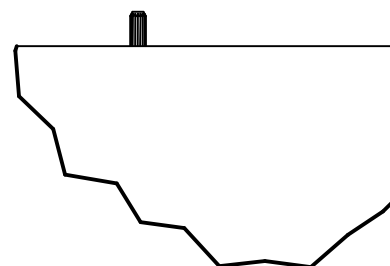
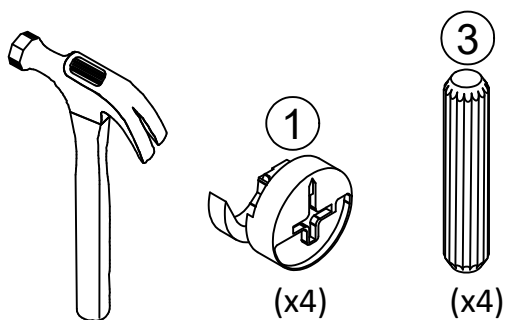


Dowels extend out 3/8".
For more details, please
see page 4

 
Insert four cam locks (1) and 4 wood dowels (3) into Bottom (G).

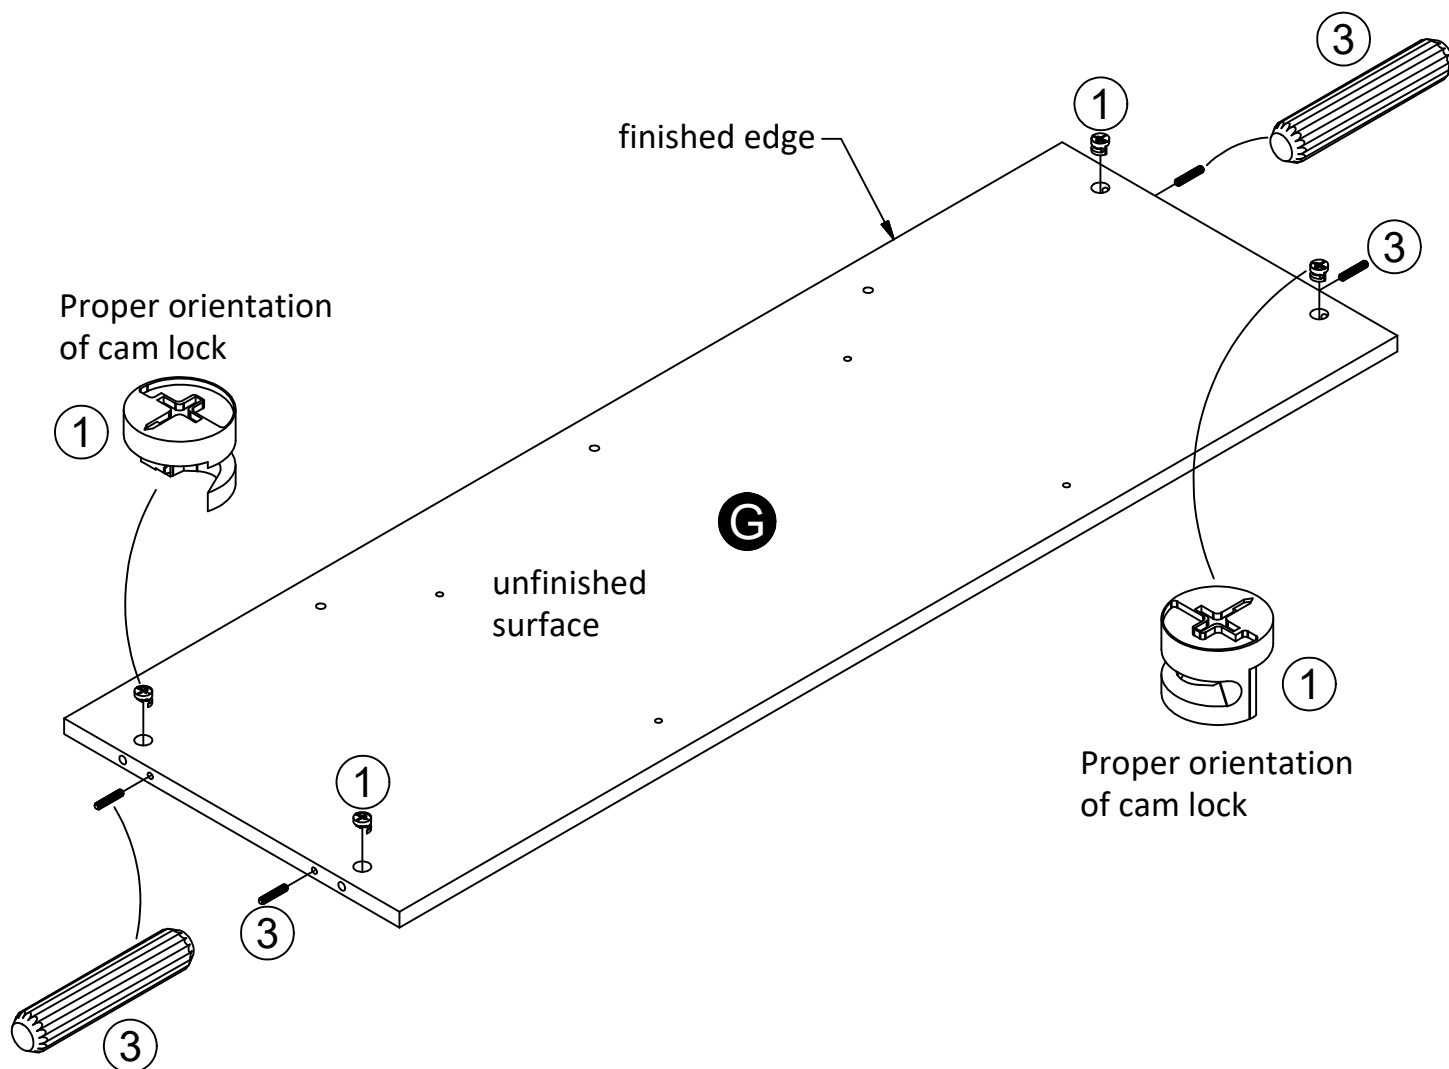

 
 
STEP 8

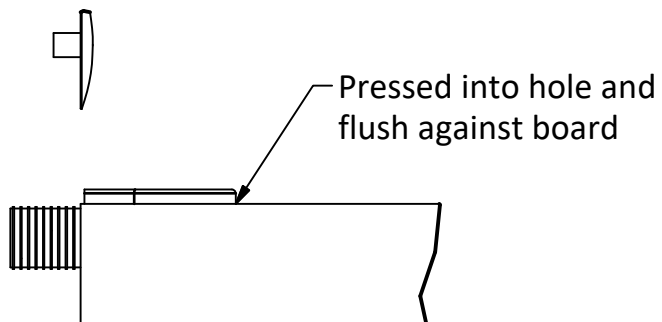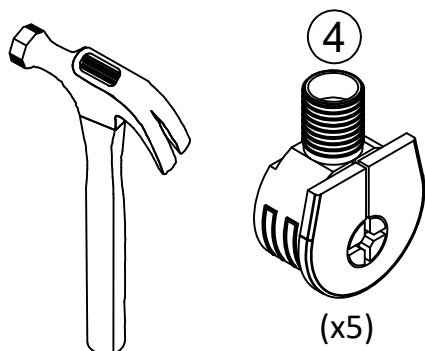

 Insert five quicklocs (4) into Kick (I).

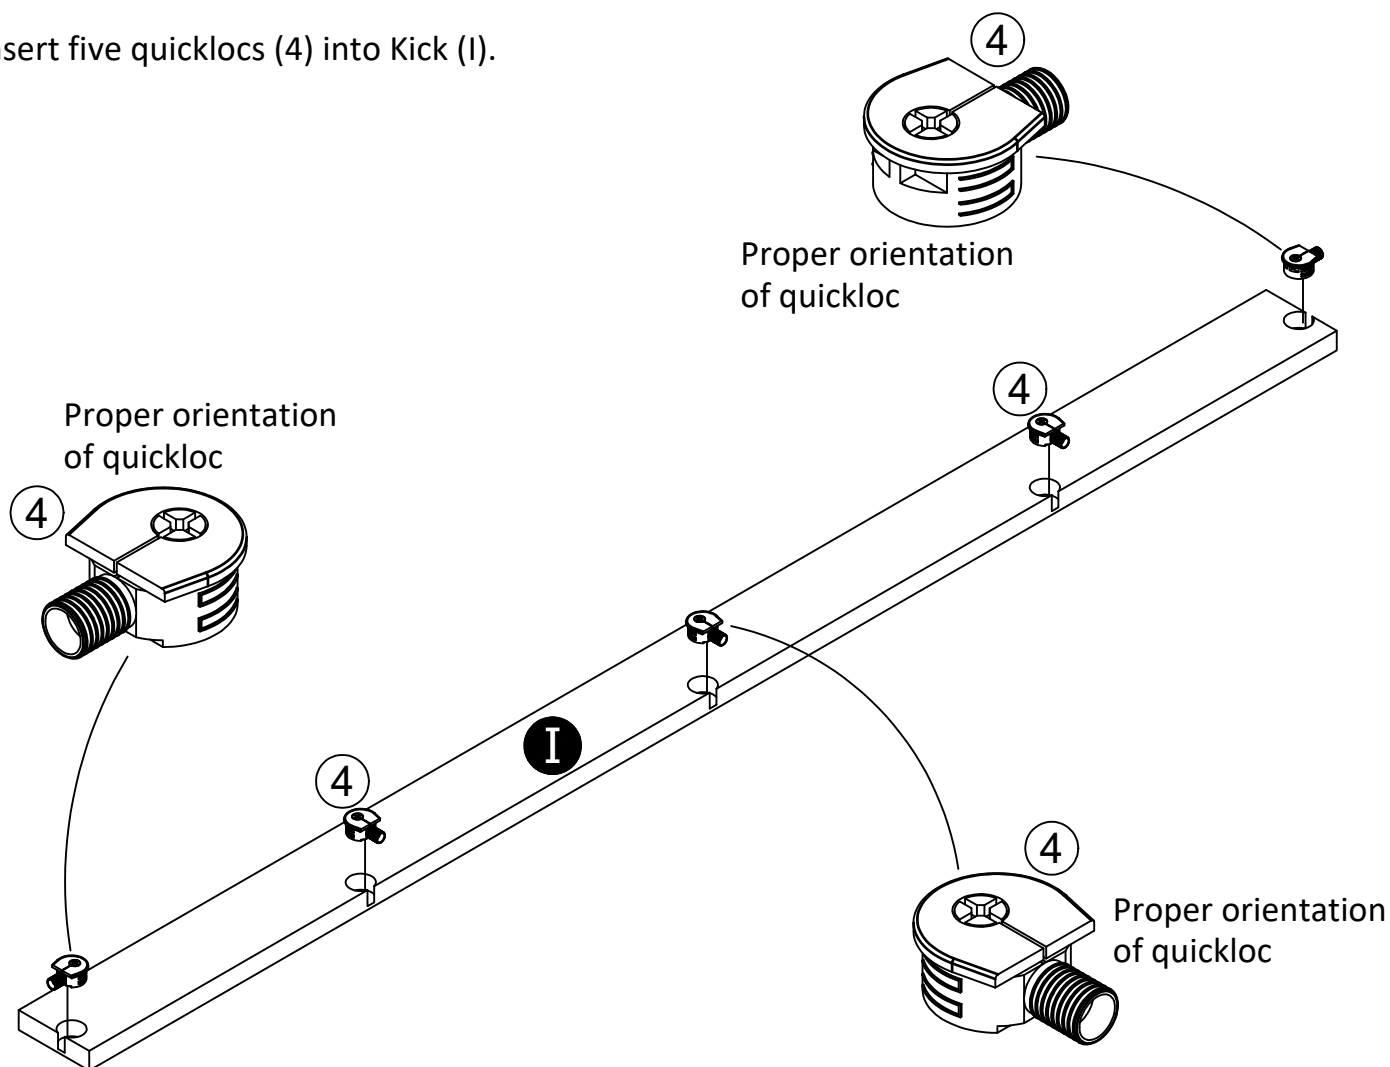


  STEP 9

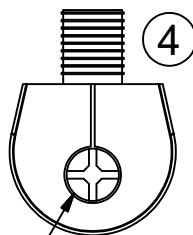
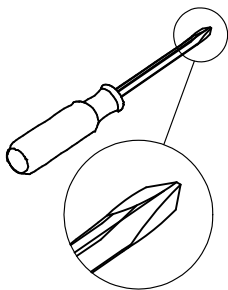


Turn clockwise to
lock in place.

 
Position Kick (I) onto Bottom (G) so three quicklocs (4) engage the holes in the Bottom (G). Turn quickloc (4) clockwise to lock both parts together.

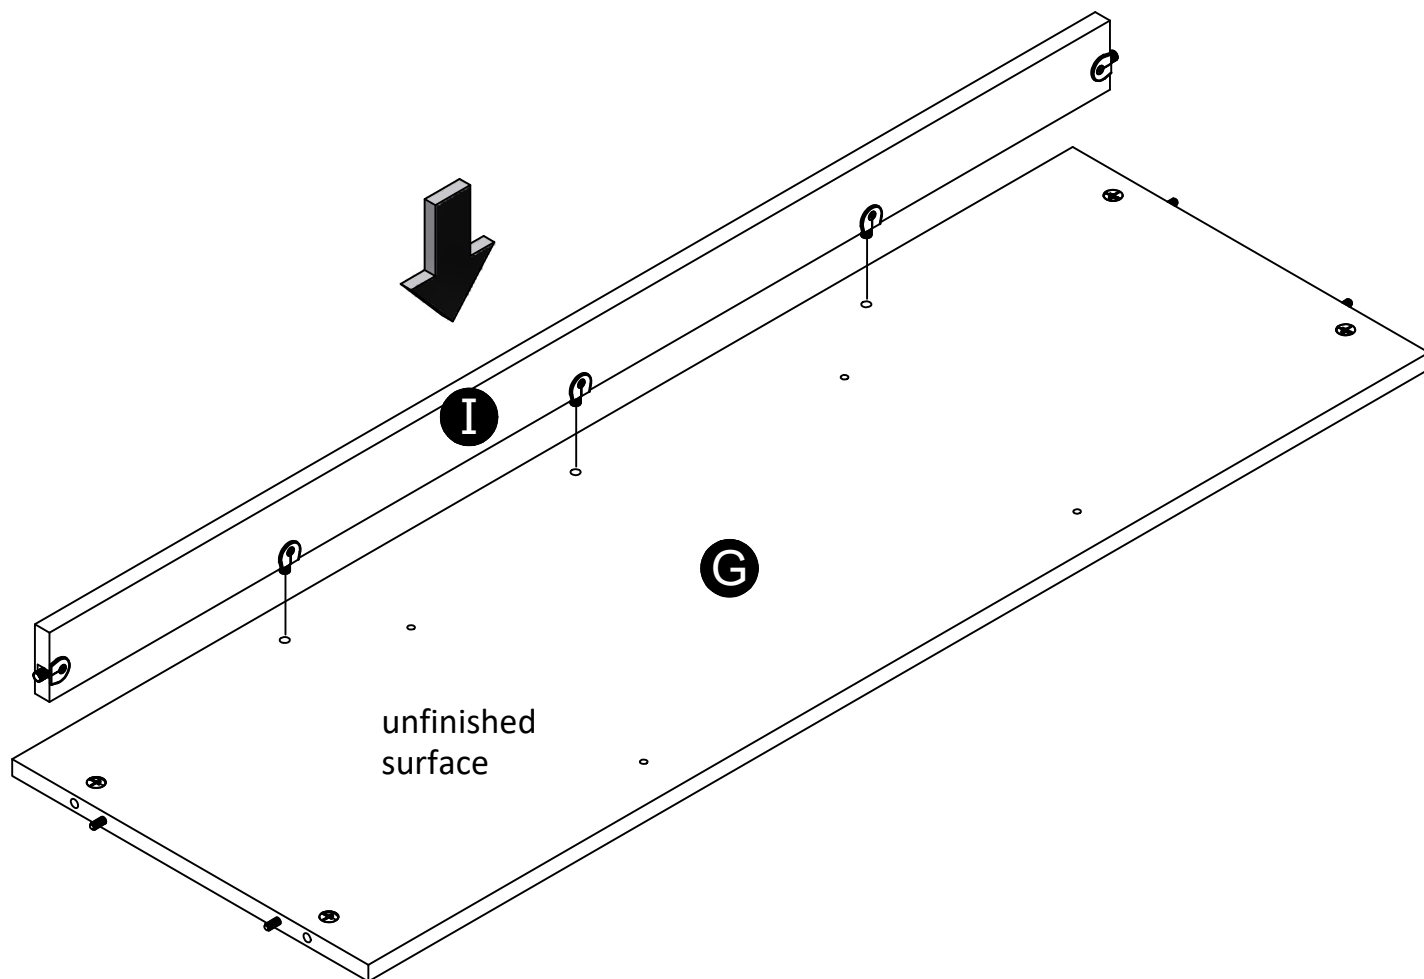

  
STEP 10

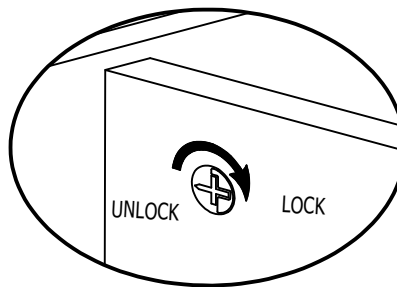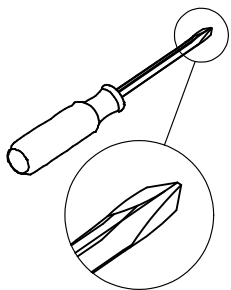

 Lay Left Partition (C) and Right Partition (D) flat on the working surface as shown. Engage the cam bolts (2) into the cam locks (1) in both Backs (E). Turn clockwise with screwdriver to lock in place.

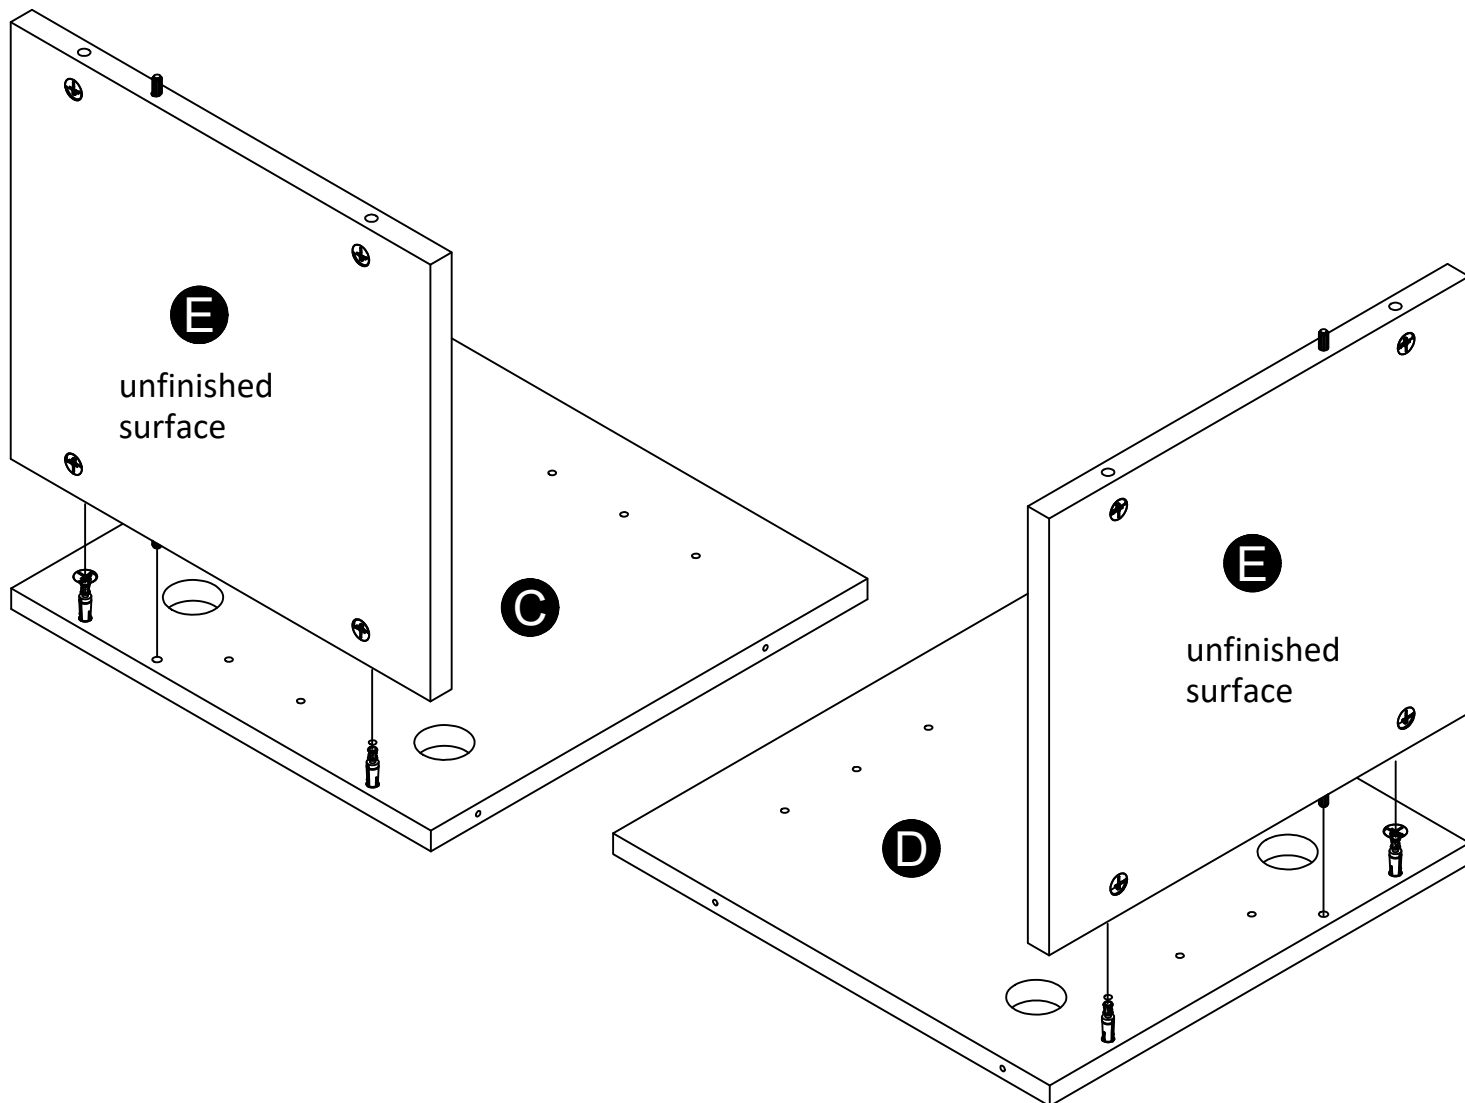


 STEP 11


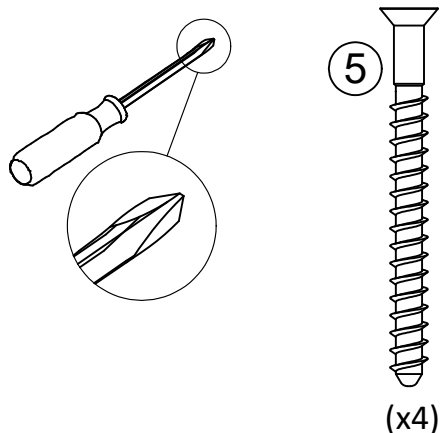


Insert screws (5) through the Bottom (G) and into both the Left Partition (C) and the Right Partition (D). Please note: view is turned slightly to better view all panels.

 Finished Edges Face Up

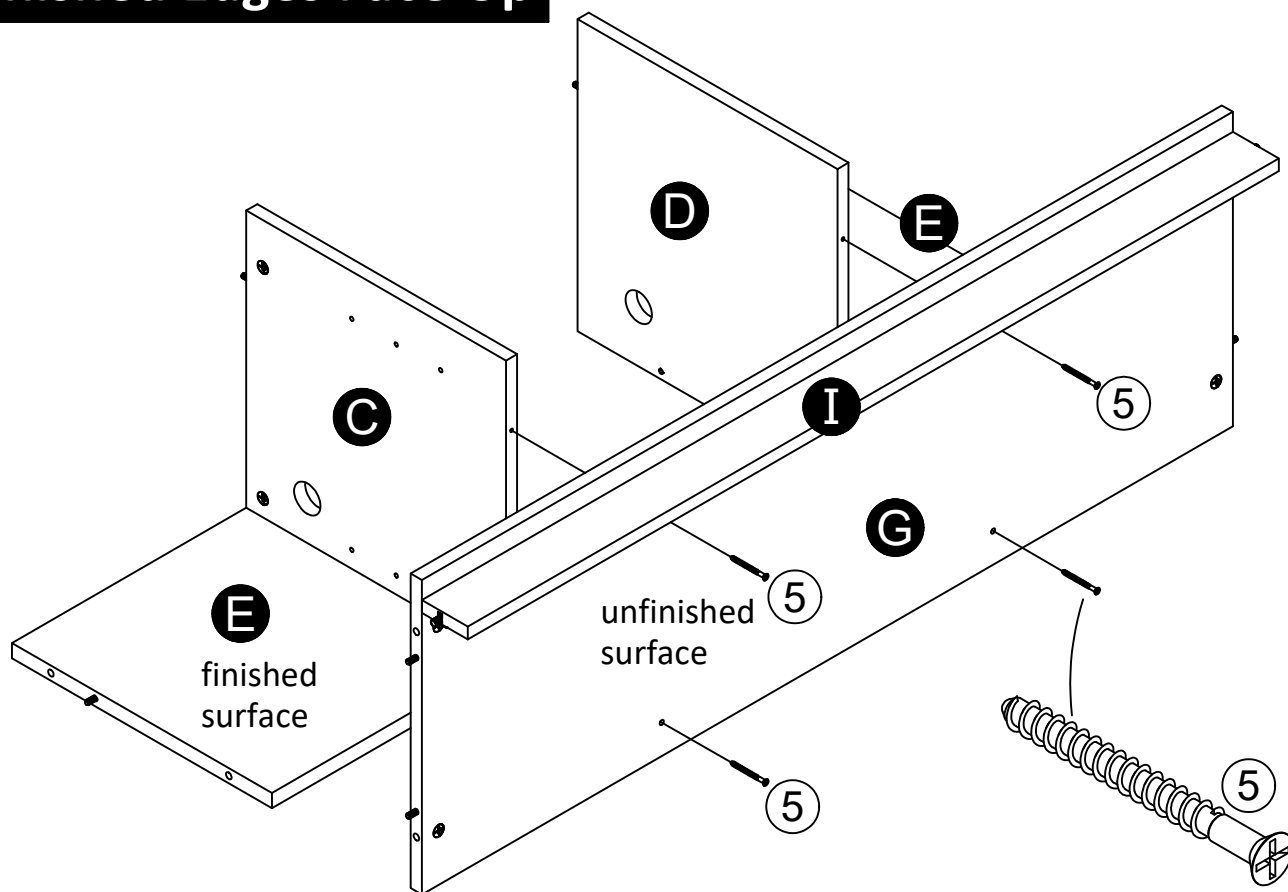


  STEP 12

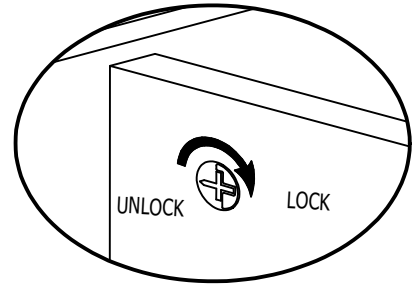
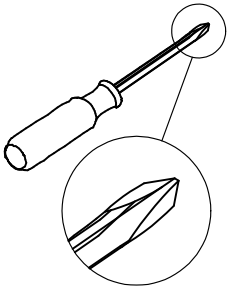


Attach the Left and Right Panels (A&B) as shown, making sure when attaching, the cam bolts (2) and wood dowels (3) in Bottom (G) engage into the holes in the Left and Right Panels (A&B). Also make sure the quicklocs (4) in the end of the Kick (I) engage the hole in the Left & Right Panels (A&B). Once all hardware is engaged into the holes, tighten the cam locks (1) in the Bottom (G) and tighten the quicklocs (4) in Kick (I). Please note: You will lock the cam locks (1) that attach the Backs (E) to the Left and Right Panels (A&B) in step 14. Also please note: view is turned slightly to better view all panels.

 Finished Edges Face Up

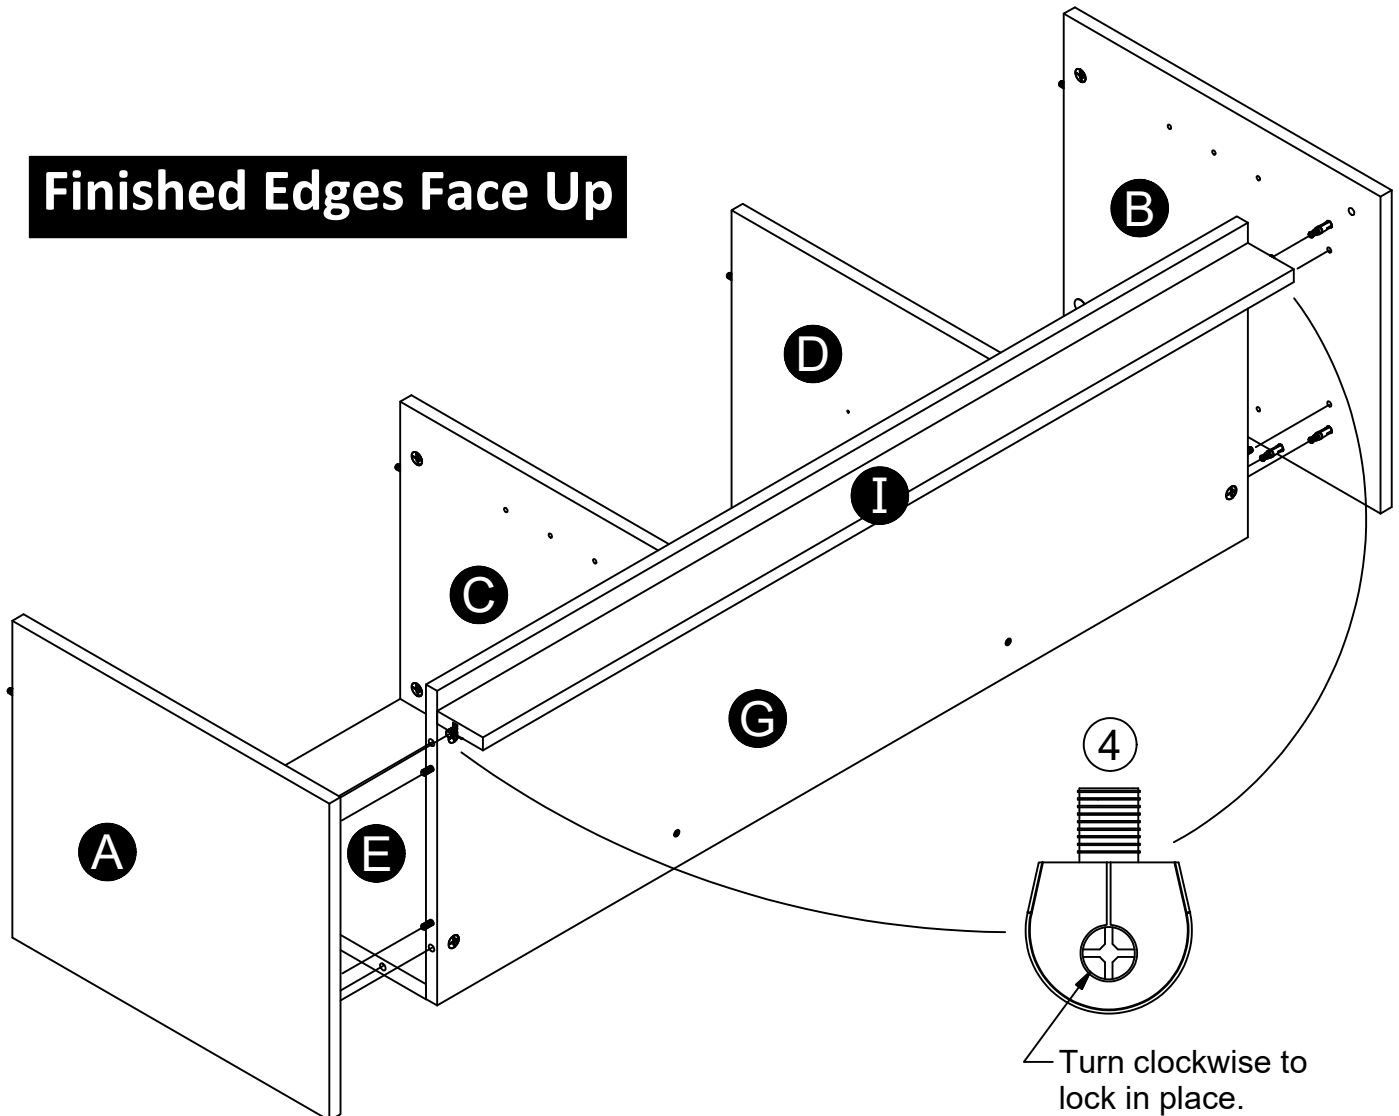


  STEP 13


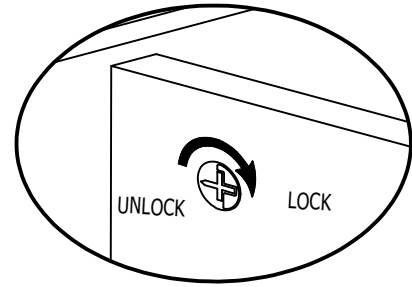
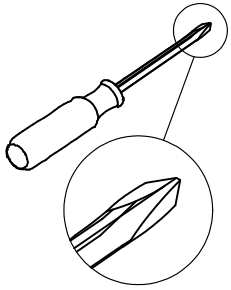


Engage the cam bolts (2) that are in the Top (F) into the cam locks (1) in the Left Panel (A), the Right Panel (B), the Left Partition (C) and the Right Partition (D). Turn clockwise to lock in place.

 
Finished Edges Face Up

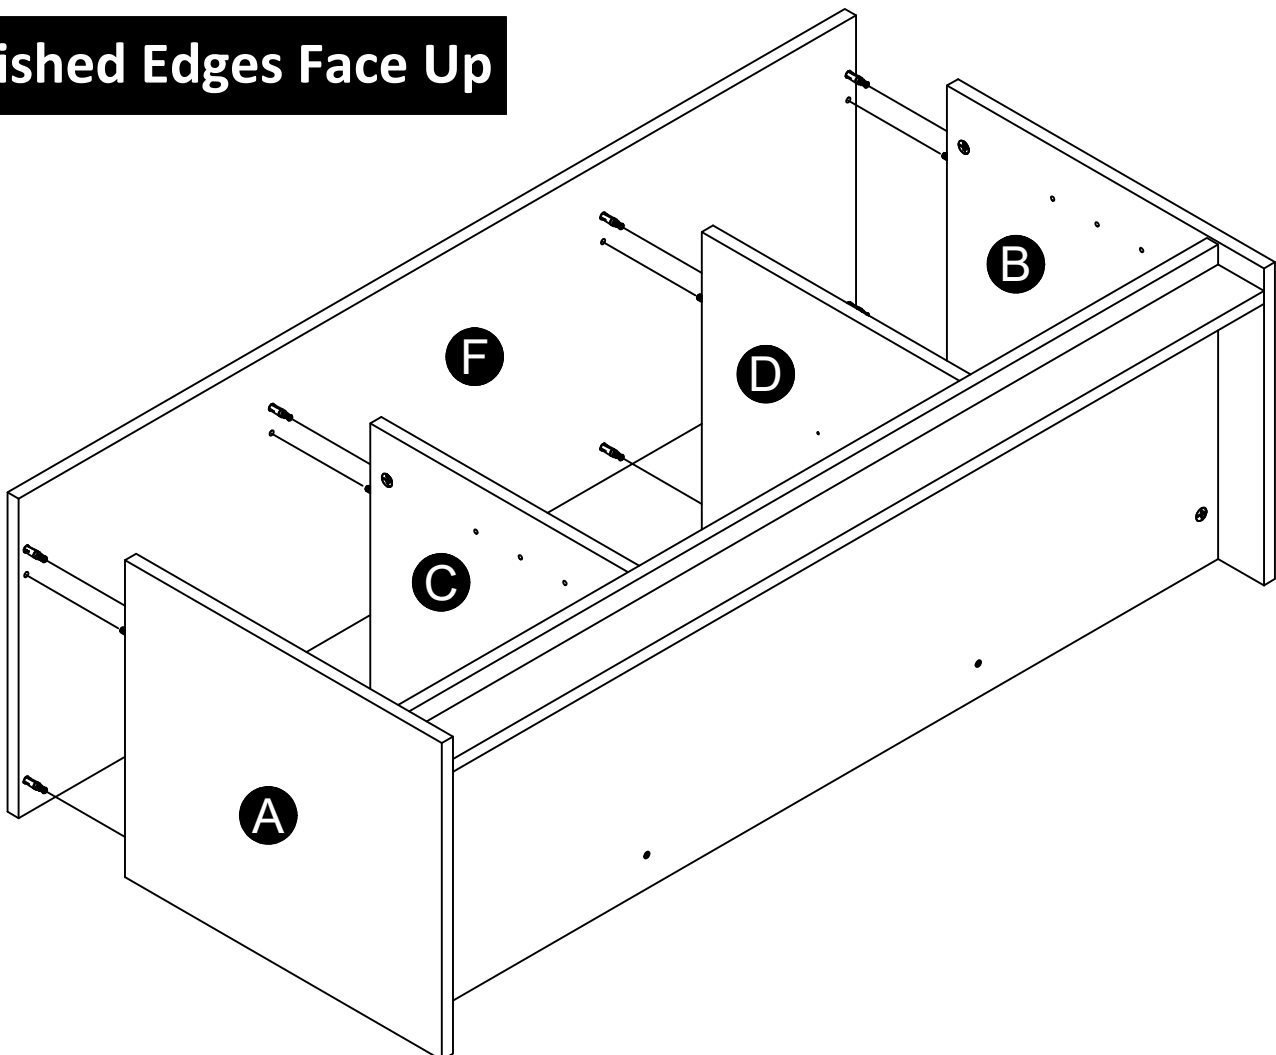

   STEP 14

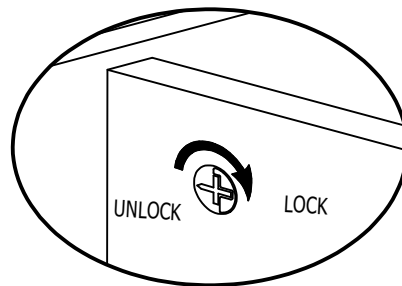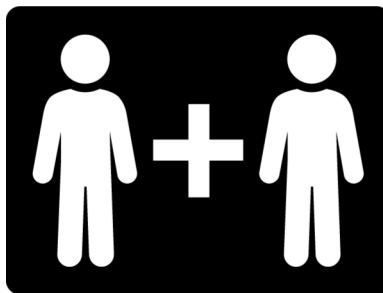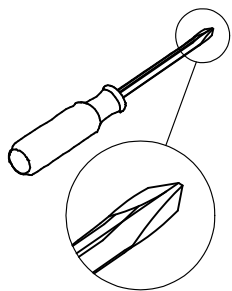

 With the help of another person, carefully stand your unit upright. Lock the cam locks (1) that were not locked in each of the Backs (E) in step 12.

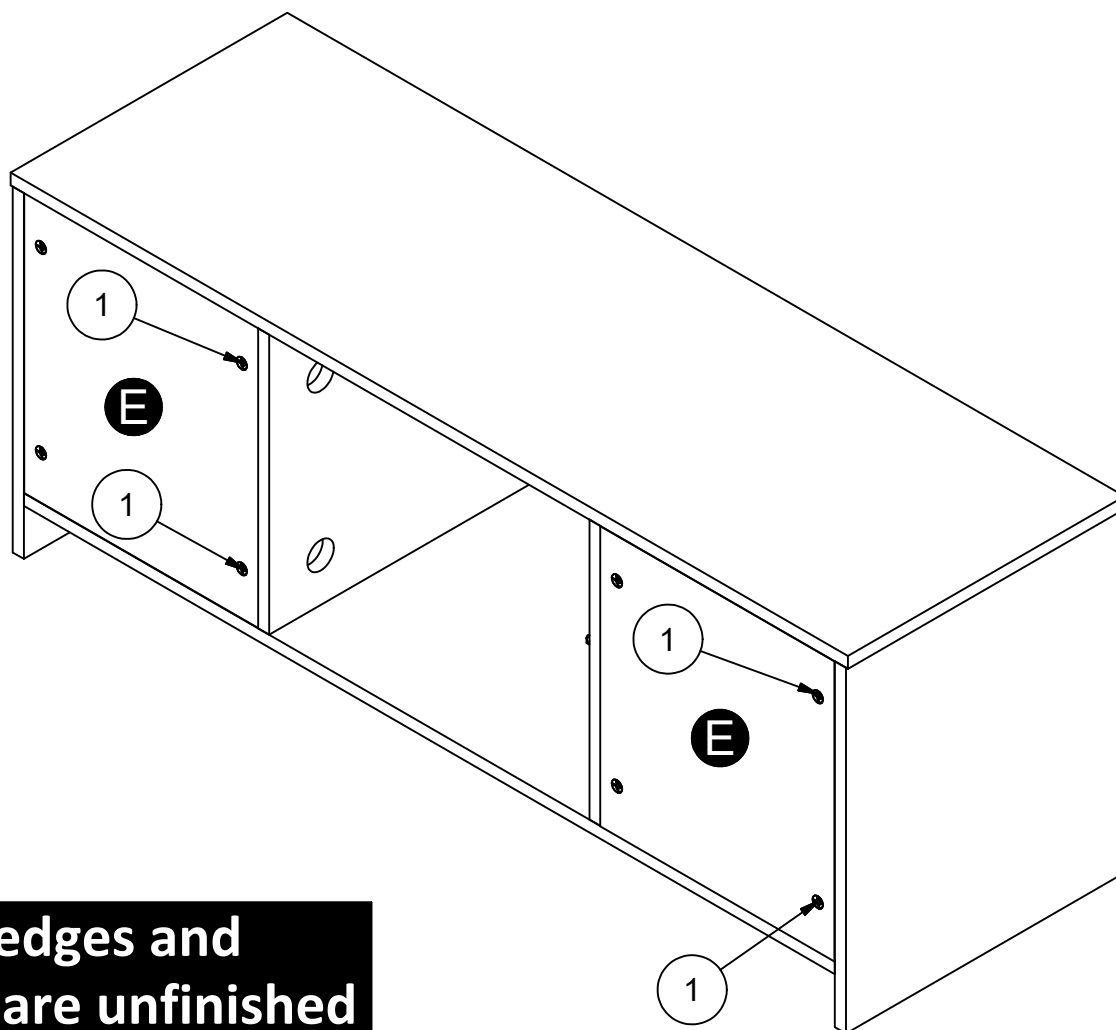


**All back edges and
surfaces are unfinished**

STEP 15

#A95060 Fireplace Insert

 Not Actual Size

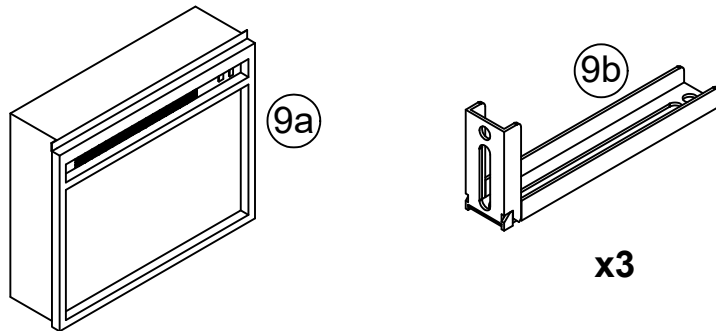

CAUTION: THE FIREPLACE BOX COMES WITH THE INSTRUCTION MANUAL FOR OPERATION. FOR SAFETY REASON, PLEASE CAREFULLY READ AND FOLLOW THE INSTRUCTION MANUAL BEFORE OPERATING.

 
PLEASE NOTE: WHEN TURNING ON THIS APPLIANCE THERE WILL BE A SLIGHT BURN OFF SMELL. THIS ODOR WILL REMAIN ONLY FOR A BRIEF PERIOD OF TIME AND WILL SUBSIDE. THIS APPLIANCE IS A HEATING ELEMENT, IT WILL GET HOT QUICKLY.



WARNING!


If the information in the fireplace operating manual is not followed, an electric shock or fire may result in property damage, personal injury, or loss of life.

STEP 16

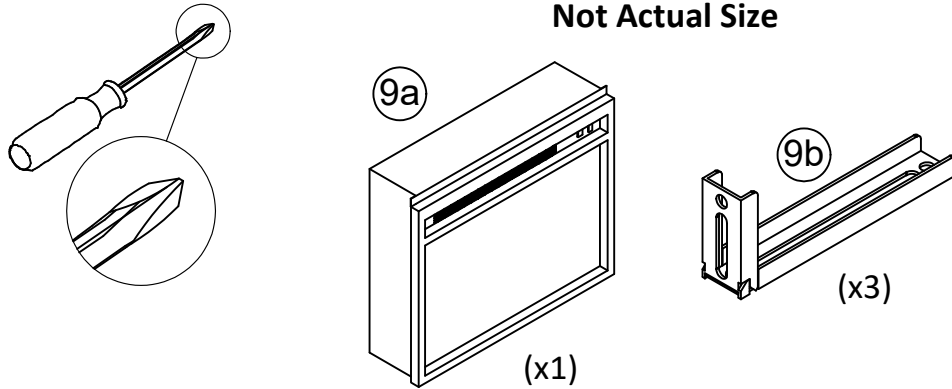

Position the fireplace insert brackets (9b) on the fireplace insert (9a) where the pre-assembled screws are located as shown below. **Please note: do not fully tighten in this step.**

 Note: outlet cord not shown

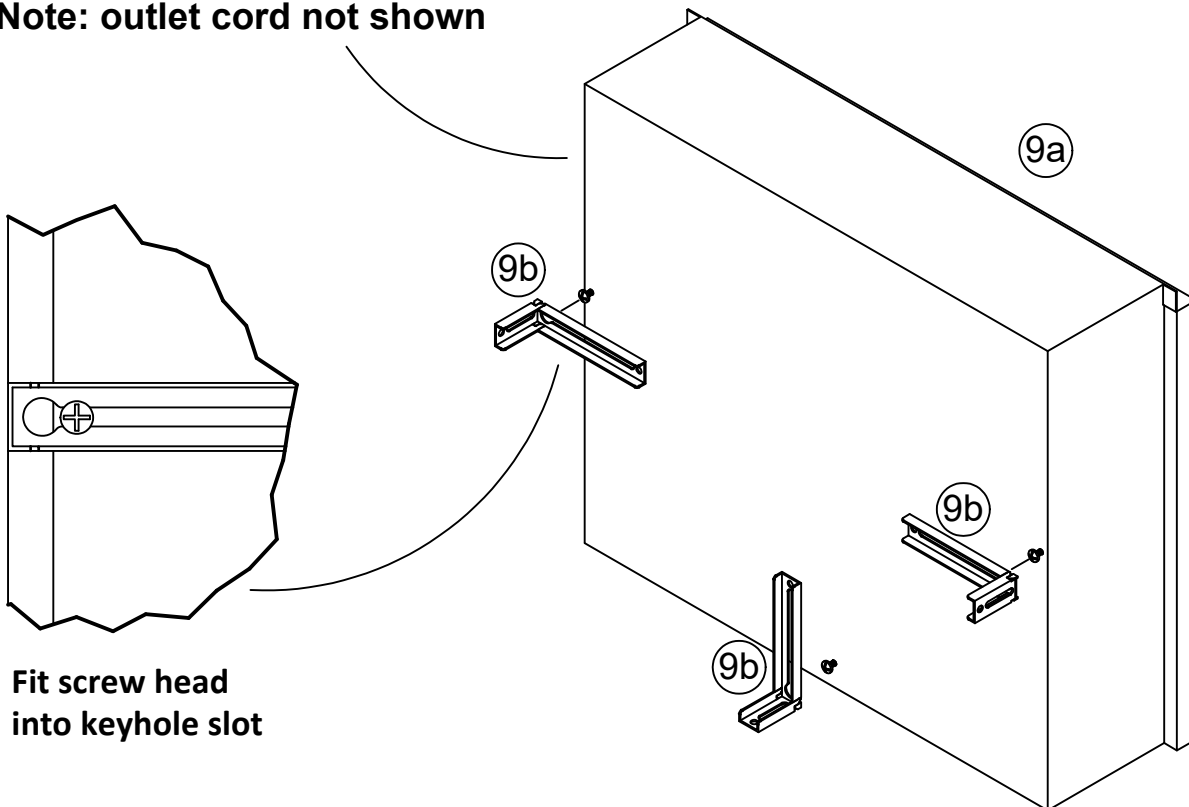

Be sure fireplace brackets orientation is correct

 
STEP 17

Place the fireplace insert (9a) with the fireplace brackets (9b) attached, into the opening in the center of the unit. Please refer to the diagram to help with the placement of the fireplace insert (9a). Locate the pilot holes in Right Partition (D), at the approximate location shown on the diagram. Note that the holes in the Left Partition (C) and the Bottom (G) will be at the same distance. Ensure that the fireplace brackets (9b) are positioned as shown.

Please note: parts were removed to view pilot holes and dimensions


Note: the Left Partition (C) is hidden in this view.

Note: Fireplace Insert will be positioned approximately $\frac{1}{8}$ " inward from the front edge of the left and right partitions (C&D).

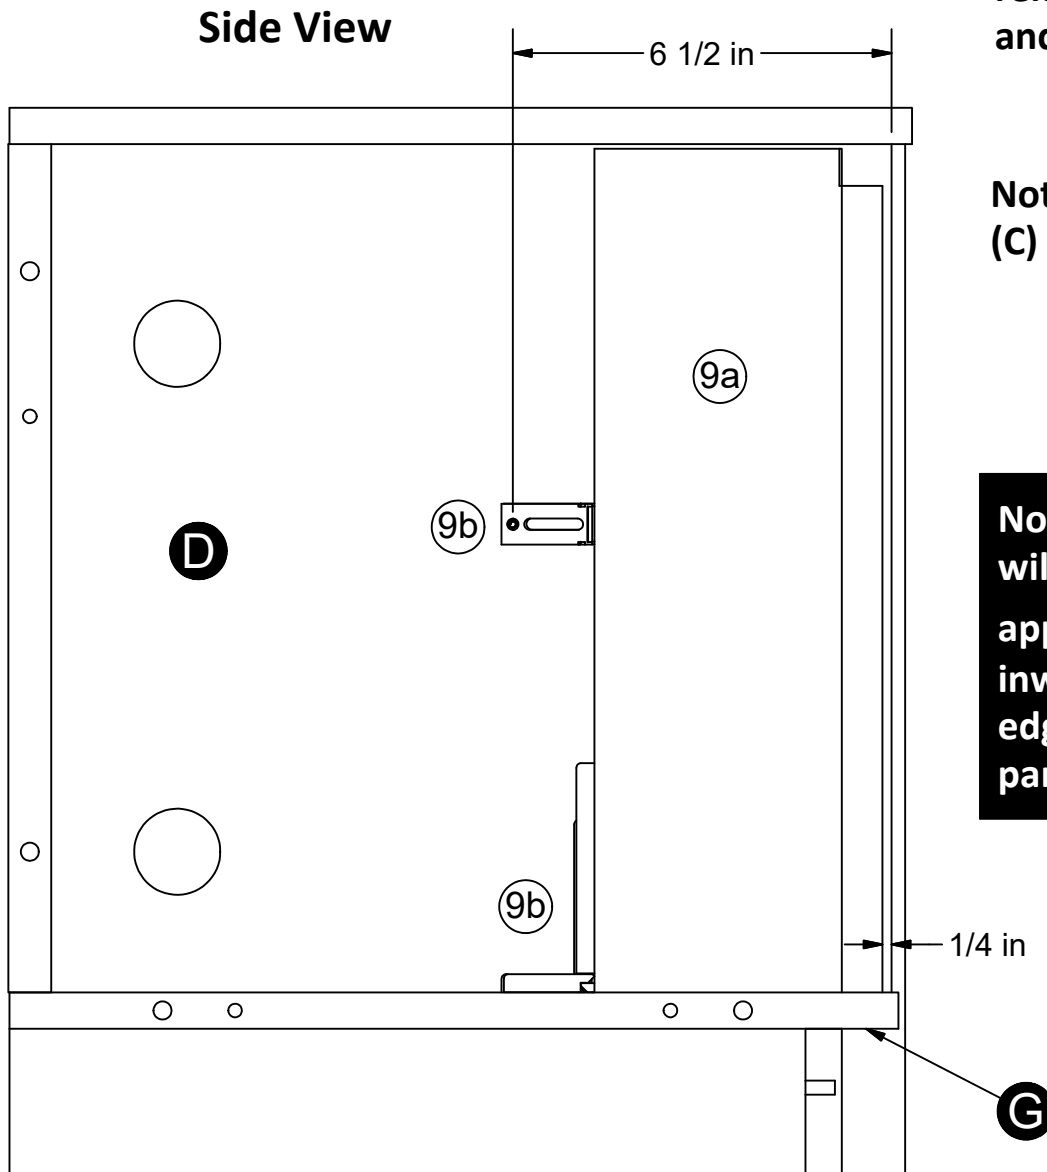





Pro Tip: use a flashlight to help locate the pilot holes in panels C, D, and G.

 STEP 18

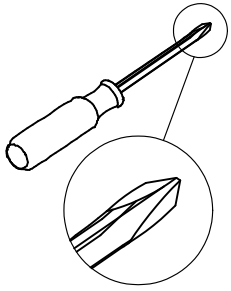


Engage each screw (6) into each fireplace bracket (9b) as shown below and fully tighten. Then, fully tighten the pre-assembled screws from the fireplace insert (9a) to the fireplace bracket (9b).

    back view

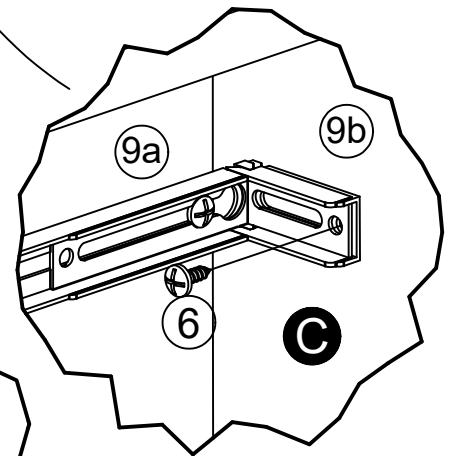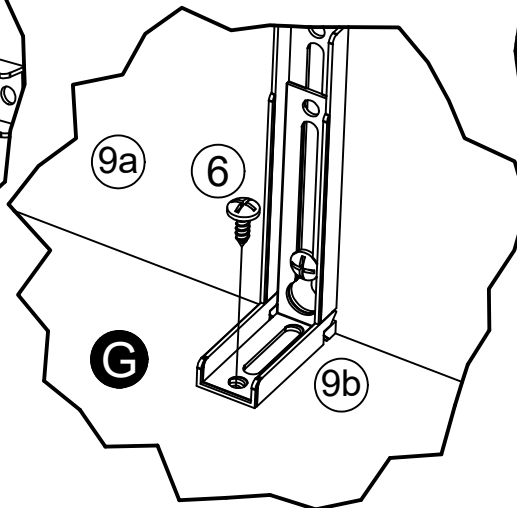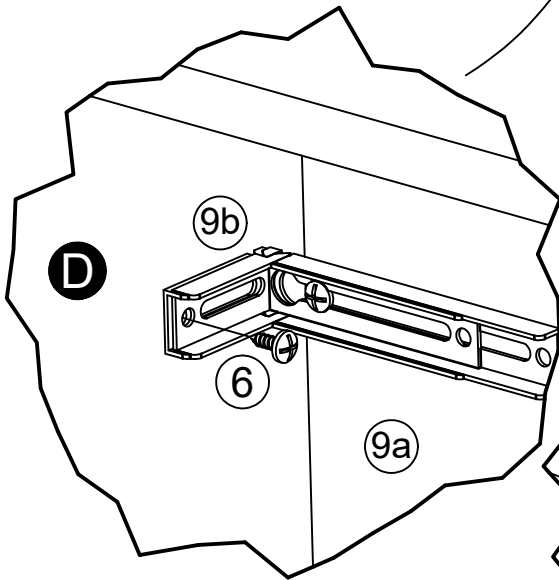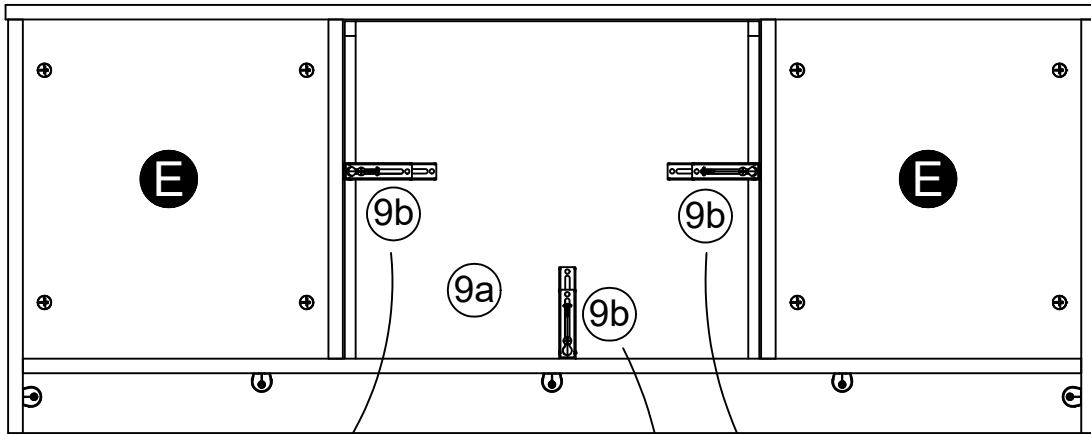


Pro Tip: use a flashlight to help locate the pilot holes in panels C, D, and G.

 
STEP 19

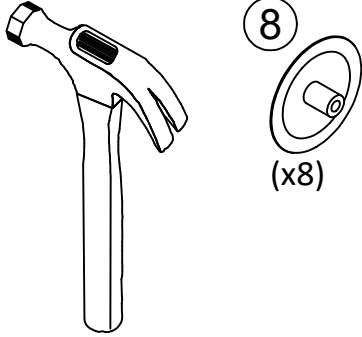

 
Press in and lightly tap with a hammer, eight decorative cam covers (8).

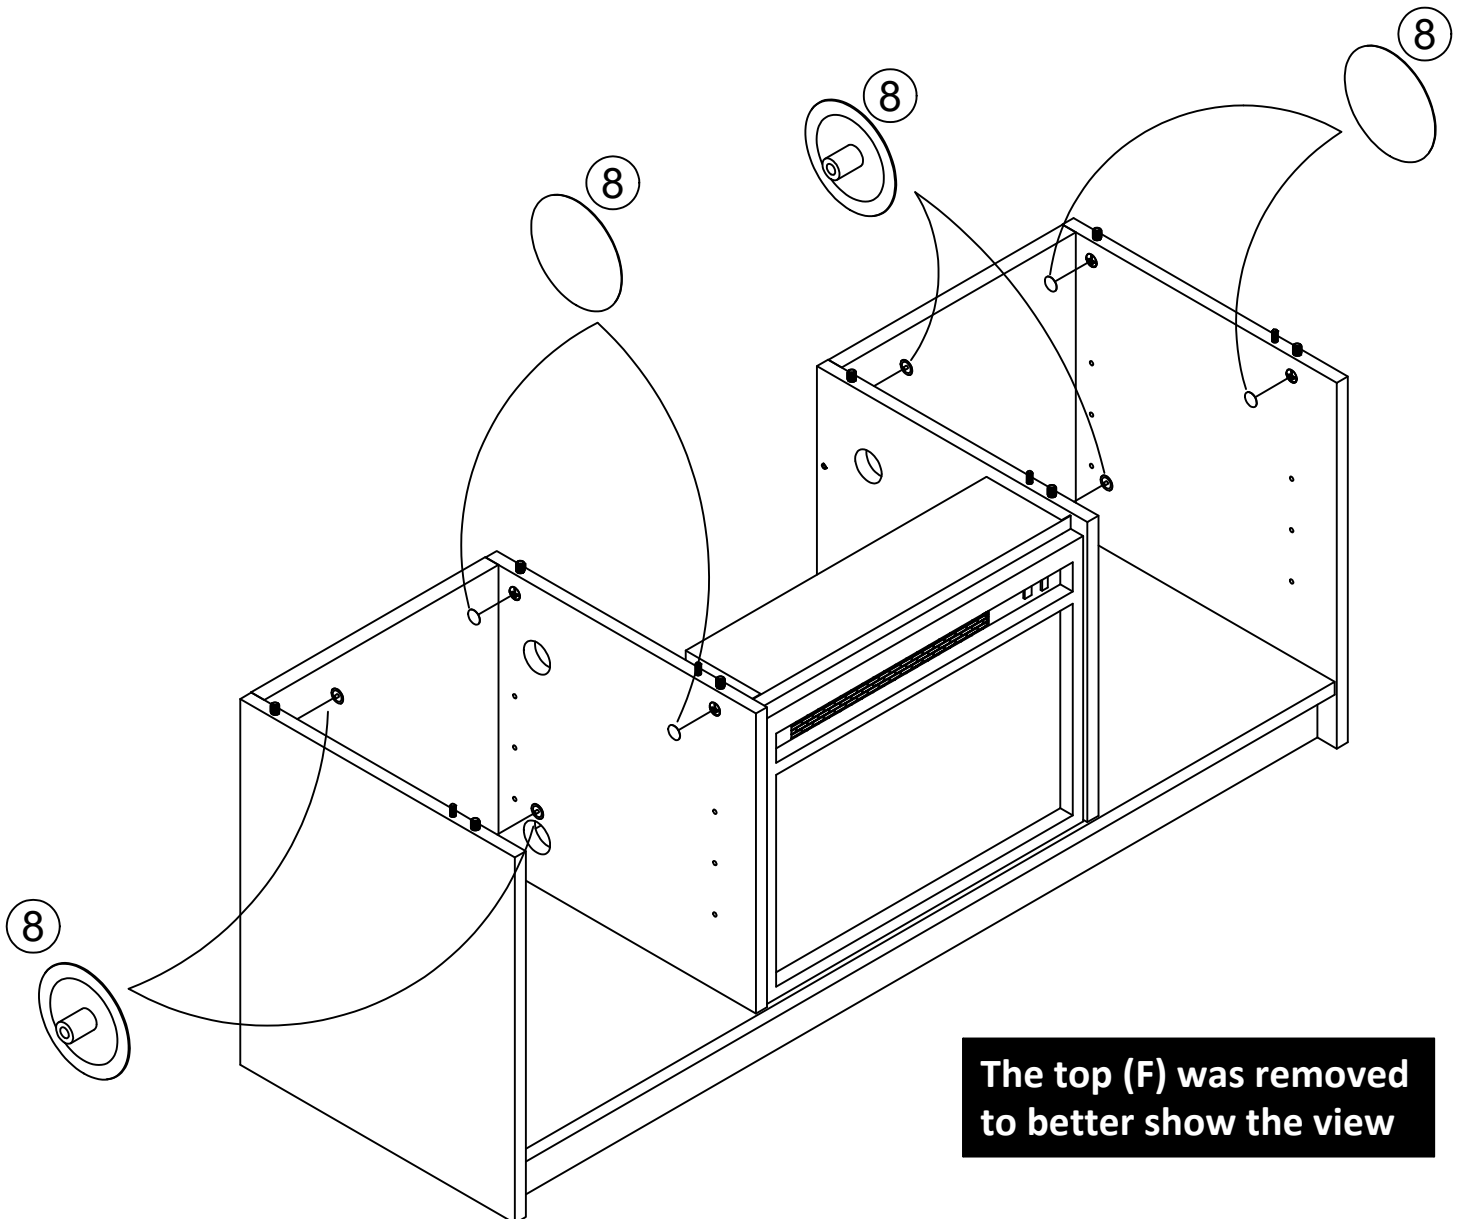

 STEP 20

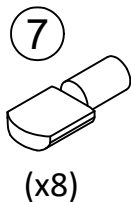

 
Insert two support pins (7) into Left Panel (A) at the desired level. Repeat for the Left Partition (C) at the same desired level. Then, repeat for the Right Panel (B) and the Right Partition (D).

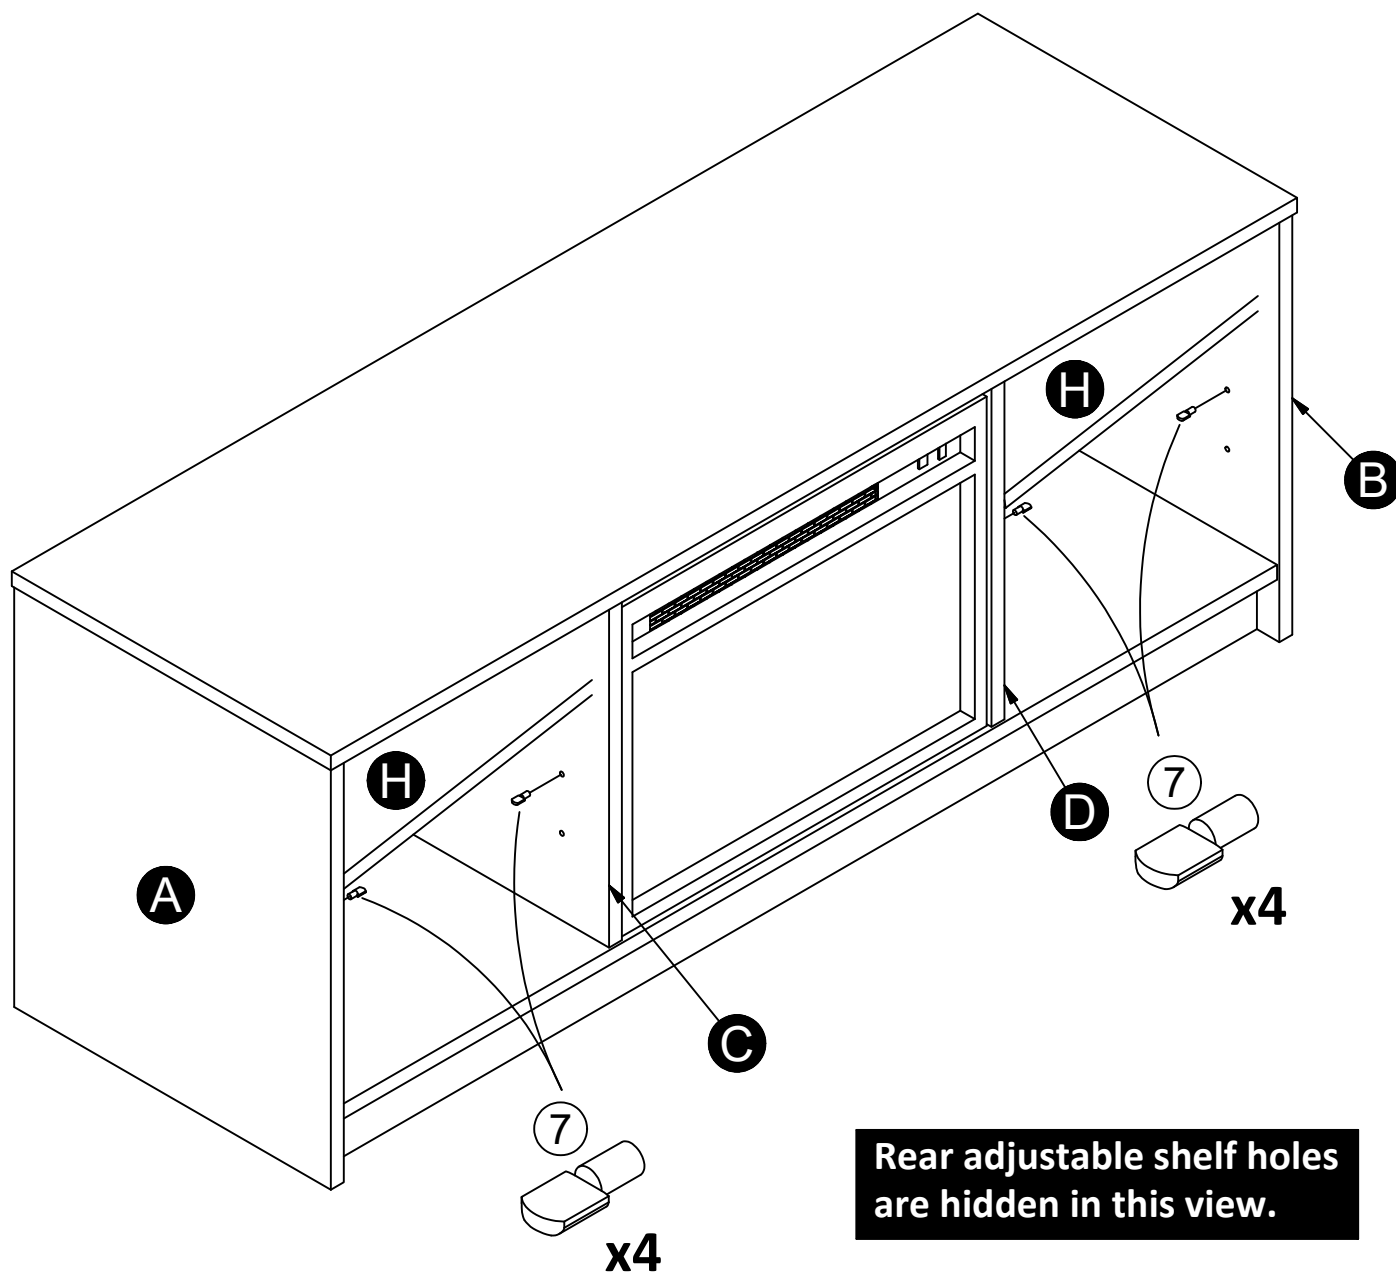

Maximum Loads

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

 Please apply the TV Warning Label B64355 to the Top (F) in a visible location. It is a reminder of the maximum weight your television can be for this particular item. Please note, the label is permanent. Once affixed to your item, it will not come off and will damage the surface if you try and remove it.

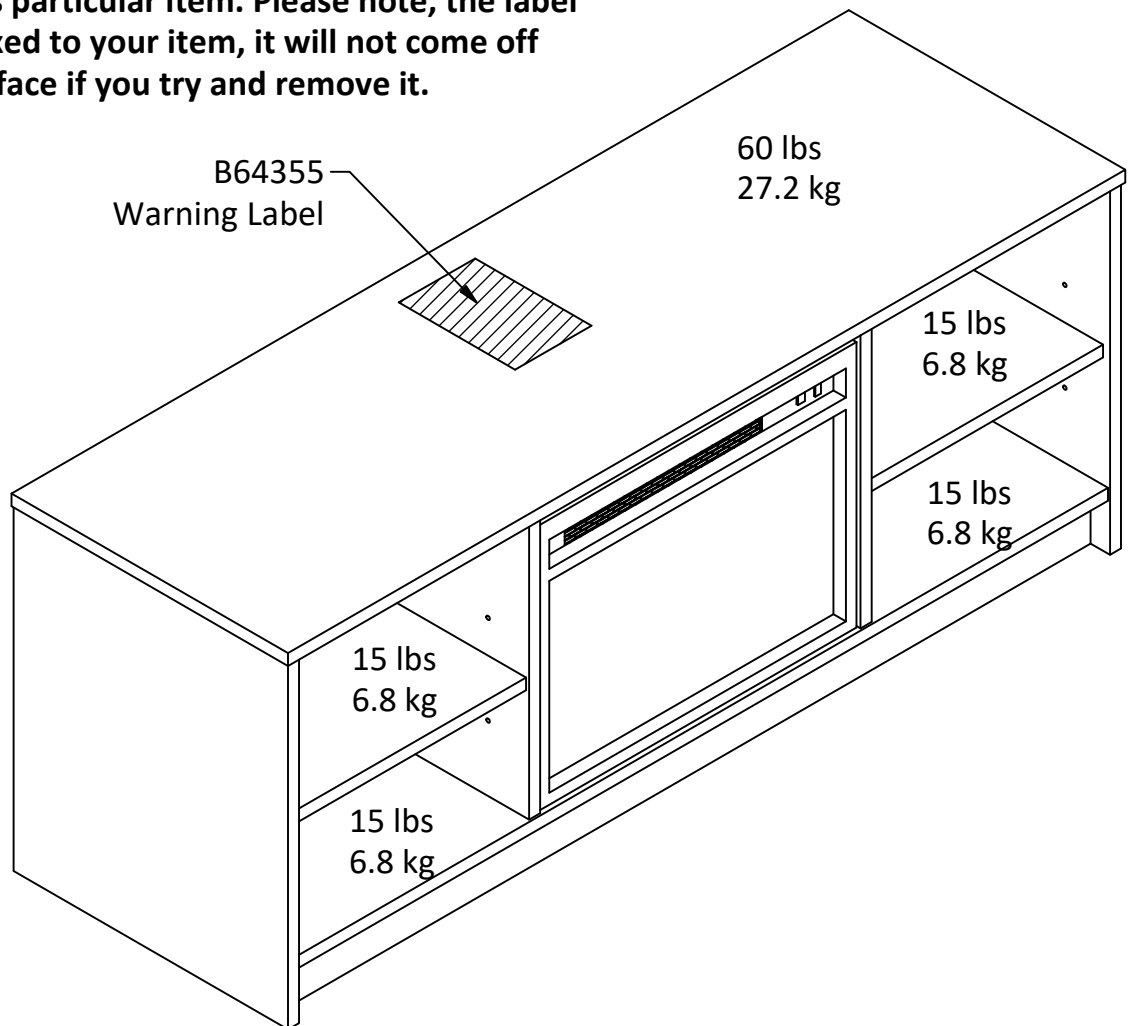

Certificate of Conformity

1. This certificate applies to the Dorel Home Furnishings, Inc. product identified by this instruction manual.
2. This certificate applies to compliance of this product with the CPSC Ban on Lead-Containing Paint (16 CFR 1303).
3. This product is distributed by: Dorel Home Furnishings, Inc.
410 East First Street South
Wright City, MO 63390
636-745-3351
4. Site of Manufacture: Cornwall, ON
5. See front page of instruction manual for date of manufacture.

Register your product to receive the following:



- * New trend details - sneak peek on what's new
- * Surveys - have a voice within our community
- * Exclusive deals and discount codes
- * Quick and easy replacement part service

To register your product, visit ameriwoodhome.com

5 Star Rating



Visit your local retailer's website, rate your purchased product and leave us some feedback!

We would like to extend a big "Thank You" to all of our customers for taking the time to assemble this Ameriwood Home product, and to give us your valuable feedback.

*Thank
You!*