


DOREL ASIA

CLUB CHAIR

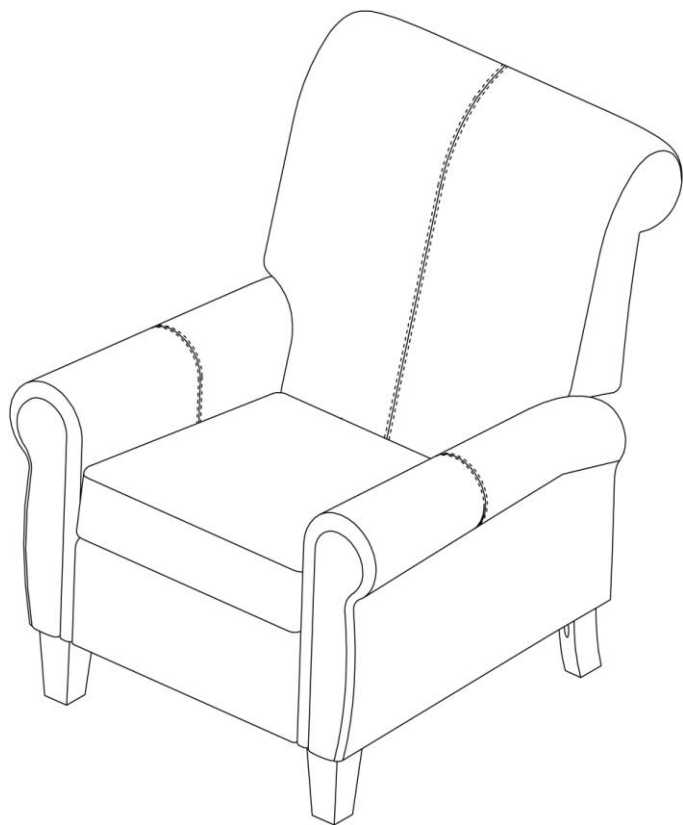

Model No:

WM3129 (Espresso)

WM3129-1 (Black)

WM3129-3 (Beige)

UPC CODE:

0-65857-14819-0 Espresso

0-65857-16130-4 Black

0-65857-16131-1 Beige

NOTE:

THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ AND
KEEP FOR FUTURE REFERENCE.

Lot number:

(TAKEN FROM CARTON)

Date of purchase:

_____ / _____ / _____

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.

Tel #: 1-800-295-1980

E-Mail: das@dorel.com

Fax #: 514-353-7819



CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!



CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

**Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada H1G 3L1**

E-MAIL: das@dorel.com

NOTES

- * Ensure all parts and components are present before beginning assembly.
- * Assemble on soft, smooth surface to prevent damage to product finish.
- * Phillips head screwdriver is not included.
- * **DO NOT** use power tools.
- * **CAUTION:** Adult assembly required.
- * Assembly and handling will require two people.
- * Estimated assembly time: 3 minutes.

CARE AND CLEANING

Leather: Dust regularly with a clean, dry cloth to avoid soil build-up. A damp cloth may be used occasionally to clean surface. Buff dry. Keep leather soft and supple by applying a leather care product occasionally. Avoid contact with oil, furniture polish and varnish.

Microfiber: Wipe away spills immediately to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State. The warranty does not cover the wearing, tearing, fading or splitting of the leather.




WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.



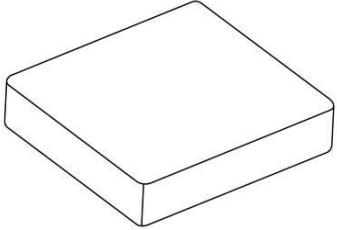
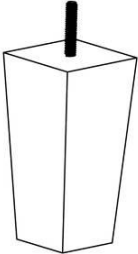

CLUB CHAIR

WM3129 / WM3129-1 / WM3129-3

HARDWARE LIST

1	
	Φ4mm x 38mm
	SCREW 2PCS

PARTS LIST

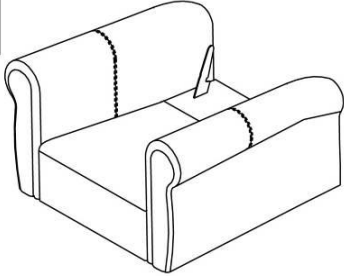A		B		C	
	CHAIR BODY 1PC		CHAIR BACK 1PC		SEAT CUSHION 1PC
D		E			
	FRONT FOOT 2PCS		BACK FOOT 2PCS		


CLUB CHAIR

WM3129 / WM3129-1 / WM3129-3

STEP 1:

Attach front feet (D) and back feet (E) to chair body (A). Use screws (1) to secure the back feet (E) using a Phillips head screw driver (not included).

NOTE: Ensure feet are correctly aligned before tightening the screws.

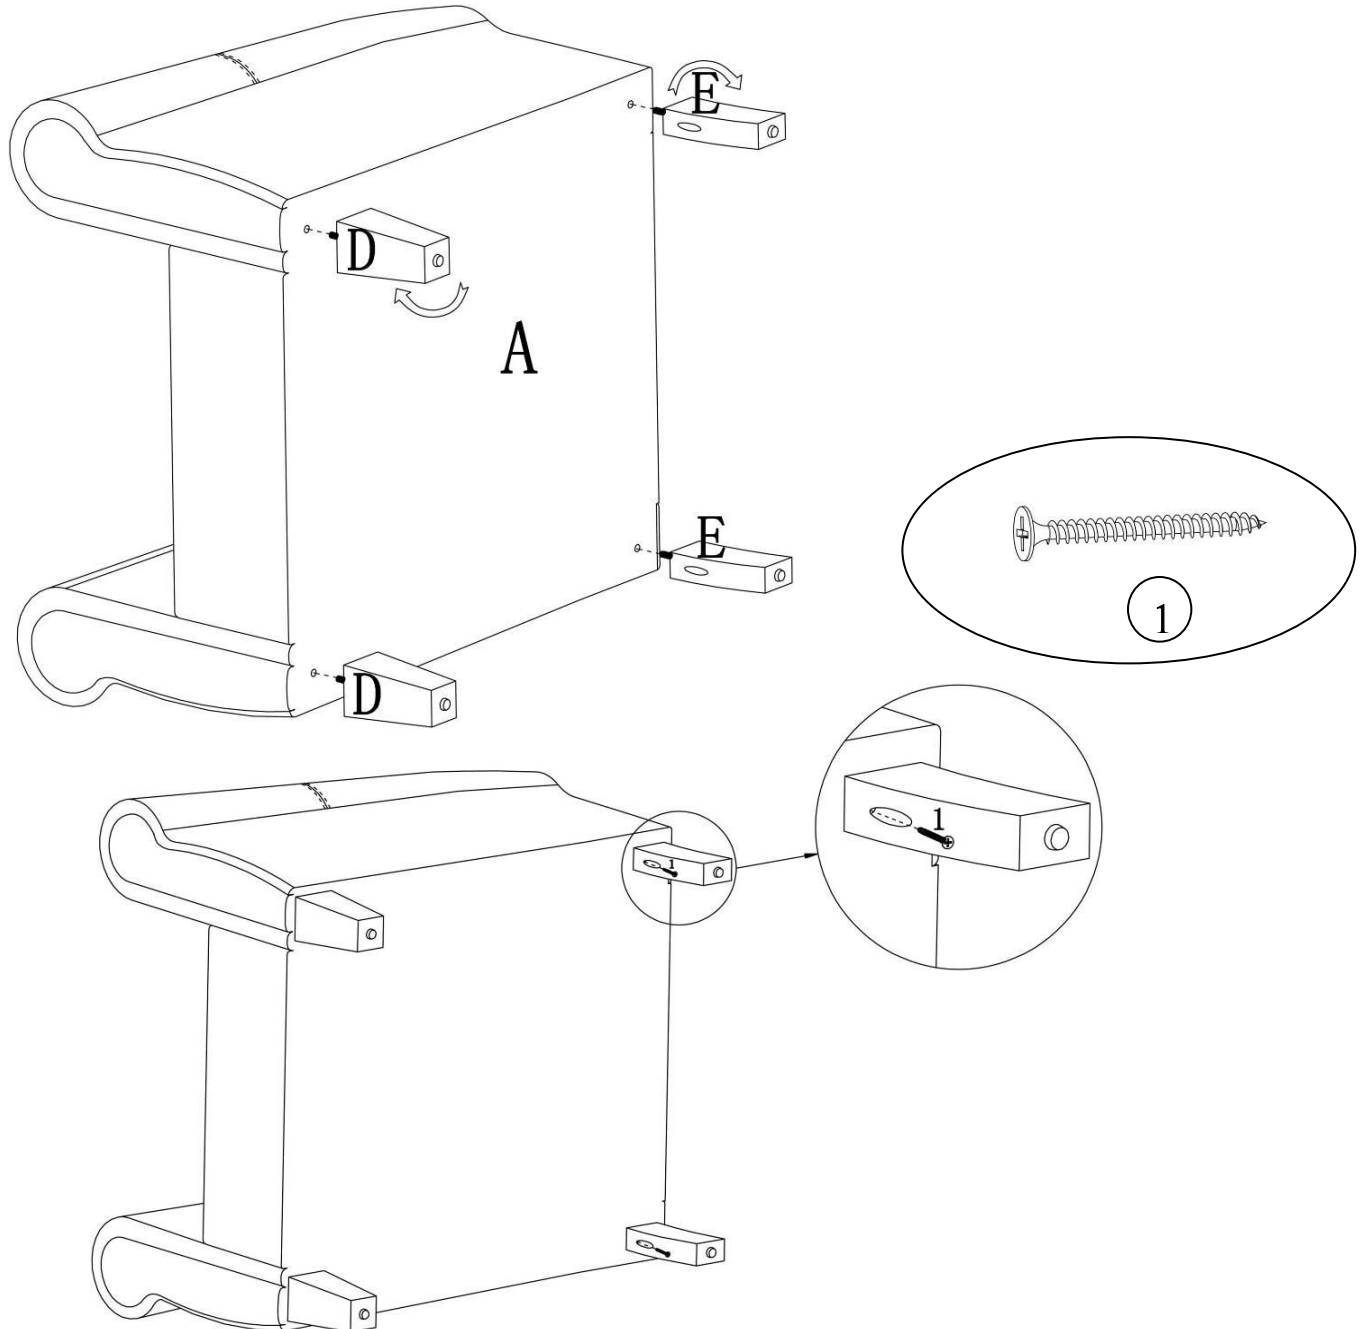


CLUB CHAIR

WM3129 / WM3129-1 / WM3129-3

STEP 2:

Attach chair back (B) to chair body (A) by sliding the brackets on chair back (B) into the glides on chair body (A) as shown.

Place the flap into position using the Velco strips once the back frame has been locked into place.

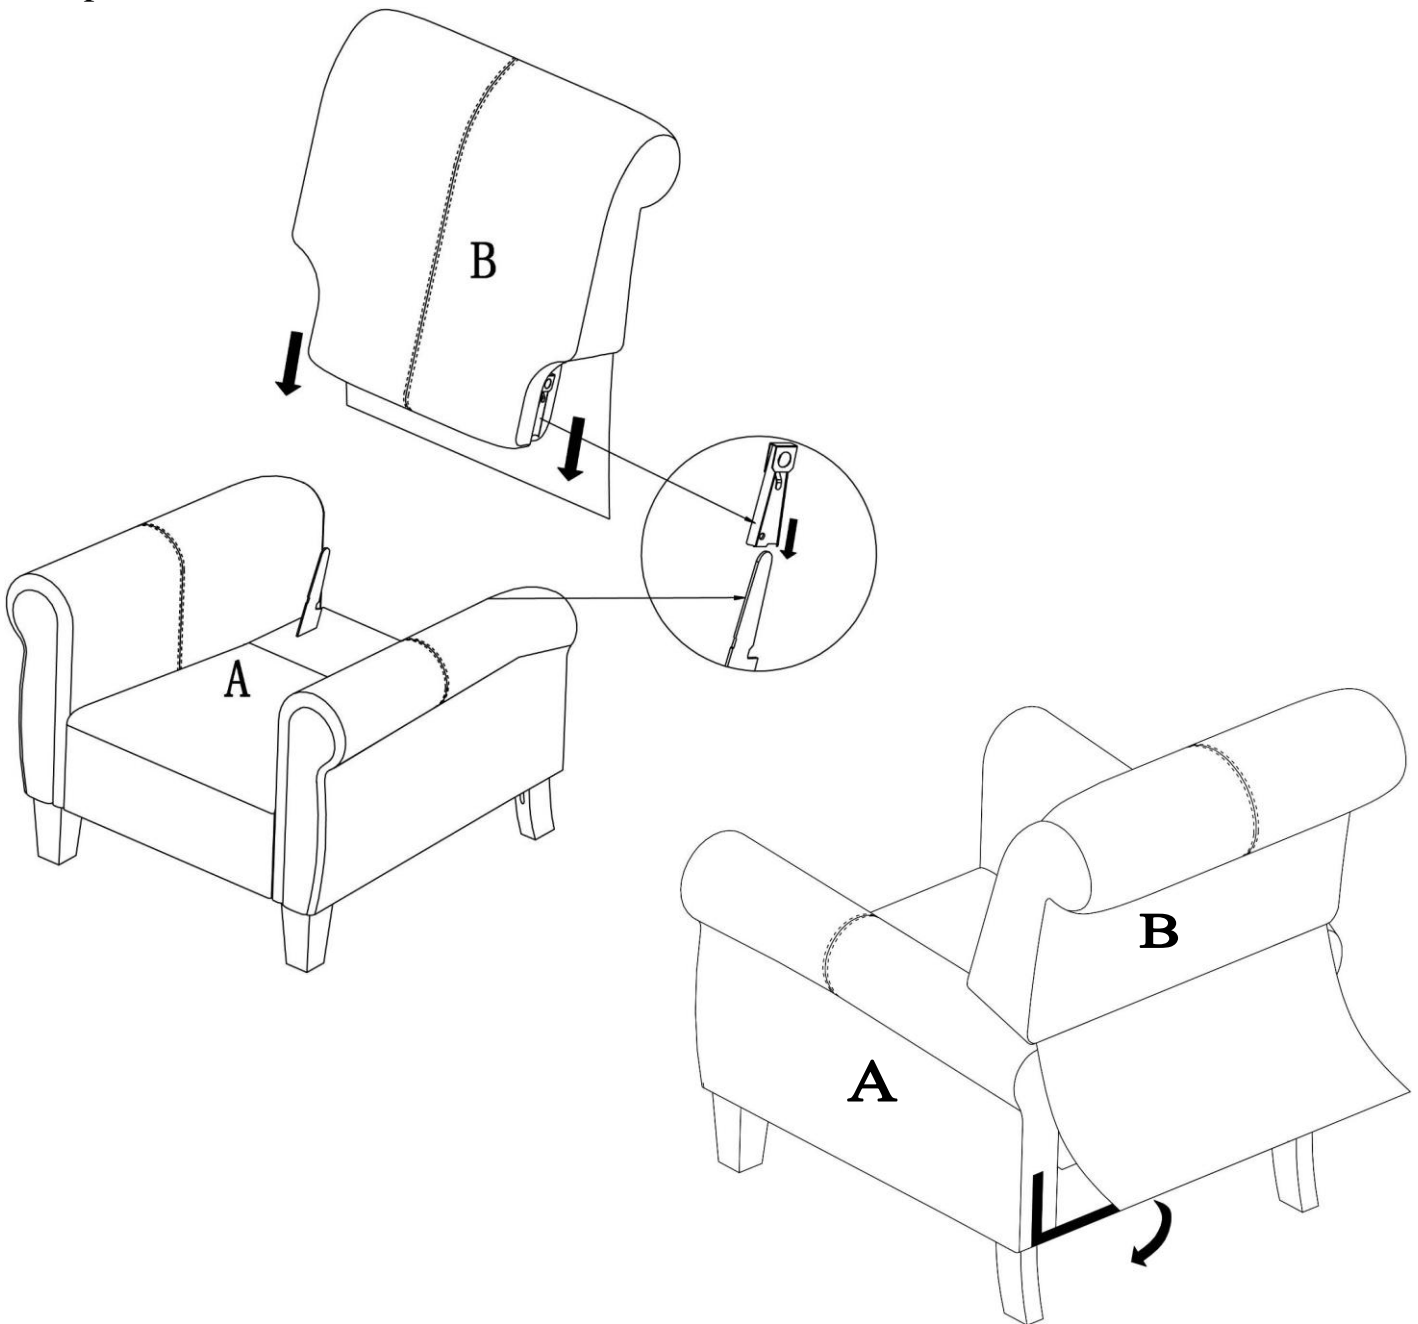


CLUB CHAIR

WM3129 / WM3129-1 / WM3129-3

STEP 3:

Place seat cushion (C) on the chair.

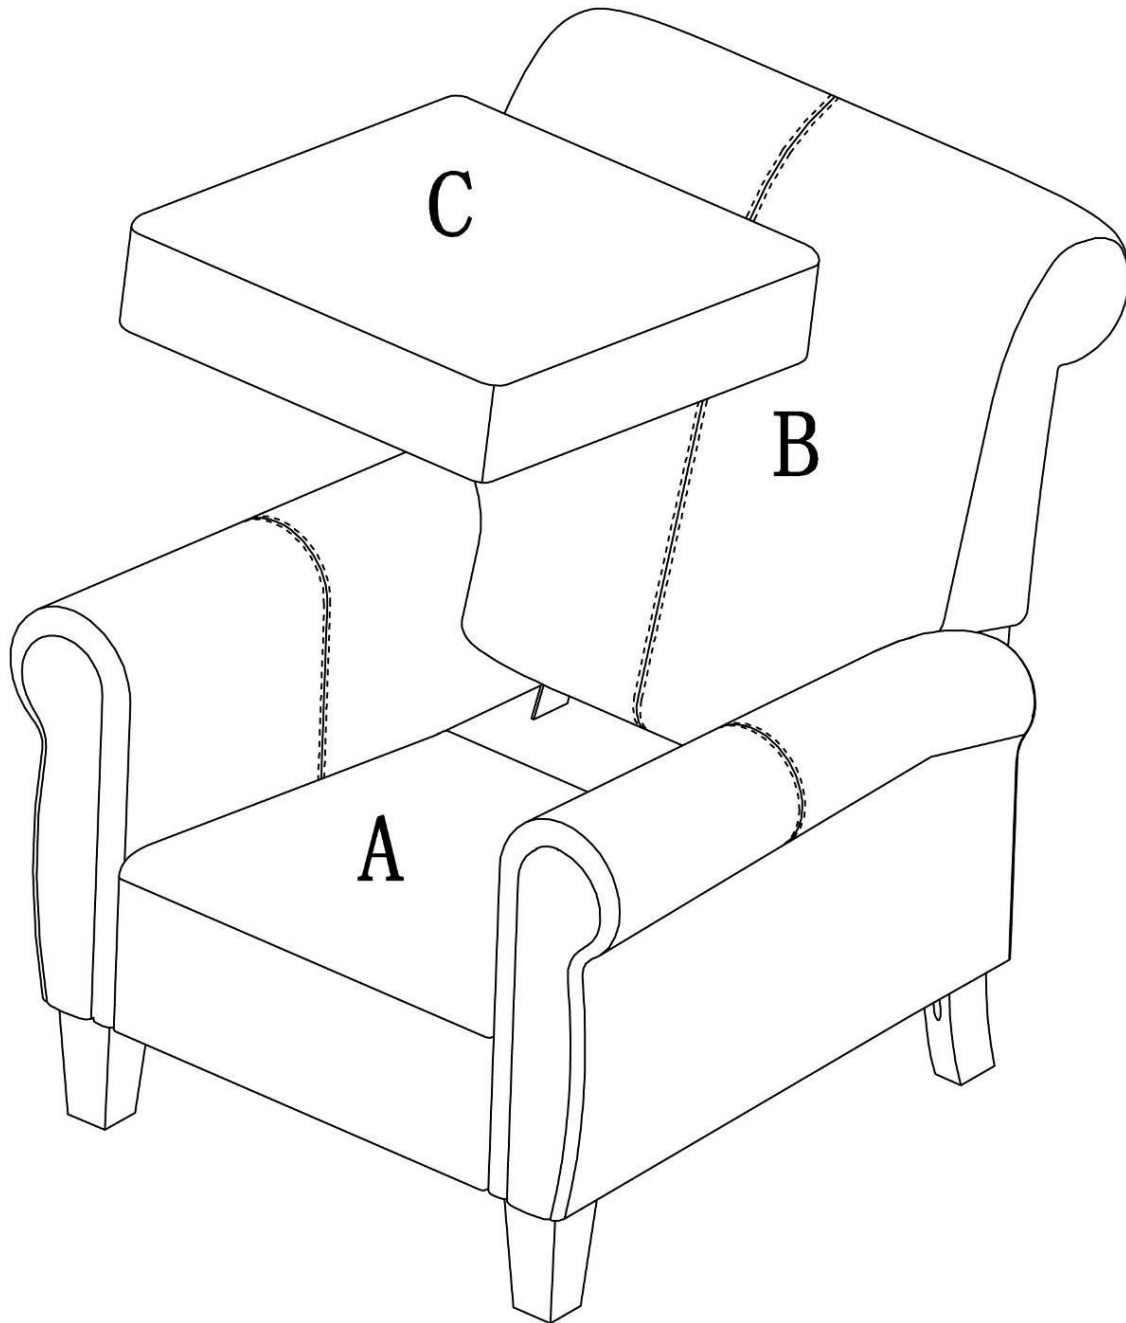

CLUB CHAIR


WM3129 / WM3129-1 / WM3129-3



CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

Leather: Dust regularly with a clean, dry cloth to avoid soil build-up. A damp cloth may be used occasionally to clean surface. Buff dry. Keep leather soft and supple by applying a leather care product occasionally. Avoid contact with oil, furniture polish and varnish.

Microfiber: Wipe away spills immediately to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

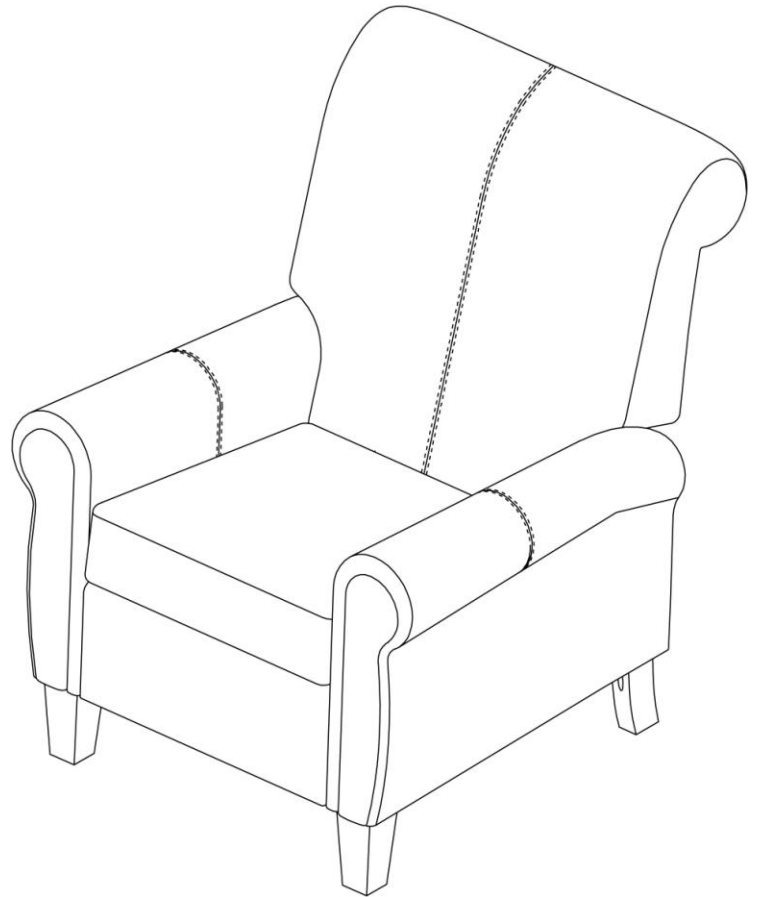

That's it ! You've finished assembling your chair.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980

Email: das@dorel.com

Customer Service Fax Number 514-353-7819

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:

(including area code)

Date & Place of Purchase:

Part(s) description and quantity (Please be sure to list model number or SKN number):

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1