

Model Number:

DA1026P-18
DA1026W-18
DA1026WN-18
DA1026B-18

UPC Code:

0-72000-96502-3
0-72000-96501-6
0-65857-14462-8
0-65857-15766-6

Color:


PINE
WHITE
WALNUT
BLACK

Congratulations on your latest furniture purchase! **Dorel Living** furniture has been developed with quality, convenience and style in mind. We trust it will provide you with many years of exceptional comfort and service.

Before beginning assembly, we encourage you to familiarize yourself with your new furniture piece by taking a few minutes to go through this booklet. It contains important information on our warranty and care tips to keep your furniture looking as good as new.

For more great furniture ideas, check out our website at www.dorelliving.com

You can also keep up to date on all the latest trends by liking our [Facebook page](#) and [Instagram page](#).

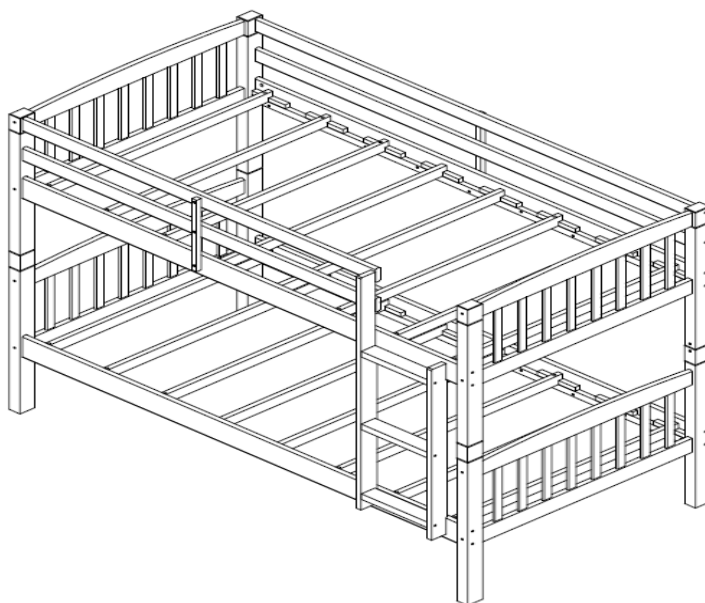

Date of Purchase: ____ / ____ / ____ Lot Number: _____
(located on carton)

Questions, concerns, missing parts? Customer satisfaction is important to us at Dorel Asia. **CONTACT OUR CUSTOMER SERVICE DEPARTMENT BEFORE RETURNING PRODUCT TO THE RETAILER.**

Our agents are available Monday to Friday 8am to 5pm (EST) to take your call and answer any questions. For faster service, always have the model number ready when contacting us.

toll free #: 1-800-295-1980

You can also reach us by email or by visiting our website and clicking on the Support tab:
das@dorel.com

NOTE: THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

CUSTOMER SERVICE

You can also contact us by writing to the address listed below. Please include the product model number, color and a detailed description of your enquiry.

Dorel Living - Customer Service Department
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada, H1G 3L1

NOTES AND INSTALLATION

- * Ensure all parts and components are present before beginning assembly.
- * Assemble on a soft, smooth surface to prevent damage to product finish.
- * A Phillips head screw driver is not included.
- * **DO NOT** use power tools.
- * CAUTION: Adult assembly required.
- * Assembly will require two people.
- * Estimated assembly time: 45 minutes.

CARE, CLEANING AND MAINTENANCE

Dust regularly with a soft, lint-free cloth to prevent soil build-up. A damp cloth may be used occasionally to clean surface. Dry immediately. Do not use any abrasives that may damage finish. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

Check all bolts, screws and fasteners periodically and tighten them if necessary.

1-YEAR LIMITED WARRANTY

Dorel warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase from authorized retailers. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. The warranty does not cover wearing, tearing, fading or splitting of the fabric (where applicable). This warranty gives you specific legal rights and you may also have other rights which vary from State to State or Province to Province.



WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK








HARDWARE LIST

<div>1</div> <div>A long metal bolt with a hexagonal head and a threaded shaft.</div> <div>Φ1/4" x 85mm</div> <div>JOINT CONNECTOR (4mm HEX HEAD) 16 PCS</div>	<div>2</div> <div>A metal bolt with a hexagonal head and a threaded shaft, shorter than item 1.</div> <div>Φ6.5mm x 48mm</div> <div>WOOD JOINT CONNECTOR (4mm HEX HEAD) 12 PCS</div>	
<div>3</div> <div>A metal bolt with a hexagonal head and a threaded shaft, similar to item 2 but longer.</div> <div>Φ6.5mm x 100mm</div> <div>WOOD JOINT CONNECTOR (4mm HEX HEAD) 16 PCS</div>	<div>4</div> <div>A screw with a flat, circular head and a pointed tip.</div> <div>Φ4mm x 35mm</div> <div>FLAT HEAD SCREW 32 PCS</div>	
<div>5</div> <div>A shorter screw with a flat, circular head and a pointed tip.</div> <div>Φ4mm x 30mm</div> <div>FLAT HEAD SCREW 6 PCS</div>	<div>6</div> <div>A smooth, cylindrical metal pin.</div> <div>Φ15mm x 60mm</div> <div>WOOD DOWEL 4 PCS</div>	
<div>7</div> <div>A smooth, cylindrical metal pin, shorter than item 6.</div> <div>Φ10mm x 50mm</div> <div>WOOD DOWEL 28 PCS</div>	<div>8</div> <div>A cylindrical metal pin with several rings or grooves along its length.</div> <div>STOPPER 4 PCS</div>	<div>9</div> <div>A cylindrical metal nut with a cross-shaped opening in the center.</div> <div>Φ11.8mm x 15mm</div> <div>BARREL NUT 16 PCS</div>
<div>10</div> <div>An L-shaped metal tool with a hexagonal end.</div> <div>HEX KEY 1 PC</div>	<div>11</div> <div>A metal bolt with a hexagonal head and a threaded shaft, similar to item 2.</div> <div>Φ6.5mm x 80mm</div> <div>WOOD JOINT CONNECTOR (4mm HEX HEAD) 6 PCS</div>	

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK










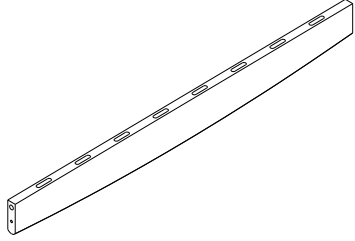
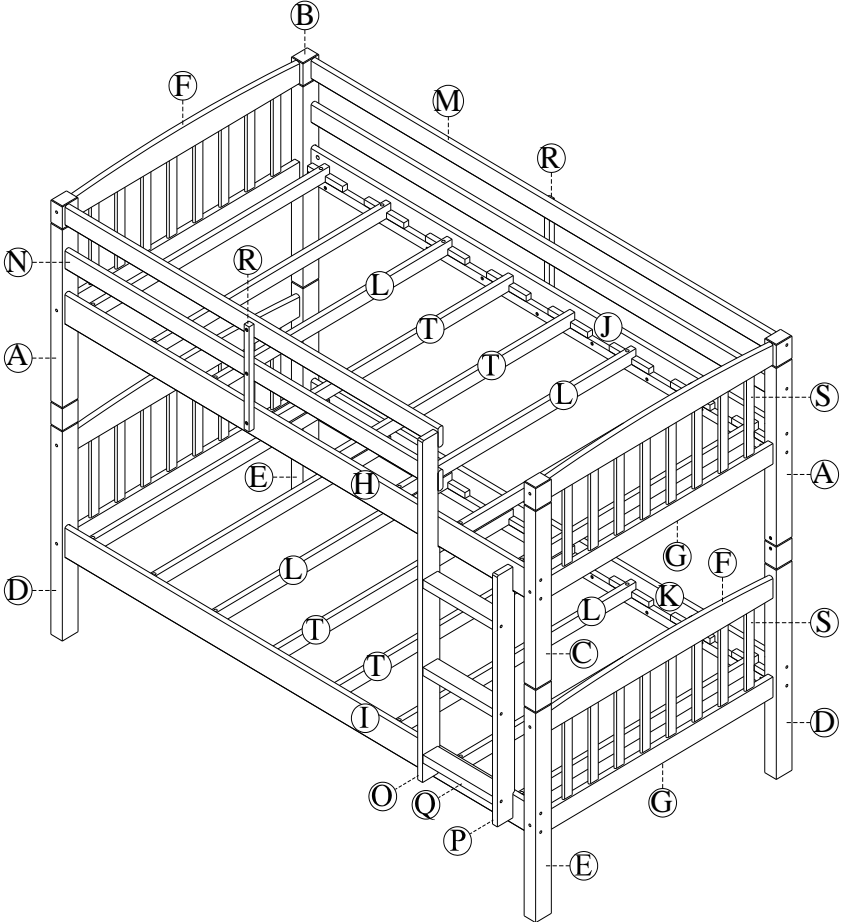



PARTS LIST

<p>A</p> 	<p>B</p> 	<p>C</p> 
<p>TOP POST 2 PCS</p>	<p>TOP POST 1 PC</p>	<p>TOP POST 1 PC</p>
<p>D</p> 	<p>E</p> 	<p>F</p> 
<p>BOTTOM POST 2 PCS</p>	<p>BOTTOM POST 2 PCS</p>	<p>HEADBOARD TOP CROSS 4 PCS</p>
		

BELMONT BUNK BED


DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

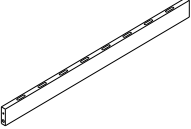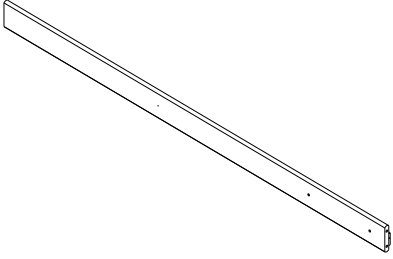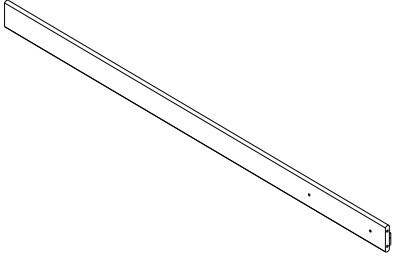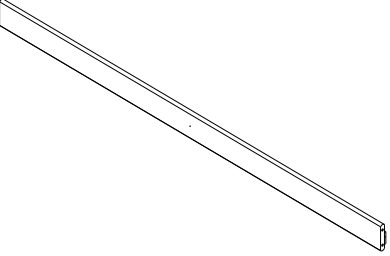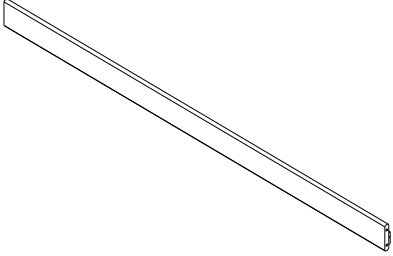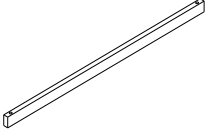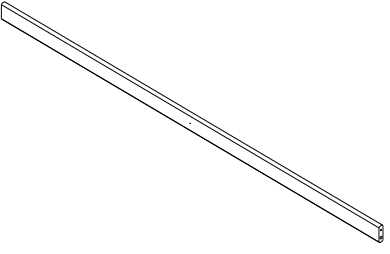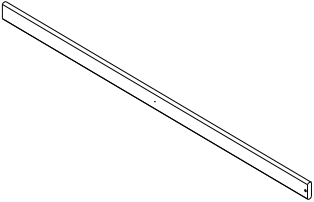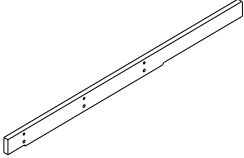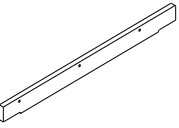PARTS LIST

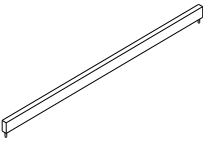G 	H 	I 
HEADBOARD BOTTOM CROSS 4 PCS	TOP SIDE RAIL (WITH 3 HOLES) 1 PC	BOTTOM SIDE RAIL (WITH 2 HOLES) 1 PC
J 	K 	L 
TOP SIDE RAIL (WITH 1 HOLE) 1 PC	BOTTOM SIDE RAIL (WITH NO HOLE) 1 PC	SLAT 12 PCS
M 	N 	O 
LONG GUARDRAIL 2 PCS	SHORT GUARDRAIL 2 PCS	LONG LADDER END 1 PC
P 	Q 	R 
SHORT LADDER END 1 PC	LADDER STEP 3 PCS	GUARDRAIL LEG 2 PCS
S 	T 	
HEADBOARD SLAT 32 PCS	SLAT 4 PCS	

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

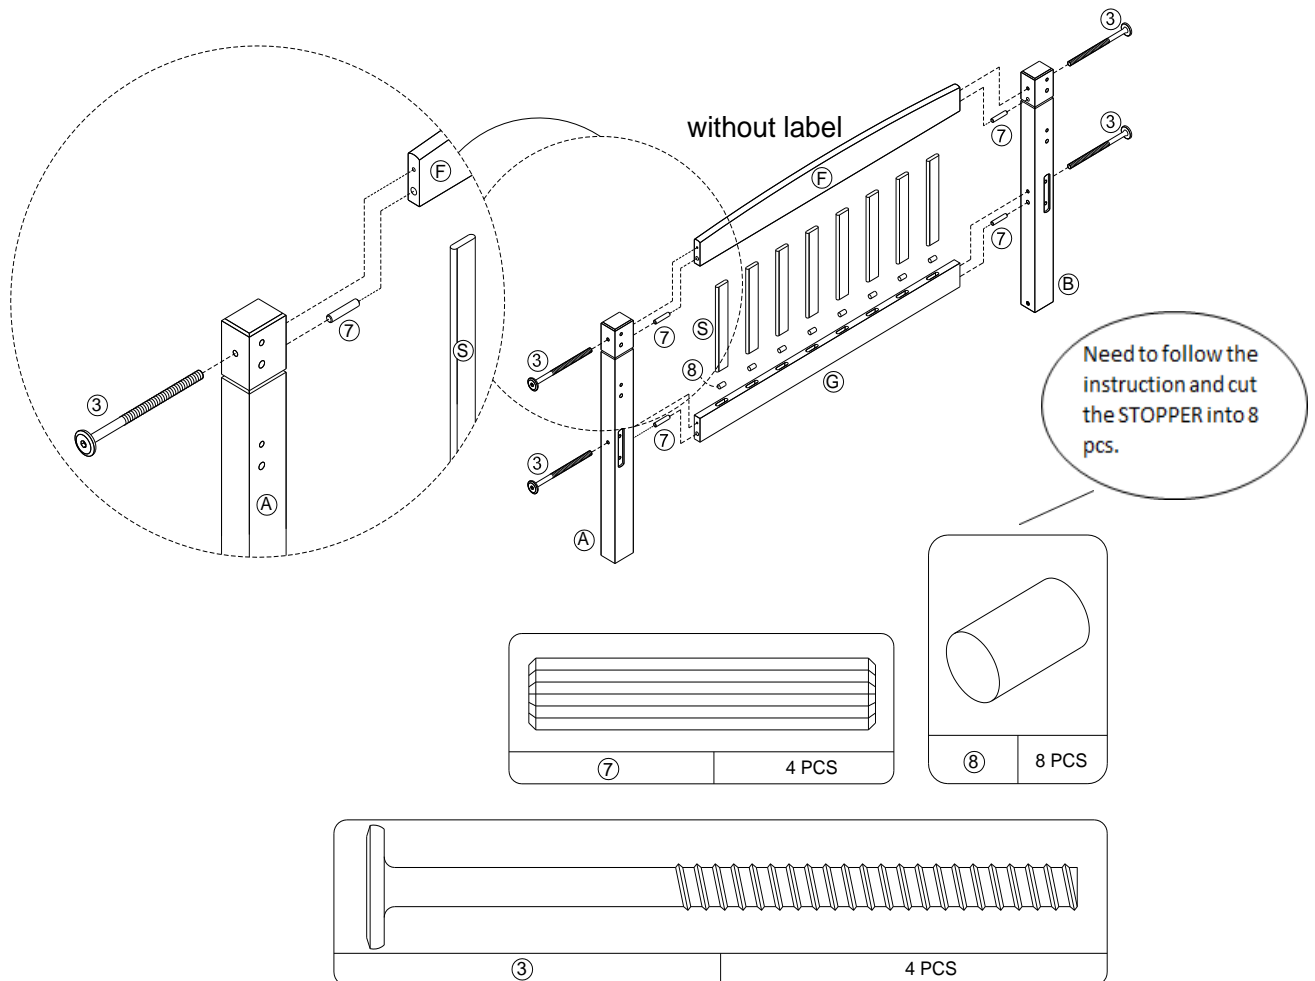

STEP 1

One of the headboard top cross (F) has a label on it, do not use it in this step.


push down until firmly in place. Slide the headboard top cross (F) onto the headboard slats (S). Insert wood dowels (7) into ends of top cross (F) and bottom cross (G). Attach top posts (A & B) using wood joint connectors (3) as shown.

NOTES: Headboard top cross (F) and headboard bottom cross (G) may require that they be pulled closer together or further apart in order to allow wood dowels (7) to align with holes in top posts (A and B).

Insert stoppers (8) and headboard slats (S) into the holes of the headboard bottom cross (G) and

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

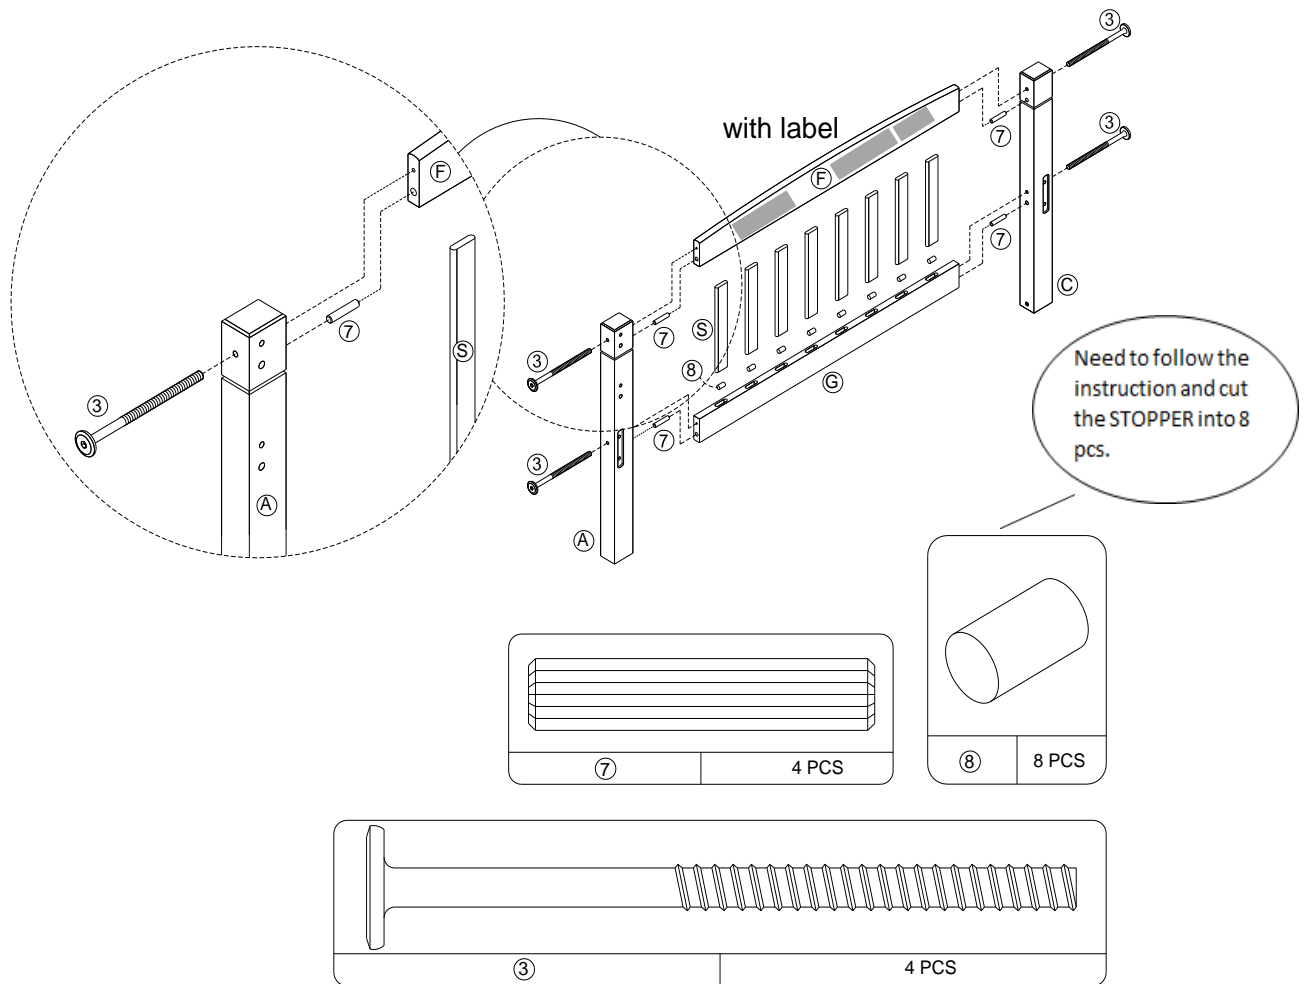

STEP 2


Use the headboard top cross with label (F) in this step.

Insert stoppers (8) and headboard slats (S) into the holes of the headboard bottom cross (G) and push down until firmly in place. Slide the headboard top cross (F) onto the headboard slats (S). Insert wood dowels (7) into ends of top cross (F) and bottom cross (G). Attach top posts (A & C) using wood joint connectors (3) as shown

NOTE: Headboard top cross (F) and headboard bottom cross (G) may require that they are pulled closer together or further apart in order to allow wood dowels (7) to align with holes in top posts (A and C).

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

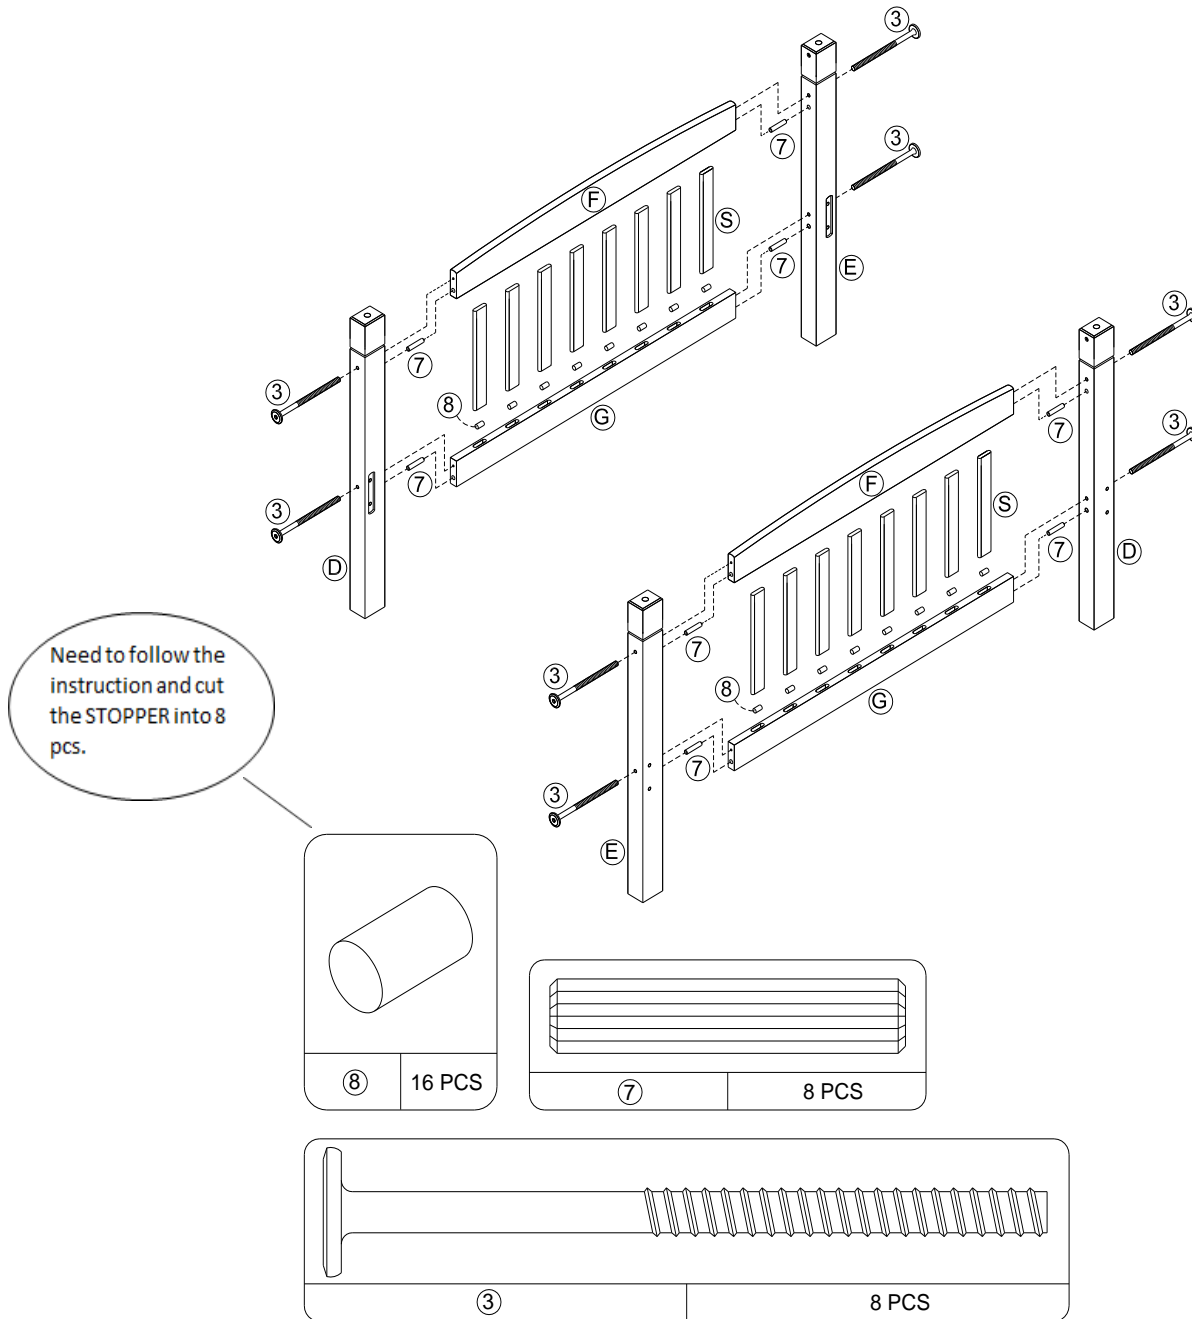




STEP 3

Insert stoppers (8) and headboard slats (S) into each hole in the headboard bottom cross (G) and push them down until firmly in place. Slide headboard top cross (F) onto headboard slats (S). Insert wood dowels (7) into ends of top cross (F) and bottom cross (G). Attach bottom posts (D and E) using wood joint connectors (3) as shown.

Repeat the above step to assemble the remaining headboard.

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

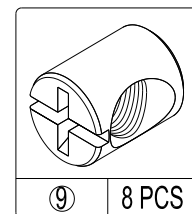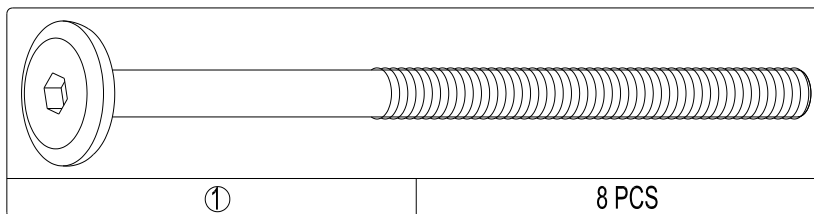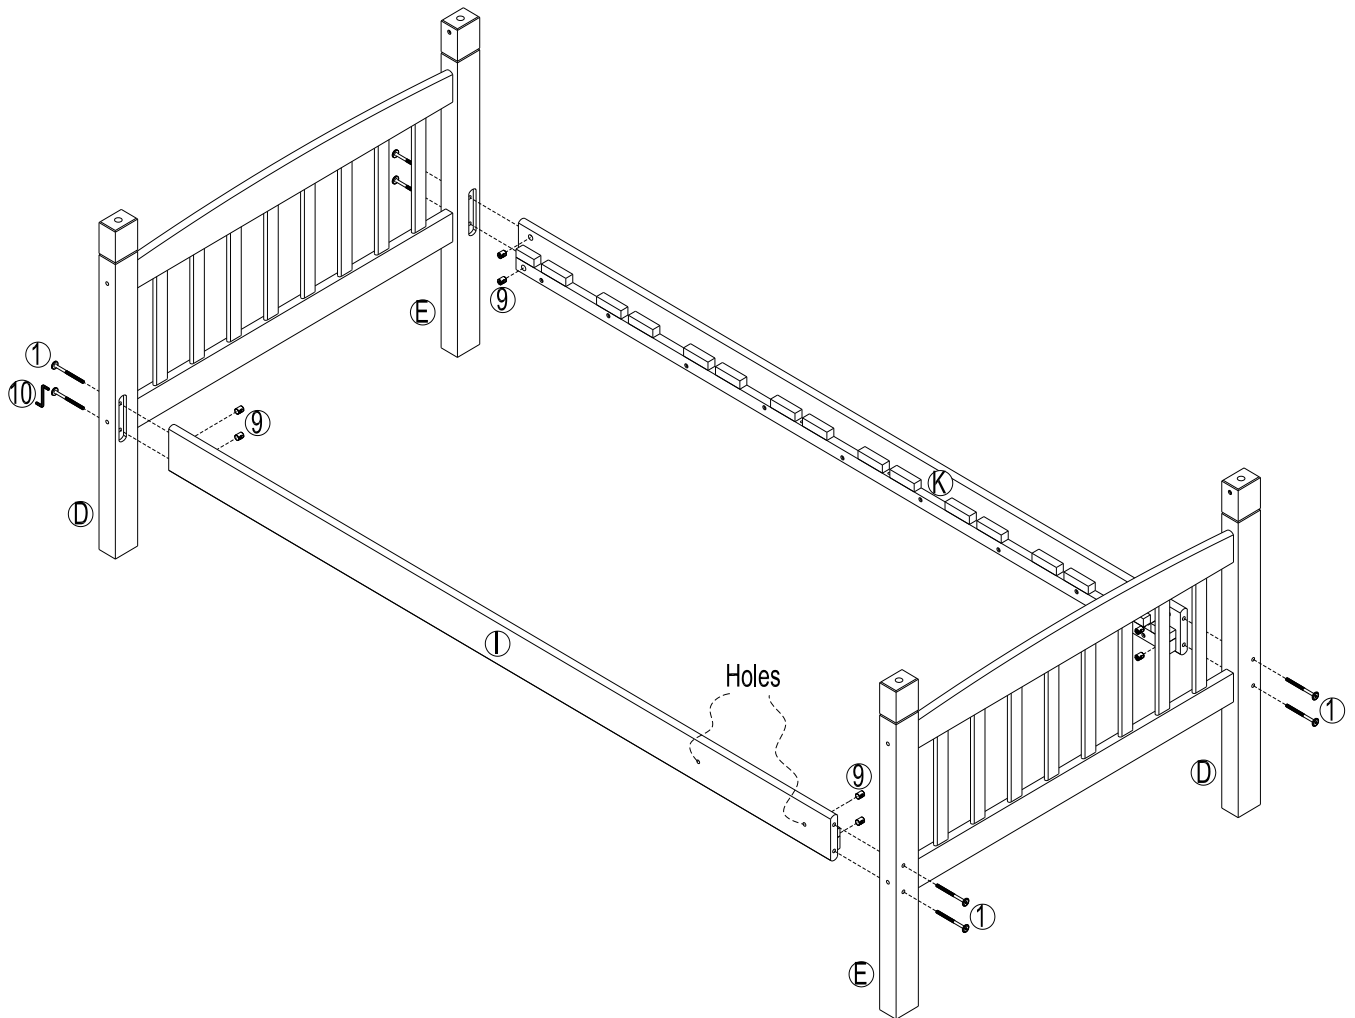






STEP 4

Attach the two headboards with the bottom posts (D and E) to the bottom side rails (I and K) by the joint connectors (1) and barrel nuts (9) as shown. Use hex key (10) to tighten joint connectors.

This is the lower bunk.

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

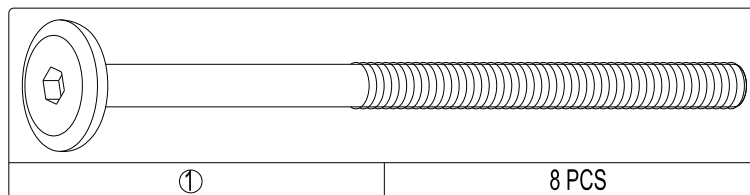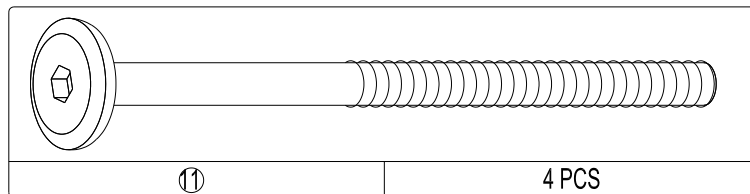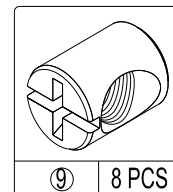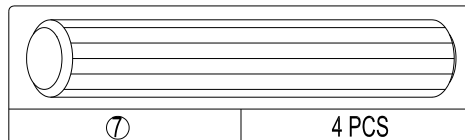
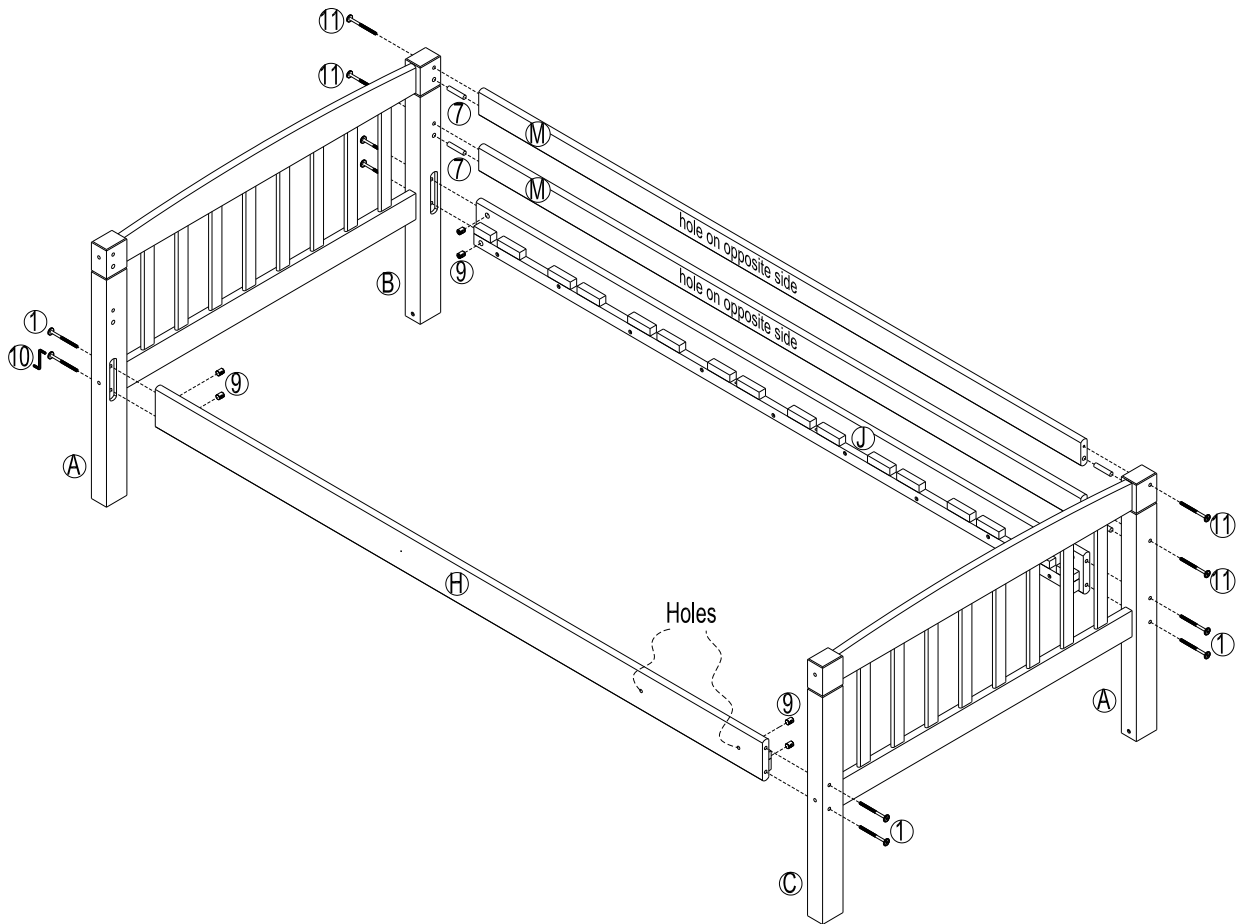


STEP 5

Insert a wood dowel (7) into each end of the long guardrails (M). Attach the two long guardrails (M) and the two top side rails (H and J) to the top posts (A and B) and (A and C) as shown. Use the joint connectors (1) with the barrel nuts (9) to fasten the top side rails (H and J) and use the wood joint connectors (11) to fasten the long guardrails (M). Use hex key (10) to tighten joint connectors.

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

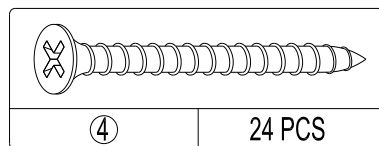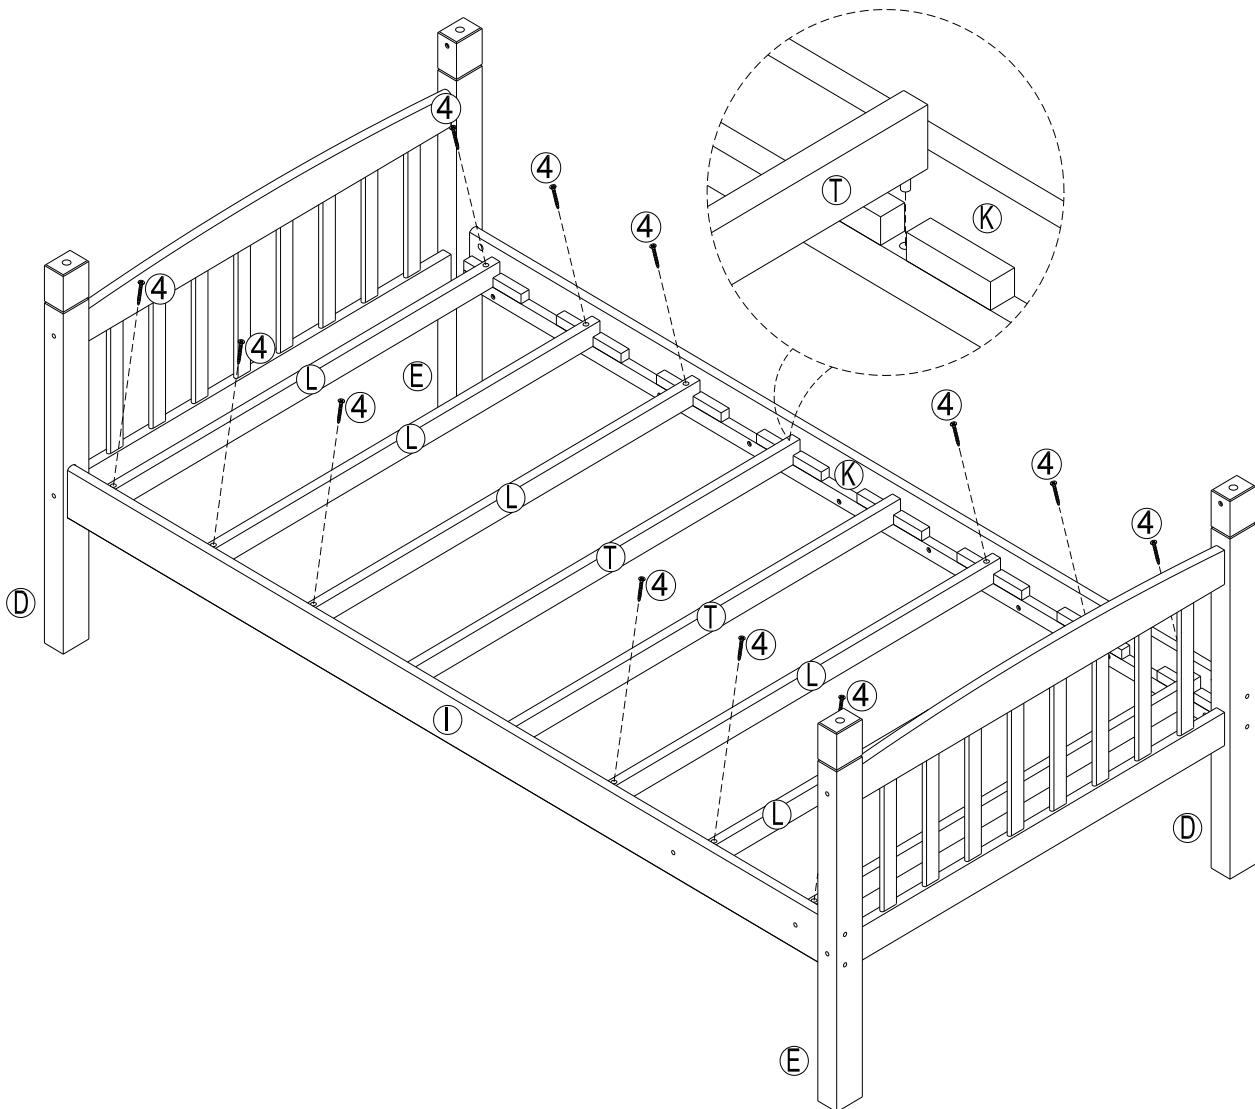

STEP 6

Insert two slats (T) into the center slots of the bottom side rails (I and K) of the bottom bunk as shown.






Insert slats (L) into remaining slots of the bottom side rails (I and K) of the bottom bunk. Attach slats (L) onto the bottom side rails (I and K) with flat head screws (4). Use Phillips screwdriver (not included) to tighten the screws (4).

Repeat this process for the top bunk.

NOTE: If you notice that any of the slats (L) are not perfectly flat, be sure to assemble them so that the slats (L) curves up in the middle and down on the ends.

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

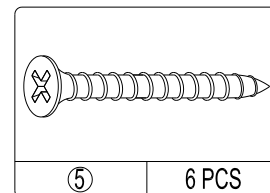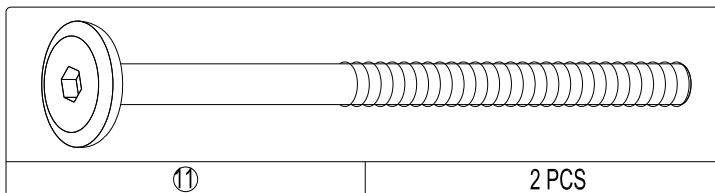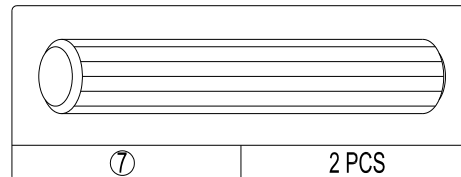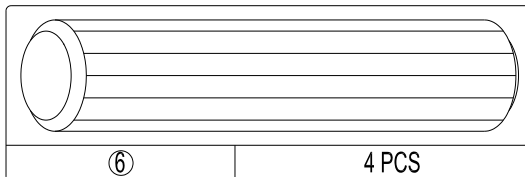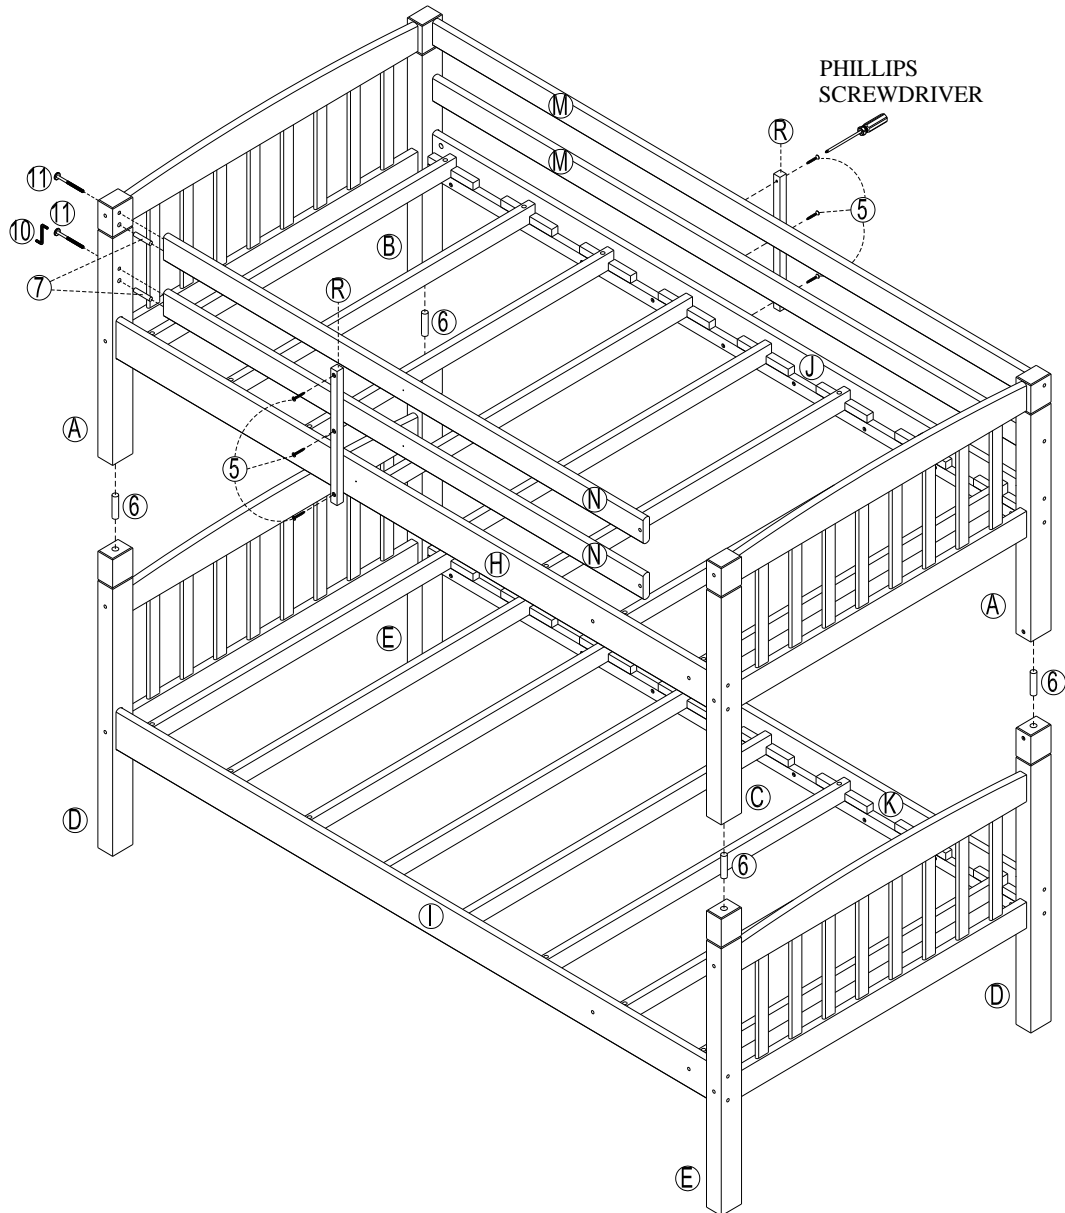

STEP 7


Place four wood dowels (6) into the holes in the bottom posts (D and E). With the help of another person, stack the top bunk onto the bottom bunk.

Insert wood dowels (7) into the holes in the ends of short guardrails (N). Attach short guardrails (N) to top post (A) with wood joint connectors (11). Use hex key (10) to tighten joint connectors.

Attach the guardrail leg (R) to the short guardrails (N) and top side rail (H) with flat head screws (5). Attach the remaining guardrail leg (R) (on the other side of the bed) to the long guardrails (M) and top side rail (J) with flat head screws (5). Use Phillips screwsdriver (not included) to tighten the screws (5).

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

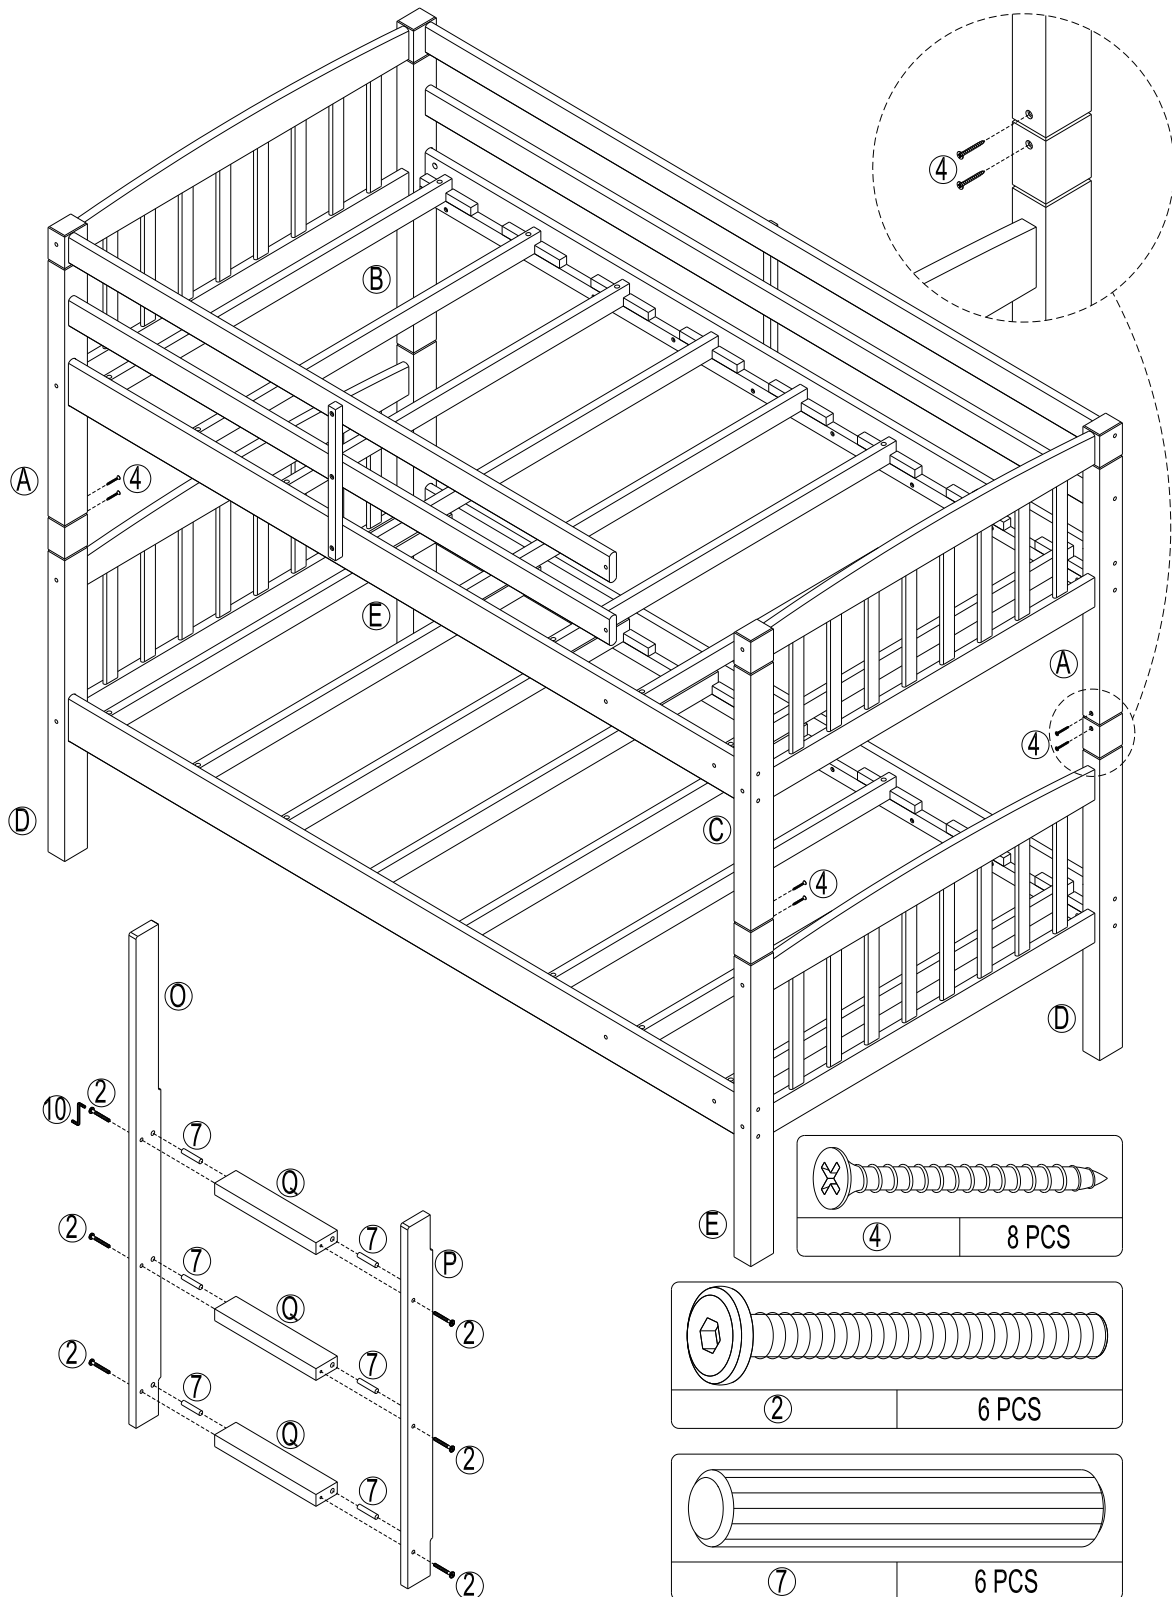

STEP 8


Secure the upper bunk to the lower bunk by screwing the screws (4) into the holes in the top and bottom posts (A, B, C, D & E) as shown.

Assemble the ladder by inserting wood dowels (7) into the end of the ladder steps (Q) and screwing long ladder end (O) and short ladder end (P) to ladder steps (Q) with wood joint connectors (2) as shown. Use hex key (10) to tighten joint connectors.

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

Slats are not shown in illustration for clarity

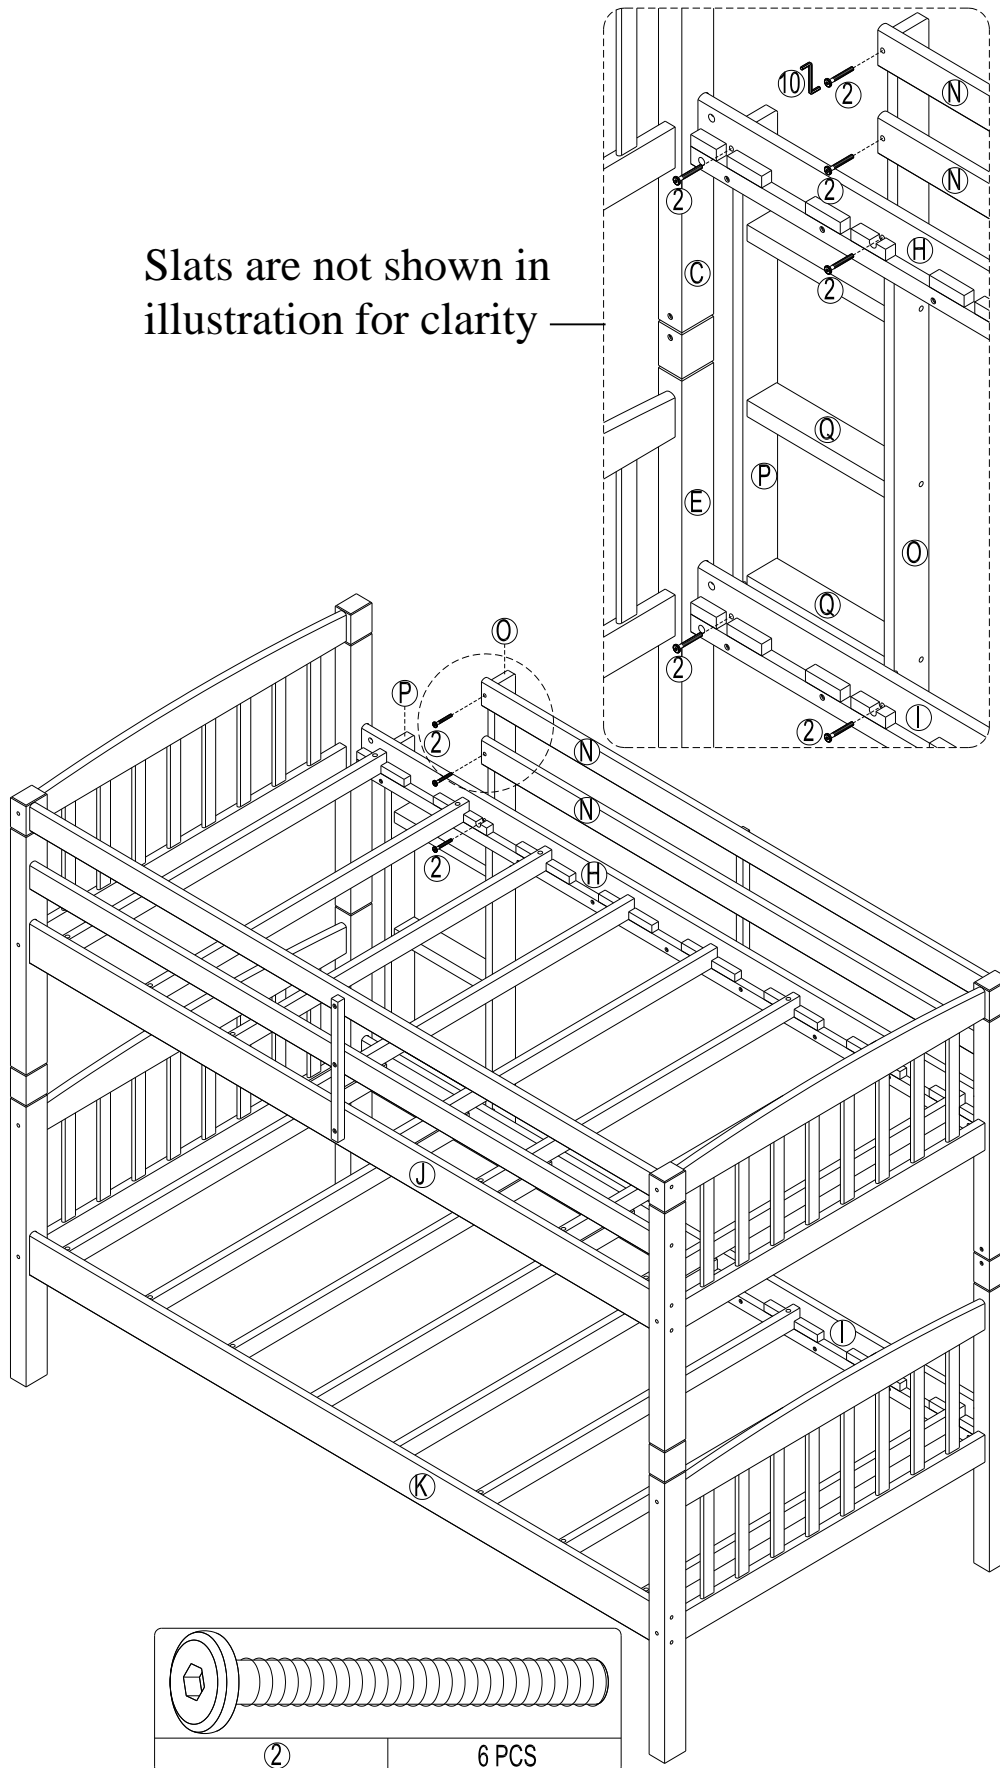

STEP 9




Attach the ladder to the short guardrails (N), the top side rail (H) and bottom side rail (I) with the wood joint connectors (2). Use hex key (10) to tighten joint connectors as shown.

NOTE: If a slat (L) is covering the ladder mounting holes, please remove the slat (L) and reattach after the ladder is attached.

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

Instructions for converting the bunk bed into two single beds

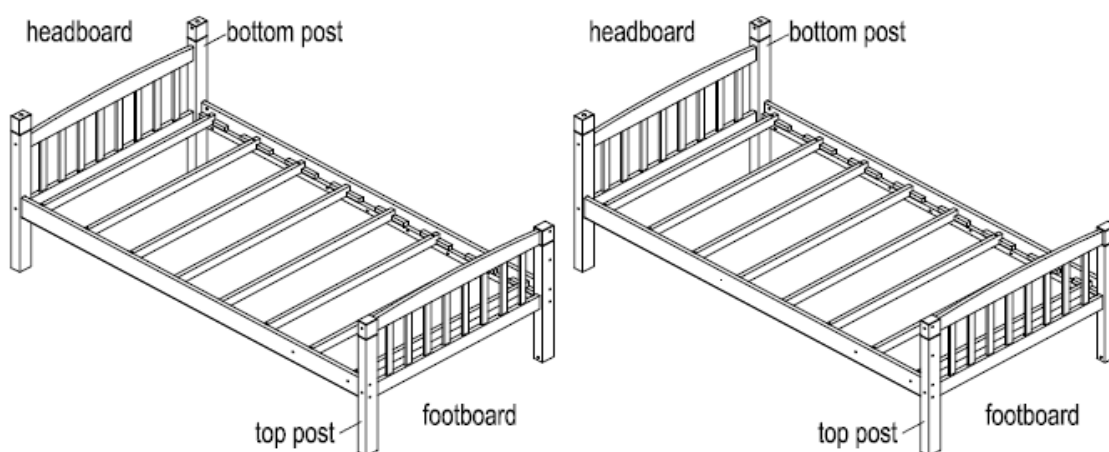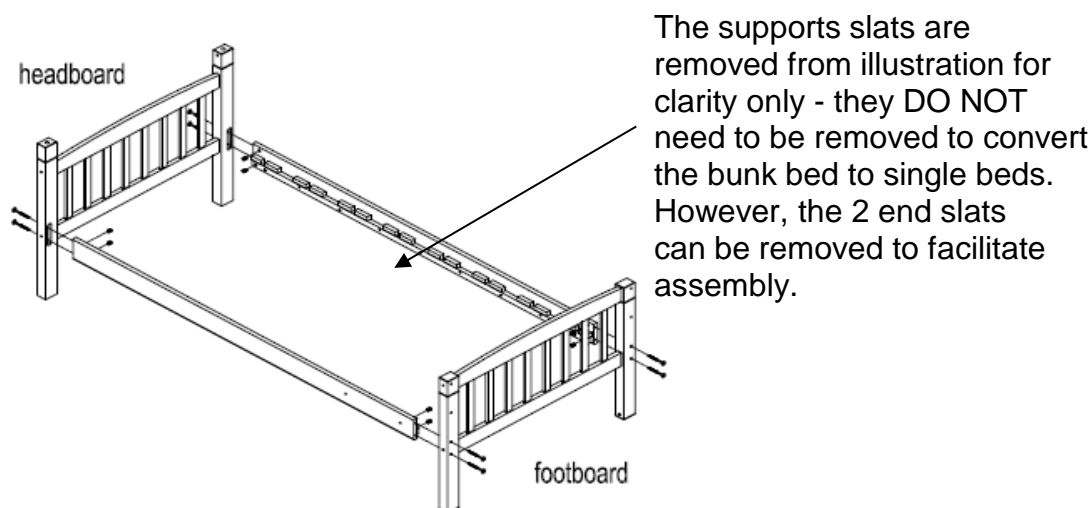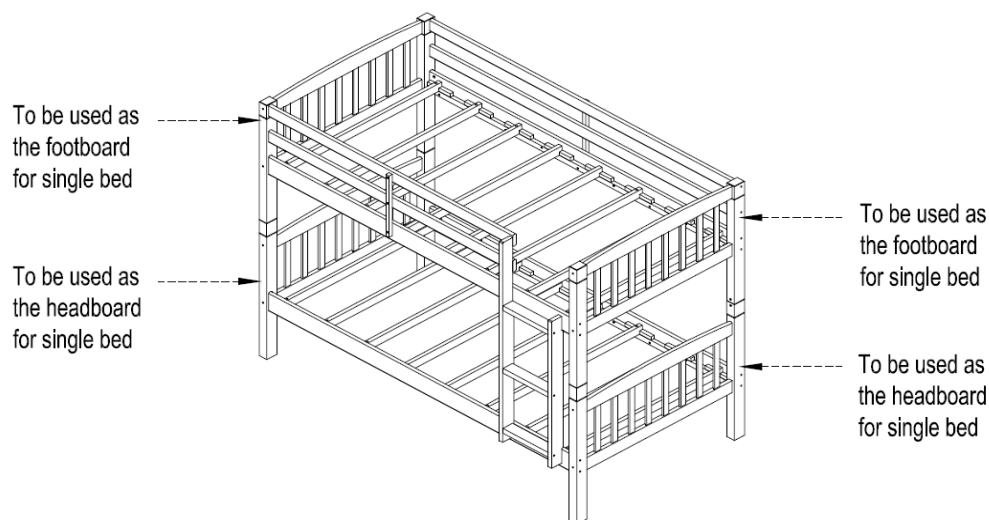

Remove the ladder and all the guardrails.

With the help of another person, remove the top bunk from the lower bunk.

Disassemble the side rails from all headboards (top and lower bunks).

Re-assemble the headboards (with tall posts) and footboards (with short posts) to side rails.


Note: Switching the headboards will allow the two single beds to be identical (headboards have taller posts and footboards have shorter posts).

BELMONT BUNK BED

DA1026P-18 PINE / DA1026W-18 WHITE / DA1026WN-18 WALNUT / DA1026B-18 BLACK

**DO NOT ALLOW HORSEPLAY ON
OR UNDER THE BED AND
PROHIBIT JUMPING ON THE BED.**

**DO NOT ALLOW CHILDREN
UNDER 6 YEARS OF AGE
TO USE THE UPPER BUNK.
BED IS DESIGNED FOR
CHILDREN RANGING FROM
6 YEARS OF AGE TO
YOUNG TEENAGERS.**

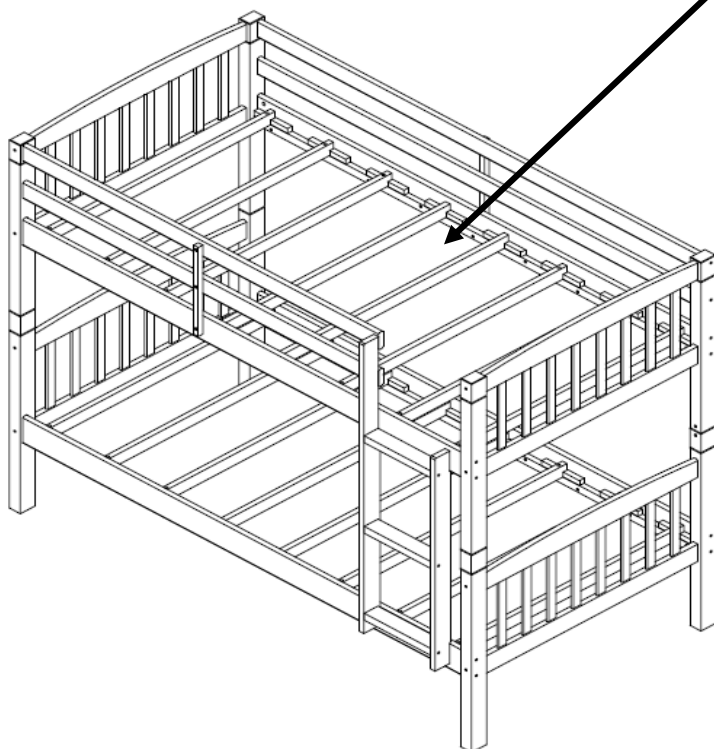

**USE ONLY COIL SPRING
MATTRESSES ON BOTH THE
UPPER AND LOWER BUNKS.
FAILURE TO DO SO CAN
RESULT IN INJURY.**

**MAXIMUM WEIGHT
CAPACITY: 165 LBS
(75 KGS) PER LEVEL**

DO NOT RETURN PRODUCT TO THE RETAILER.

If a part is missing or damaged, contact
our customer service department. We
will replace the part **FREE** of charge.



**Tel # : 1-800-295-1980
E-Mail: das@dorel.com**