
4500015WCOM 2 Door Storage Cabinet

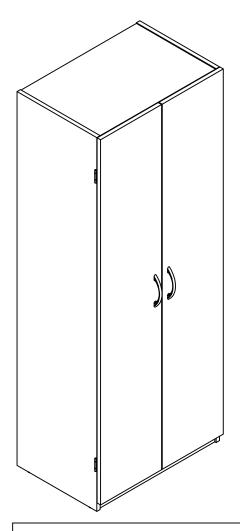

Date of Purchase ____/ ___/ ____

B344500015COM0E



Do Not Return This Product!

Contact our customer service team for help first.

Call: 1-800-489-3351 (toll free) **Visit:** www.ameriwoodhome.com

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Secure Your Furniture

Keep your home and family safe with the wall anchor kit that is included with the product.

Serious or fatal crushing injuries can occur from tipping furniture.

WARNING: Manufacturer assumes no liability for improper installation or excessive loads placed on screws or bracket. This wall anchor is not a substitute for proper adult supervision.



Follow Ameriwood Home












Contact Us!

Do NOT return this product!

Contact our friendly customer service team first for help.

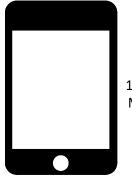

Call us! 1-800-489-3351 Monday-Friday



Visit ameriwoodhome.com to view the limited warranty valid in the U.S. and Canada.

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.














Quick Assembly Tip

Before You Start


- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware Parts are labeled on the surface or edge of the part
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process.

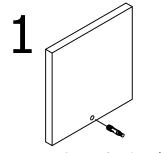

Press CAM BOLT into hole.

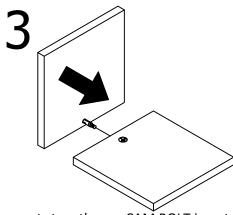


Press parts together so CAM BOLT inserts into edge hole.

Arrow to point towards end hole in edge of part.

End hole

Press CAM LOCK into hole.

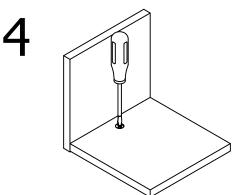

Using a screwdriver, turn the CAM LOCK clockwise to lock the CAM LOCK and CAM BOLT into their holes and fastening parts together.












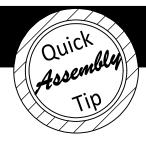



Before You Start

Please Note:

You may need to lightly tap the wood dowels with a hammer into the holes during your assembly process.



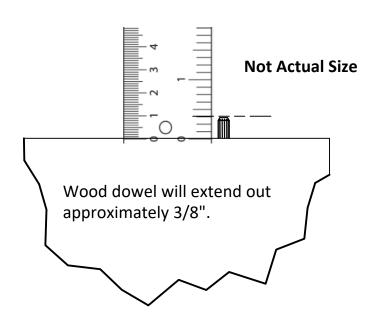

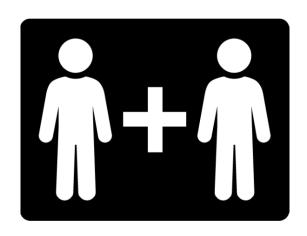

2 PEOPLE NEEDED FOR ASSEMBLY CAUTION: Failure to use 2 people for assembly could result in unit damage or personal injury










Board Identification


Not actual size

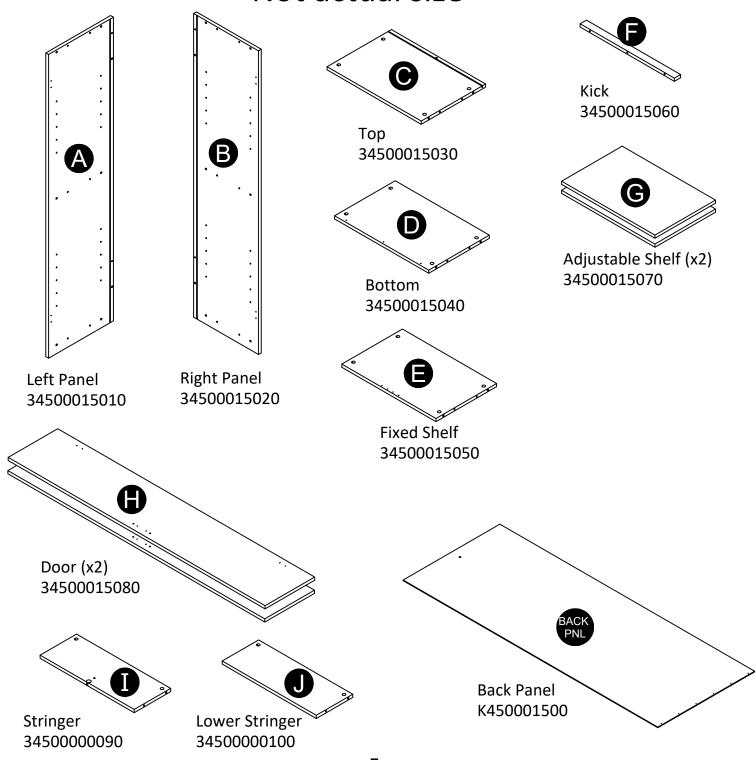



Board Identification

Not Actual Size

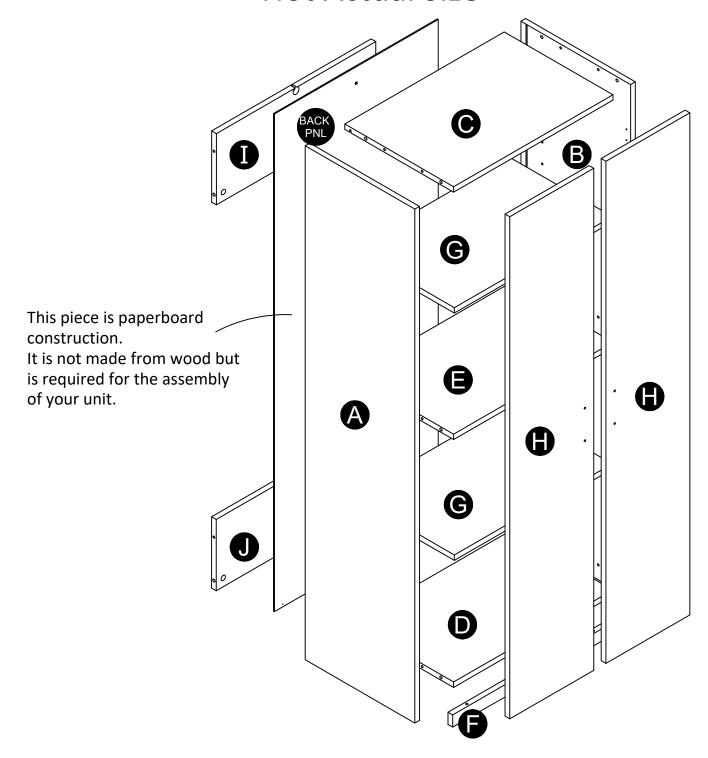







Part List


Actual Size




(x16)#A22700 cam lock



(x16)#A22710 cam bolt



(x16)#A21670 wood dowel




(x3)#A13410 1-3/4" screw



(x1)#A22770 quickloc



(x6)#A21110 nail



(x6) #A54710 wedge




(x4)#A43200 tack glide




(x16)#A12120 7/16" screw




(x4) #A12810 1" screw



(x8)#A80490 shelf gripper




#A13950 3-1/2" screw




(x1)#A20940 anchor




(x8) #A245015 cam cover

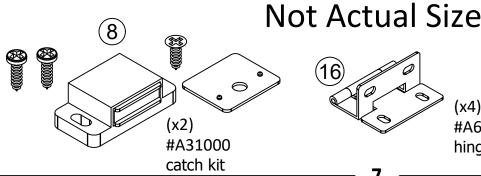



(x4) #A60015 hinge

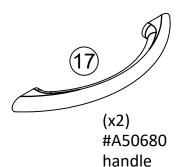















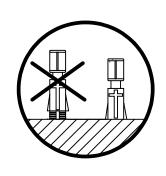


Insert eight cam bolts (2) into the Left Panel (A).

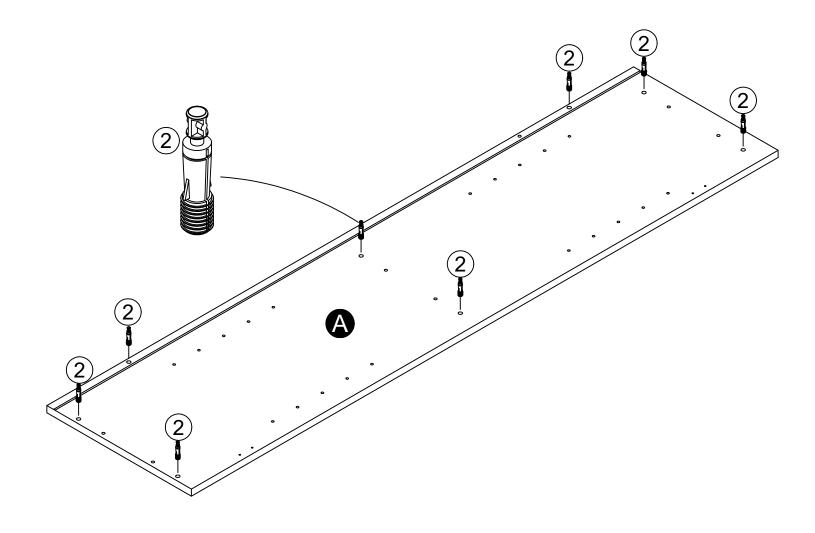









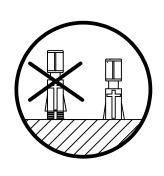


Insert eight cam bolts (2) into the Right Panel (B).

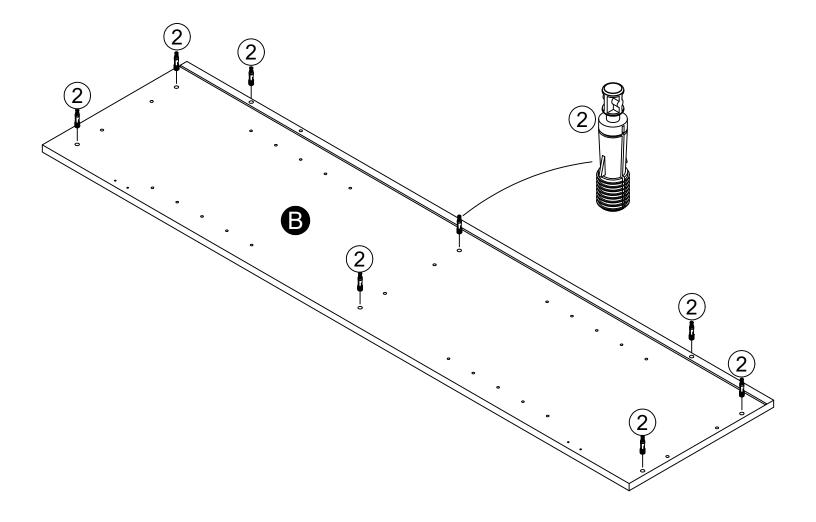




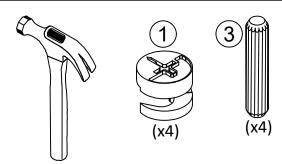

Dowels extend out 3/8". For more details, please see page 4

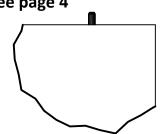


Insert four cam locks (1) and four wood dowels (3) into the Top (C).

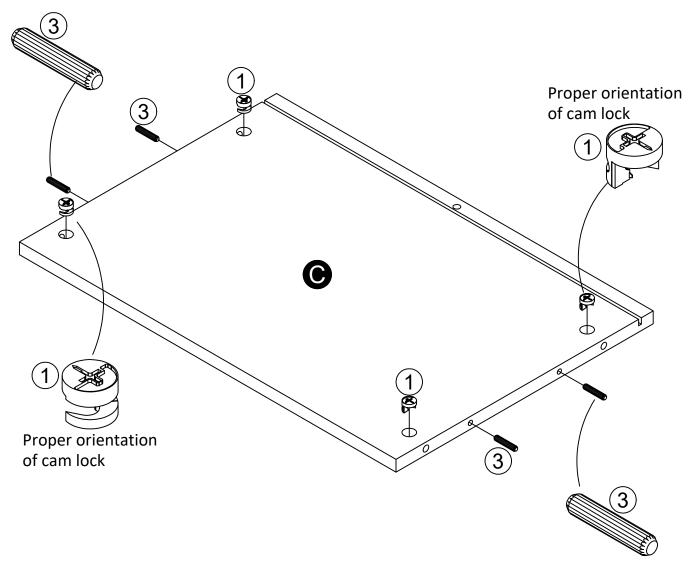









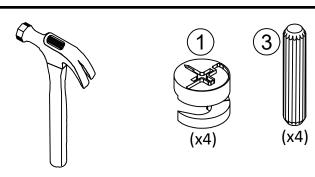

Dowels extend out 3/8". For more details, please see page 4

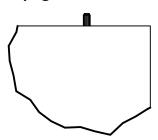

Insert four cam locks (1) and four wood dowels (3) into the Bottom (D).

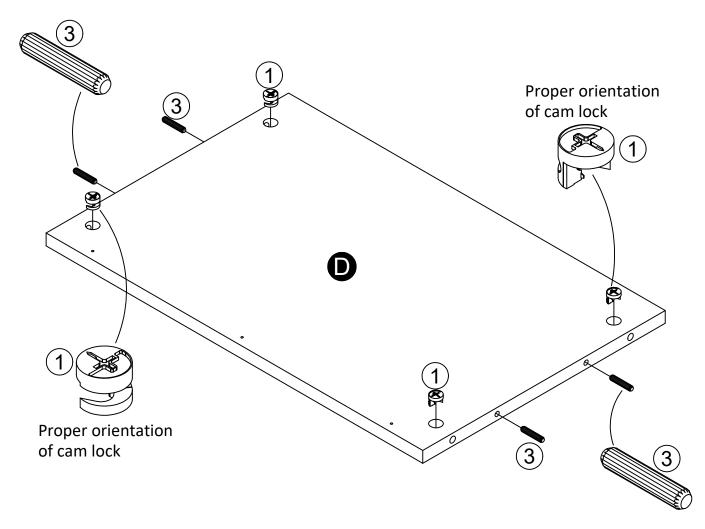












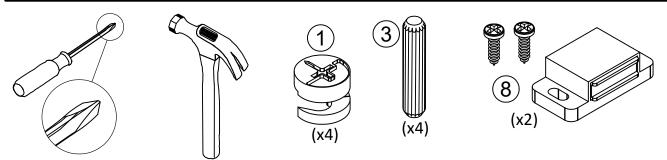


Insert four cam locks (1), four wood dowels (3) and two catch kits (8) into the Fixed Shelf (E).

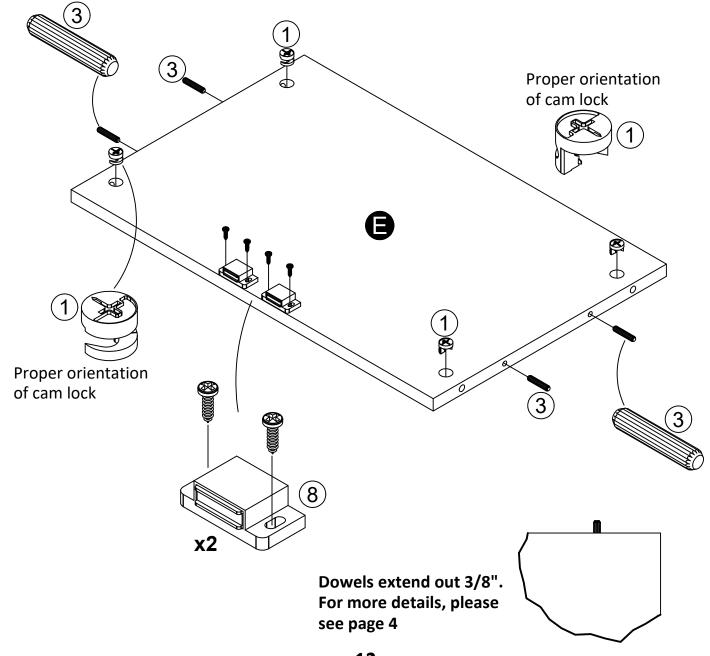




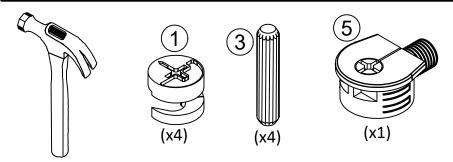


Insert four cam locks (1), (two on the Stringer (I) and two on the Lower Stringer (J), four wood dowels (3), (two on the Stringer (I) and two on the Lower Stringer (J) and one Quickloc (5) on the Stringer.

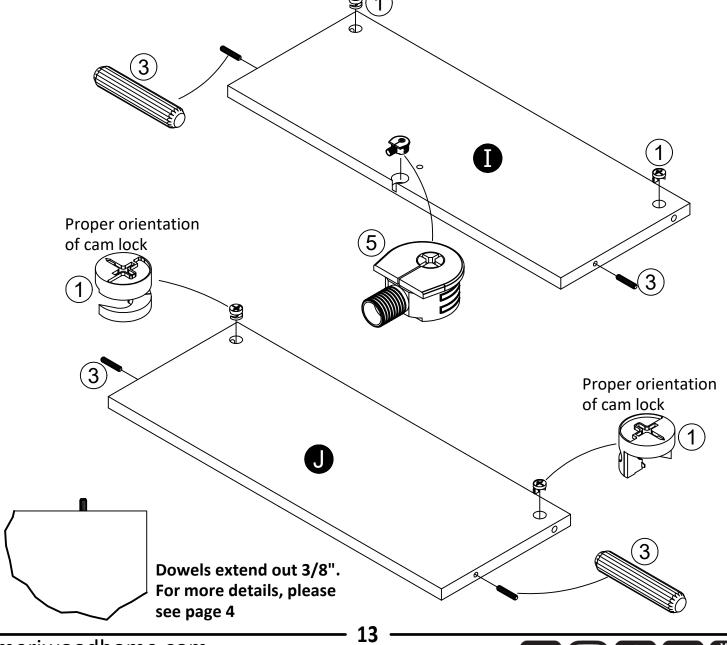



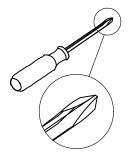


Position the Sringer (I) with the quickloc (5) so the quickloc engage the hole in the Top (C).

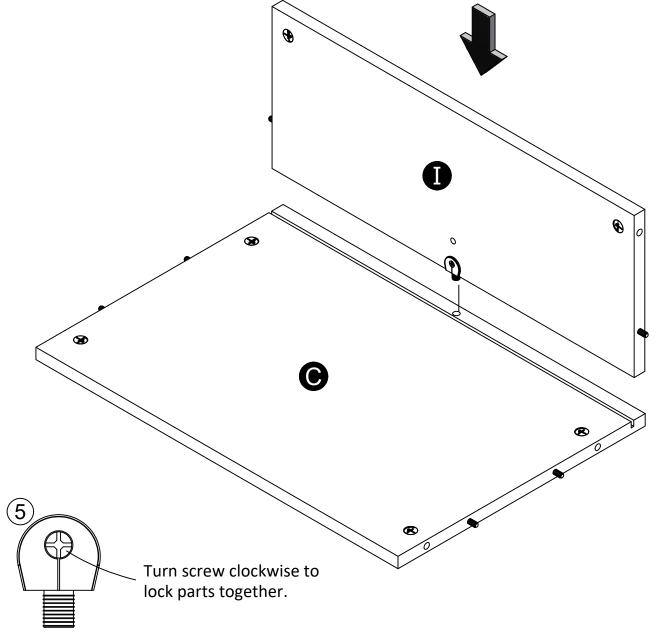








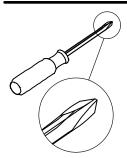


Engage the cam bolts (2) in the Left Panel (A) into the cam locks (1) in the Top (C), Stringer (I), Fixed Shelf (E), Bottom (D) and Lower Stringer (J).

Turn clockwise to lock in place.


Finished Edges Face Up

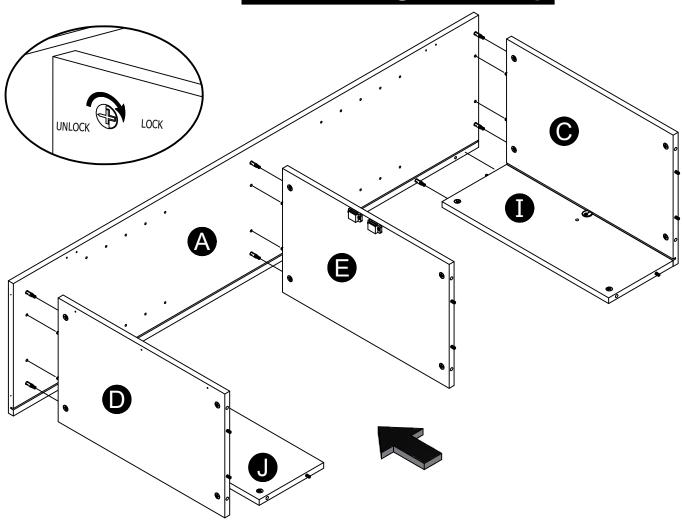



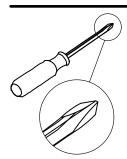


Engage the cam bolts (2) in the Right Panel (B) into the cam locks (1) in the Top (C), Stringer (I), Fixed Shelf (E), Bottom (D) and Lower Stringer (J). Turn clockwise to lock in place.

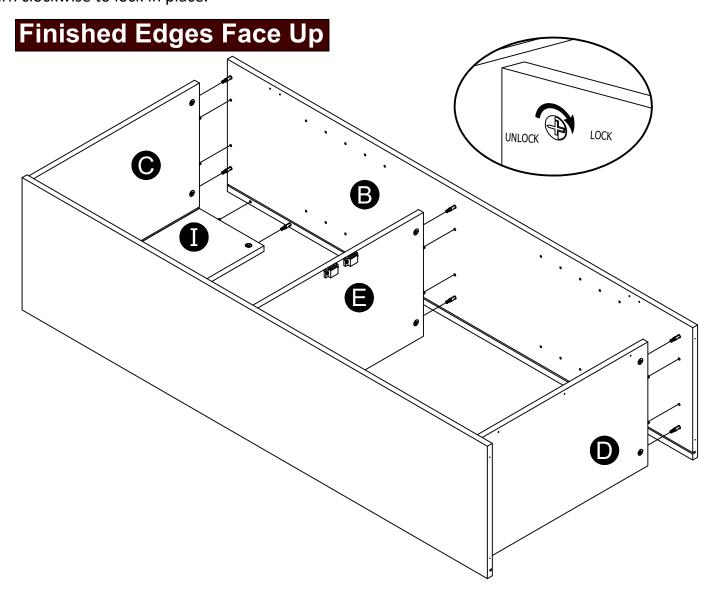

16






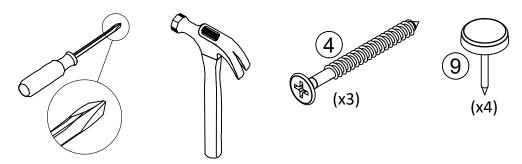

Place the unit on its front.


Insert three screws (4) through the Kick (F) and into the holes in the Bottom (D). Using a hammer, attach two Tack Glides (9) to the Left Panel (A) and two to the Right Panel (B).

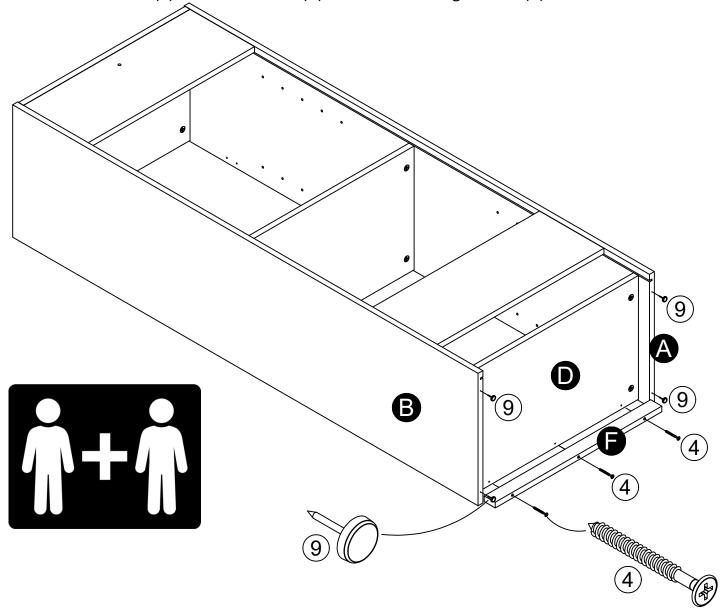



IMPORTANT! THE BACK PANEL IS A STRUCTURAL PART OF THIS UNIT AND MUST BE INSTALLED PROPERLY.

Unfold the back panel. With the finished surface facing down, slide the back panel into the groove in the Left and Right Panels (A&B) seating into the groove in the Top (C). Note, the back panel will be under the Stringer (I) and Lower Stringer (J).

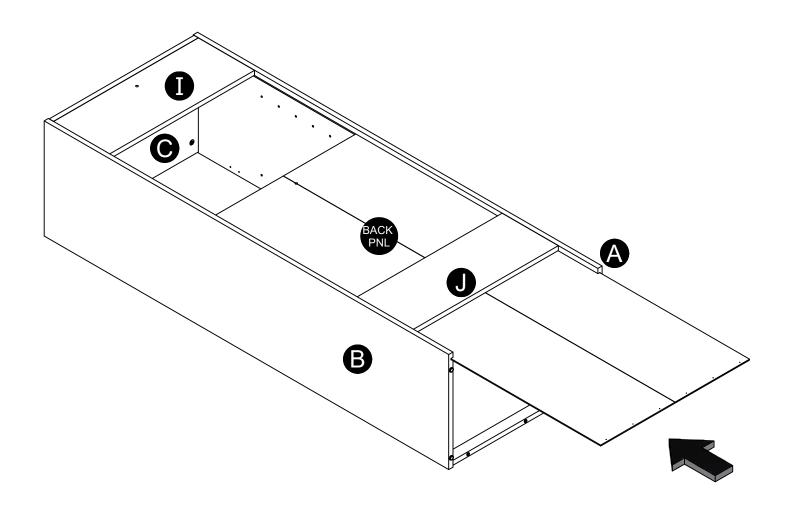











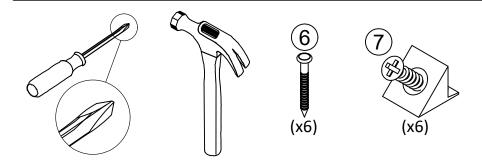

Attach the bottom Back Panel to back edge of Bottom (D) using six nails (6). Position the six wedges (7) on the Back Panels and slide the lip into the groove. Tighten screw to lock in place.

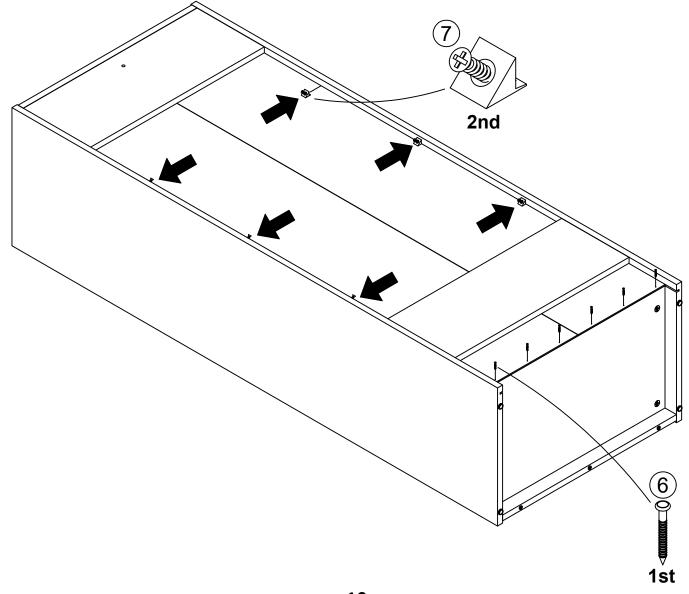











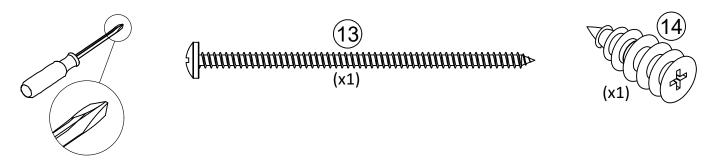

Position the cabinet where you want it. Mark on the wall where the hole in the top of the back panel is. Insert the anchor in the wall where the mark is. Using the screw, attach the cabinet to the anchor.

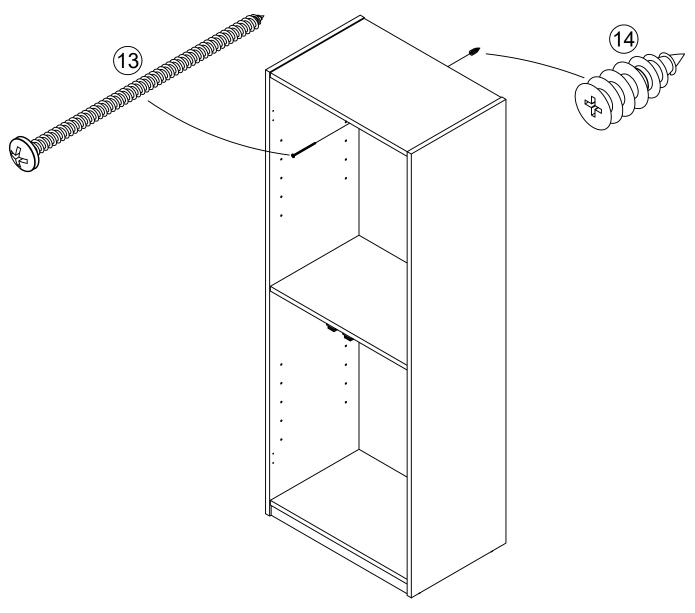












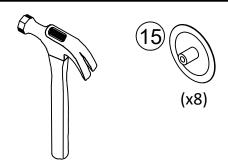

Insert the cam covers (15) into the cam locks (1) in both the Top (C) and Fixed Shelf (E). You'll need to tap the cam covers (15) lightly to securely fasten to the cam locks.

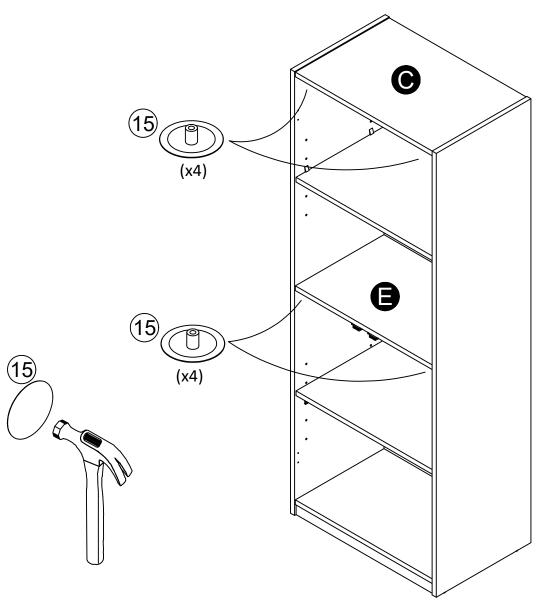







Insert two shelf grippers (12) into upper section of Left Panel (A) at the desired level. Repeat for the upper section of Right Panel (B) at the same desired level. Then repeat for the lower section of Left Panel (A) and the lower section of Right Panel (B). 12 **G** finished edge out **12** (12)**G**



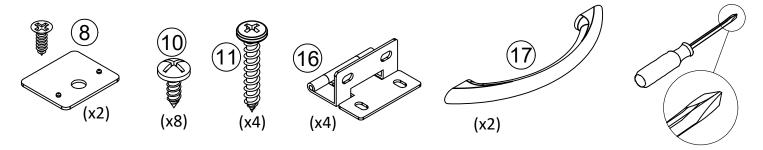


For both Doors, attach the handle using two screws (11), two hinges using four screws (10) and one strike plate (8).

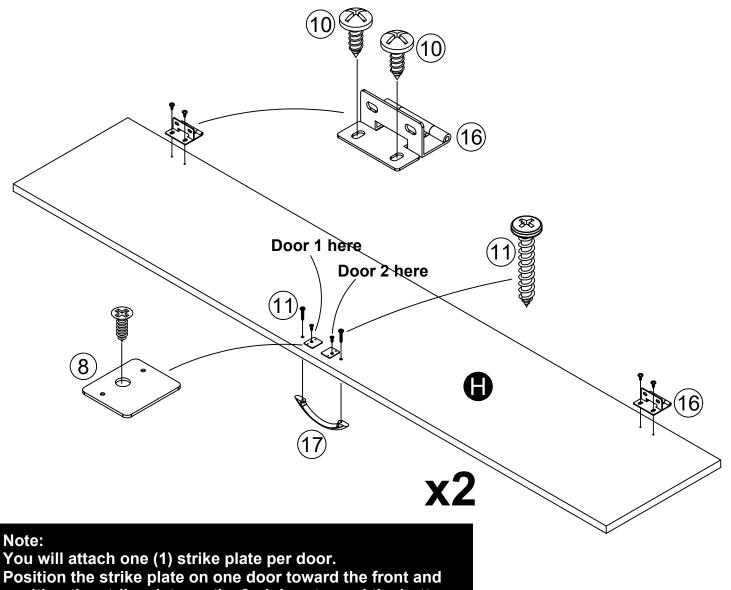


Position the strike plate on one door toward the front and position the strike plate on the 2nd door toward the bottom.



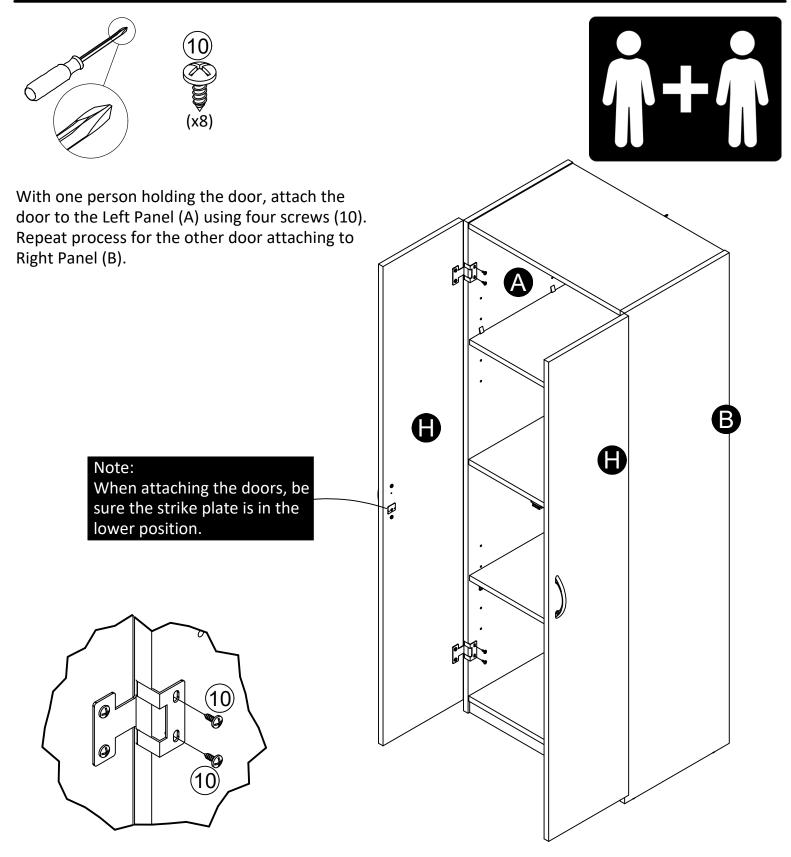




Door Adjustment

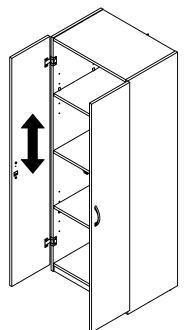


To adjust the vertical height:

Loosen the screws "A" on both hinges. They are in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

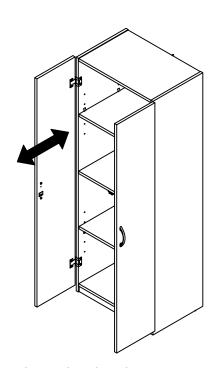

To adjust the depth:

Loosen the screw "B" and adjust door.

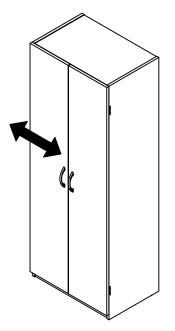

To adjust side to side:

Loosen the screw "B" on both hinges. They are in slotted holes which allows you to adjust sideways by a few mm. Then tighten back up.










meriwood HOME

Maximum Loads

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

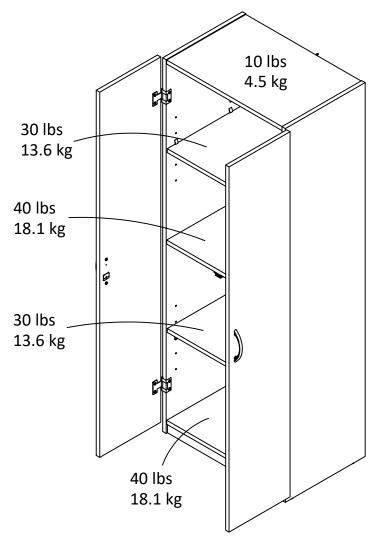

Warning: Risk of injury to persons - do not place a television on this furniture. This furniture is not approved for use with a television.

Certificate of Conformity

- 1. This certificate applies to the Dorel Home Furnishings, Inc. product identified by this instruction manual.
- 2. This certificate applies to compliance of this product with the CPSC Ban on Lead-Containing Paint (16 CFR 1303).
- 3. This product is distributed by: Dorel Home Furnishings, Inc.

410 East First Street South Wright City, MO 63390 636-745-3351

- 4. Site of Manufacture: Cornwall, ON
- ${\bf 5.}\ See\ front\ page\ of\ instruction\ manual\ for\ date\ of\ manufacture.$





Register your product to receive the following:



- * New trend details sneak peek on what's new
- * Surveys have a voice within our community
- * Exclusive deals and discount codes
- * Quick and easy replacement part service

To register your product, visit ameriwoodhome.com

5 Star Rating



Visit your local retailer's website, rate your purchased product and leave us some feedback!

We would like to extend a big "Thank You" to all of our customers for taking the time to assemble this Ameriwood Home product, and to give us your valuable feedback.

